



HOW TO ASSEMBLE A ZONEPRO® SINGLE-UNIT ROLLING STANCHION



STEP 1. Attach wheels to base using 2x 13mm sockets.




STEP 2. Place ZonePro® unit inside cup at bottom.



STEP 3. Place handle with hole over the top of ZonePro® unit.



STEP 4. Align bolt holes to base.

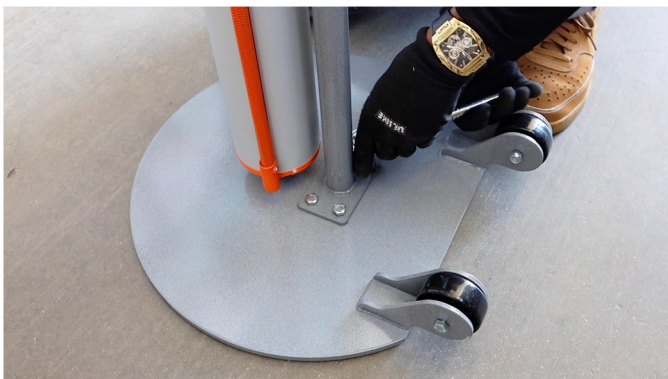

STEP 5. Use 13mm socket and ratchet to tighten handle to base.

For sales contact: Sales@zonepro.com
For orders contact: Orders@zonepro.com
(989) ZONE-PRO | www.zonepro.com



SCAN CODE TO VIEW
A HOW-TO VIDEO