## Spokeback Chair







### NOTES:

- 1. Inspect all pieces for damage before assembly. Do not assemble if any pieces are broken or damaged. Ensure you have all required pieces before assembly.
- 2. Power drill is optional for assembly.
- 3. There are two options for assembly, please reference both steps for your preference.

## STEP 1

**Option 1:** Place the chair frame (A) on its back. Center cushion (B) on the frame with four screw holes, push the cushion against frame, and ensure front of cushion is parallel to the front of the frame. **Option 2:** Place seat (B) upside down on a flat surface, preferably a table. Align chair frame (A) on top of cushion (B). Center cushion with four screw holes on frame, push cushion against the back of the frame, and ensure front of cushion is parallel to the front of the frame.

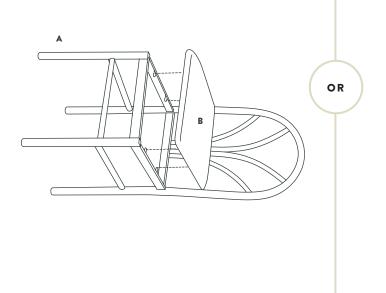

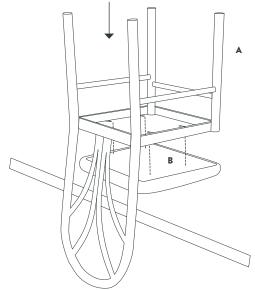

# Spokeback Chair



## STEP 2


Attach cushion (B) to frame (A) with four screws (C) using a screwdriver or powerdrill.

C

A

### STEP 3

Ensure all screws are tightened fully. Stand chair upright for usage.

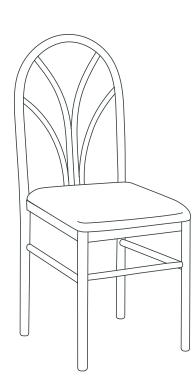

6,

0 -