


3 Shelf Stainless Steel

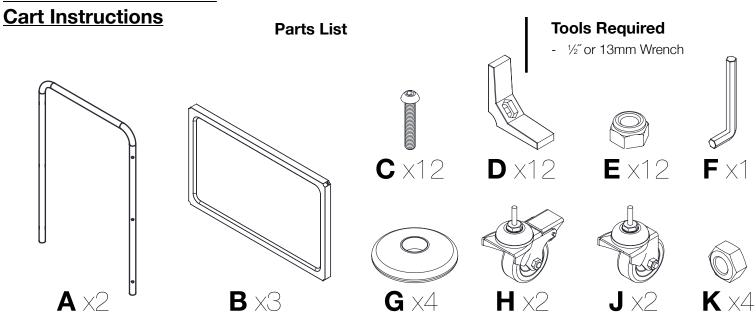

- Using Allen wrench **F** and a ½" or 13mm Wrench, attach the top shelf to the tube frames with 4 screws **C**, 4 corner brackets **D** and 4 locking nuts **E**.
- Repeat Step 1 for the Middle and Bottom shelves

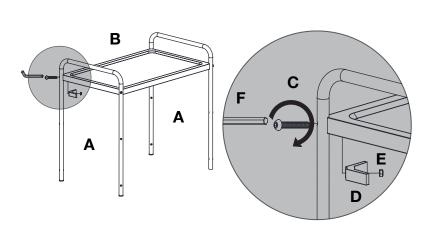

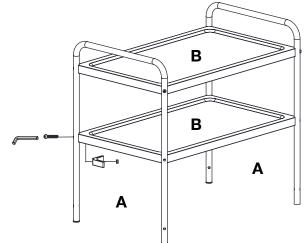

- Thread the adjustment nut **K** on casters **H** & **J** until tight. Push the plastic bumper **G** onto frame **A**, and thread the casters **H** & **J** to frame **A**. Secure with Wrench.
- Place the cart on a level surface and tighten all of the hardware using the Allen wrench and a ½" or 13mm Wrench.

