

#### Rubbermaid Commercial Products Inc.

# 6143, 6144, 6145 & 6146 Step-On Can Assembly & Cleaning Instructions

Our Step-On Containers meet Factory Mutual System's stringent standards for fire safety. Under normal use with the lid shut against the container base; flames will be extinguished. **Warning**: Do not overfill container or liner forcing lid ajar from base. Empty contents daily.

## Step 1 Removing and Attaching the Lid


#### **Lid Removal**

Close lid and turn product up-side down. Rotate each pin and position slot towards you. With 3/8" wide flat blade screw driver positioned within small base rectangle, insert blade into pin slot and twist until pin breaks. Push broken pieces from holes. Figure 1-1.



# Step 2 Pedal-Lifter to Lid Attachment

- 1. Position lifter hooks facing down as shown in Fig. 2-1 and insert through slots in rear of pedal.
- 2. Rotate base away from floor as shown in Fig. 2-2 and slide top of lifter in slot of base container. See Figure 2-3.

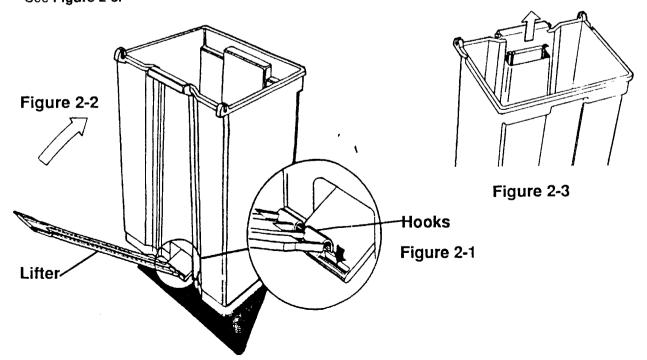

## Step 3 Lifter to Lid Attachment

1. Press pedal to raise pedal-lifter.


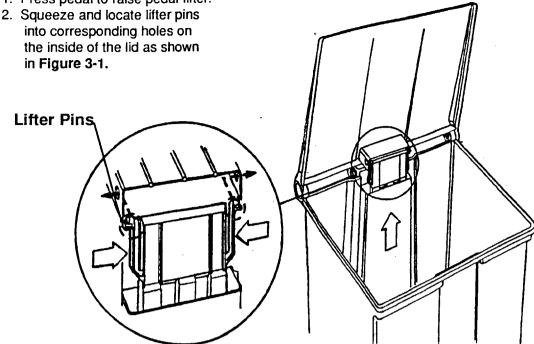


Figure 3-1

# Step 4 Trashbag Installation

Place bag bottom inside base and stretch bag opening over the front and side rim surfaces. Tuck bag over rim side hooks to force bag back edge into a straight line at back side of container. Use polyliner #5009 for model numbers 6145 and 6146; polyliner 5012 for model numbers 6143 and 6144.

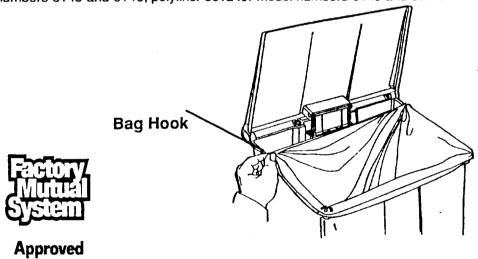

## Cleaning Procedures

Your new Step-On Container should require no maintenance other than timely cleaning with warm water and soap. Periodically remove the rigid liner (optional) and wipe all parts with your favorite germicidal solution. Stubborn or sticky substances may be removed using many popular detergents available for this purpose. The complete container may be hand washed and rinsed with a tap water hose. Petro-chemical based cleaning solutions should be avoided.