





Stock Pot Dolly

ASSEMBLY INSTRUCTIONS


1.

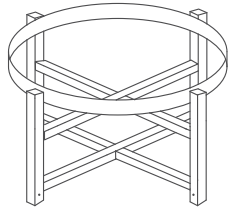


2.

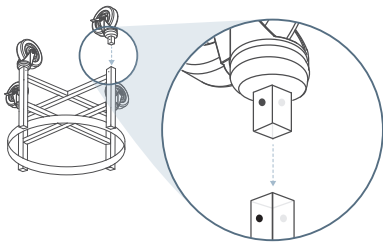


3.

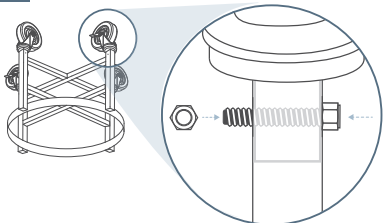

4.

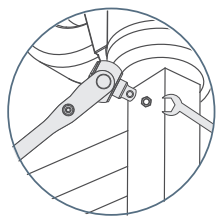


5.

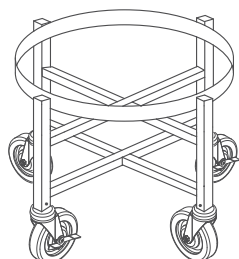

Parts List:

- | | |
|--------------------------------|--|
| A Dolly Frame (x1) | C M8-1.25 Bolt (x4) |
| B Side Lock Caster (x4) | D M8 Hexagonal Nylon Locknut (x4) |

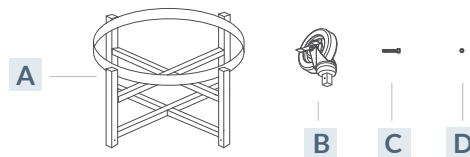

Tools Needed *(Not Included):*

- Open-End Wrench (14mm)**
- Combination Wrench (14mm)
- Socket Wrench (14mm)**
- Crescent Wrench (14mm)

****NOTE:** We recommend using an open-end wrench and a socket wrench. Use one wrench for the screw head and another for the locknut simultaneously. A combination wrench and crescent wrench can be used alternatively. Avoid using two socket wrenches.

Assembly:

1. Place dolly frame (A) upside down on a flat surface.
2. Insert caster (B) into the leg of the dolly frame, ensuring the hole in the caster aligns with the hole in the leg of the dolly. Repeat for all 4 casters.
3. Insert bolt (C) through the opening. Repeat for all 4 bolts. Screw on locknut (D) to the bolt (C) and hand tighten. Repeat for all 4 nuts.
4. Rotate the wrench placed on the bolt (C) head while keeping the other wrench on the locknut (D) stationary to tighten securely. Repeat for all 4 bolts and nuts.
5. Flip the dolly onto the casters to complete assembly.