



T&S Brass and Bronze Works, Inc.  
2 Saddleback Cove, P.O. Box 1088  
Travelers Rest, SC 29690  
TEL: (800) 476-4103  
FAX: (800) 868-0084



B-0155 Add-on Faucet  
(pre-retrofit).

## How to Install a T&S Add-on Faucet on an Easy Install PRU.


**B-0155**  
**B-0156**  
**B-0157**




1A

**Step 1A:** Remove Riser from Base Faucet by unthreading Easy Install locking nut and pulling up until the riser “pops” out.

**Step 1B:** Using a 3/8” Allen Wrench, remove Easy Install Bushing & Locking Nut from riser.

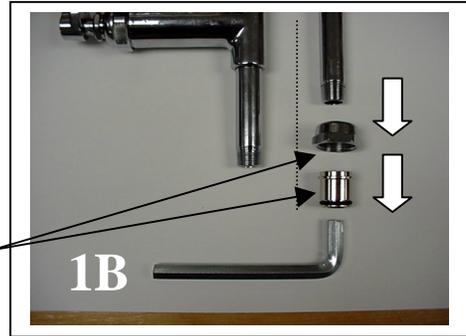


1B

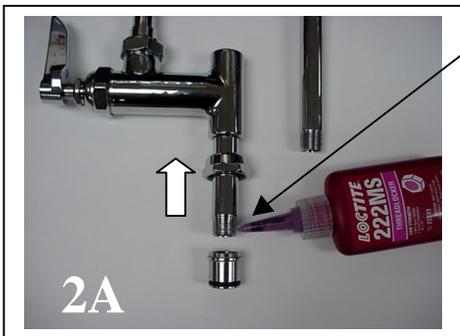

2A

**Step 2A:** Slide Easy Install Nut onto base of Add-on Faucet & Apply Loctite 222 (or other non-permanent thread lock compound) to Add-on faucet’s bottom threads.

**Step 2B:** Thread Easy Install bushing over base of Add-on faucet. Tighten with a 3/8” Allen wrench.

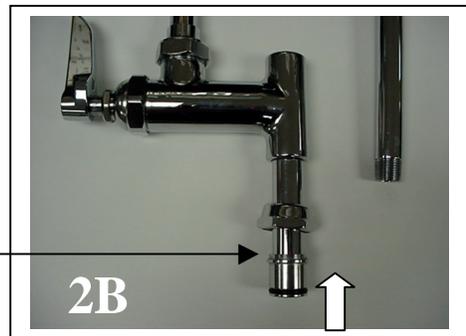


2B



3A

**Step 3A:** After cleaning with mild soap and water, apply plumber’s tape or putty to base threads of riser.

**Step 3B:** Thread bottom of riser into top female section of Add-on Faucet. Tighten.

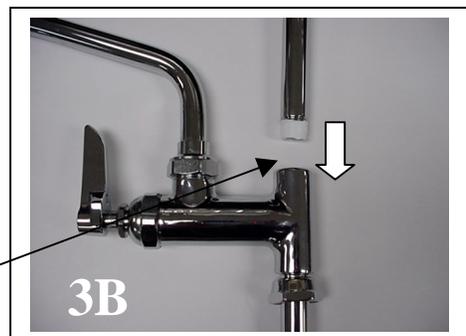


3B



4A

**Step 4A:** The Add-on Faucet & upper pre-rinse assembly are ready to be reconnected to the base faucet.

**Step 4B:** Press the bushing down into faucet body and tighten locking nut.

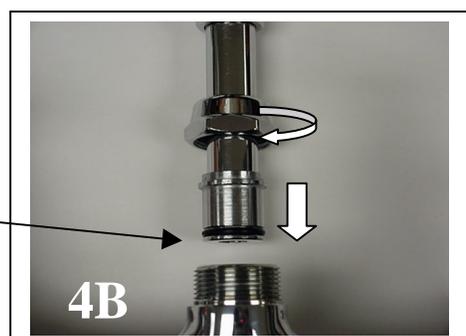

4B



T&S Brass and Bronze Works, Inc.  
2 Saddleback Cove, P.O. Box 1088  
Travelers Rest, SC 29690  
TEL: (800) 476-4103  
FAX: (800) 868-0084



B-0155-LNEZ


## How to Install a T&S Easy Install Add-on Faucet on an Easy Install PRU.

B-0155-LNEZ




1A

**Step 1A:** Loosen the Easy Install locking nut from the riser to base-faucet connection.

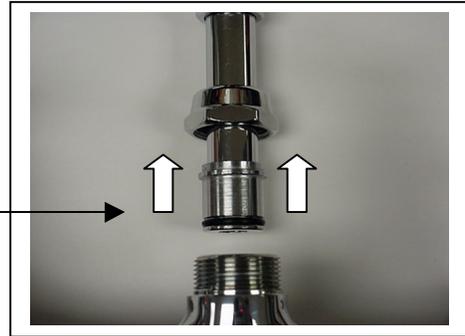


**Step 1B:** Remove the riser from the base faucet by pulling up on it.

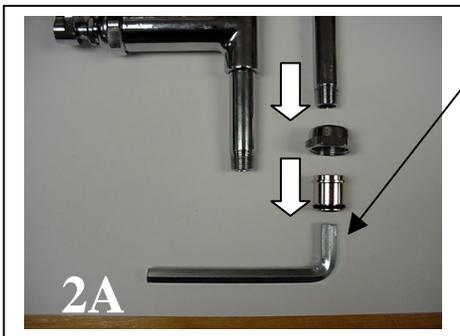

2A

**Step 2A:** Using a 3/8" Allen wrench, remove the bushing and locking nut from riser. (Either keep as spare parts or discard.)

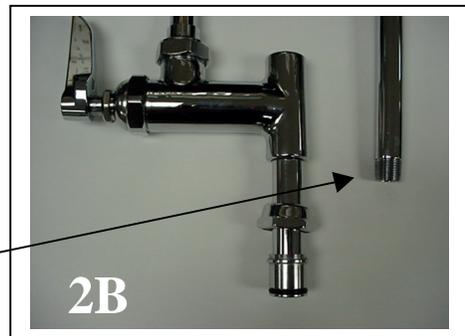


2B

**Step 2B:** Clean Loctite residue from riser threads with soap and water. Your riser is now almost ready to be connected to the add-on faucet.



3A

**Step 3A:** Apply plumber's tape or putty to base threads of riser.

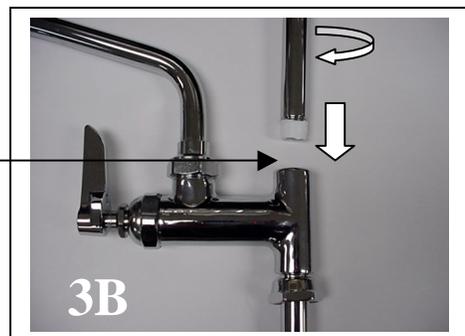


3B

**Step 3B:** Thread bottom of riser into top female section of Add-on Faucet. Tighten.



4A

**Step 4A:** The Add-on Faucet & upper pre-rinse assembly are ready to be reconnected to the base faucet.

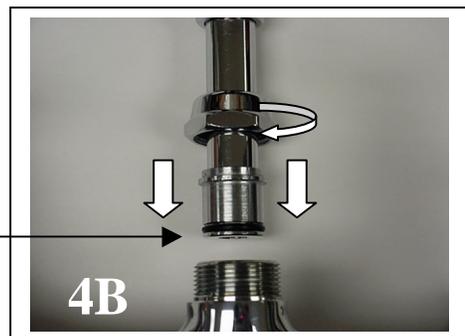

4B

**Step 4B:** Press the bushing down into faucet body and tighten locking nut.