


Modular Waste Drain - Handle Extension Kits

B-3990-3KIT and B-3990-5KIT Installation Instructions

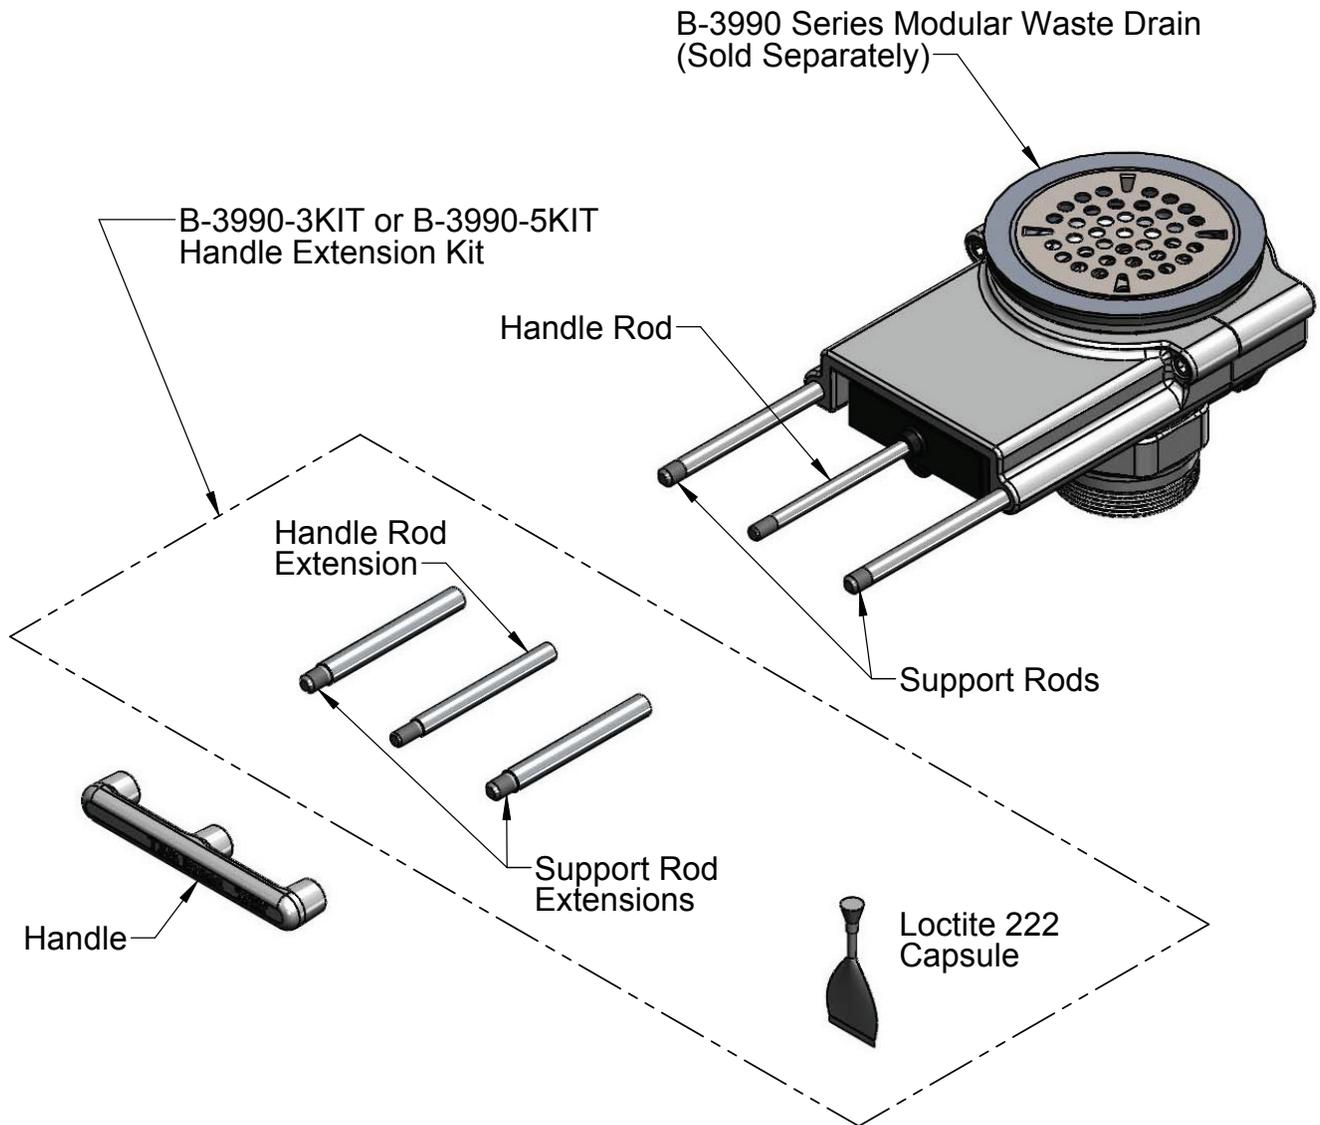

INSTALLATION INSTRUCTIONS

1. Unscrew (2) Support Rods from Handle
2. Unscrew Handle from Handle Rod
3. Screw Handle Rod Extension on to Handle Rod. Using Loctite 222 on screw threads.
4. Screw Handle on to Handle Rod Extension. No Loctite needed.
5. Screw Support Rod Extensions on to Support Rods. Use Loctite 222 on screw threads.
6. Screw Support Rods with Extensions into Handle. Use Loctite 222 on screw threads.