



Urinal Partition Assembly Instructions

08/2026

Hazard Statements

Do Not Use if Damaged: When pressing components into place, be careful not to pinch yourself.


Caution - Mounting Surface: Make sure that the mounting surface can support the weight of the partition. Failure to do so could result in injury or property damage.

Initial Setup

Unboxing: Carefully remove packaging. Avoid using sharp tools that could damage the unit.

- Do not force a box cutter or knife through packaging, as it may damage the product or accessories.
- Ensure you do not damage the product or its components when removing it from the packaging.
- If any damage is present, contact customer service immediately.

Required Tools (Not Included)

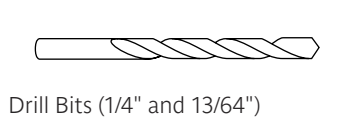

Drill Bits (1/4" and 13/64")




Marking Tool




Power Drill

Required Tools (Included)

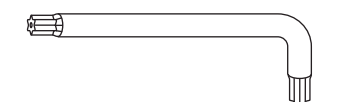


Allen Key


Parts

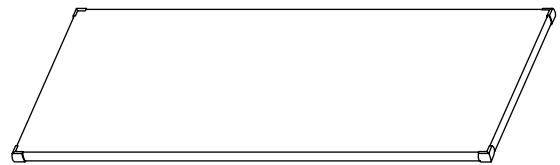


(A) Partition - 1

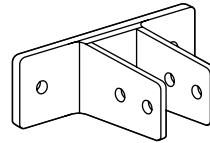

(B) Wall Brackets - 3

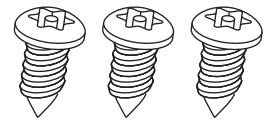

(C) Short Self-Tapping Screws - 12

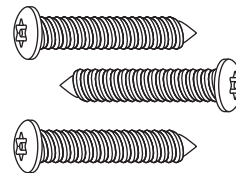

(D) Long Expansion Screws - 6



(E) Drywall Screws Anchor - 6

Janitor Cart Assembly Instructions




Assembly & Installation

Step 1


Placement: Select the location for the urinal partition. Depending on the wall type, instructions below will need to be modified. These instructions are designed for drywall walls.

Template: Using the brackets (B) as reference, slot all three on the wall partition. Record your preferred spacing and then draw your pilot hole markings on the wall using a bracket as a template.

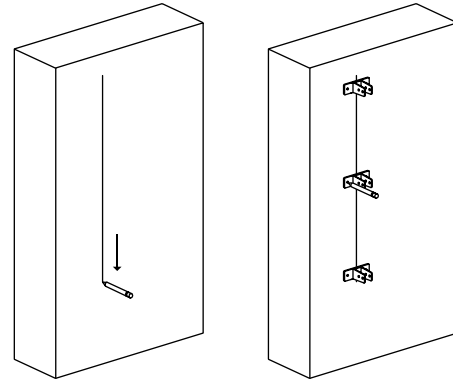

Step 2


Pilot Holes: Using a drill bit that is slightly smaller than the screws (or anchors if there is no stud), drill all pilot holes. Make sure to remove all debris from around and in the pilot hole.

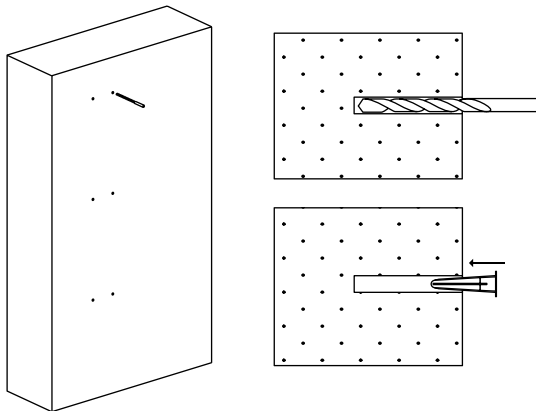

Step 3


Drywall Anchors: If needed, use the drywall anchors (E). Make sure they are flush and properly installed in the wall by not being able to be rotated.

NOTE: These anchors only work on drywall. On other wall types, acquire separate mounting hardware.

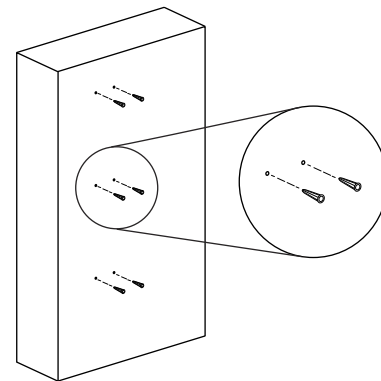

Step 4

Mount Brackets: Using the included long expansion screws (D), mount the brackets (B) to the wall. Make sure that they are flush and all screws are properly installed.

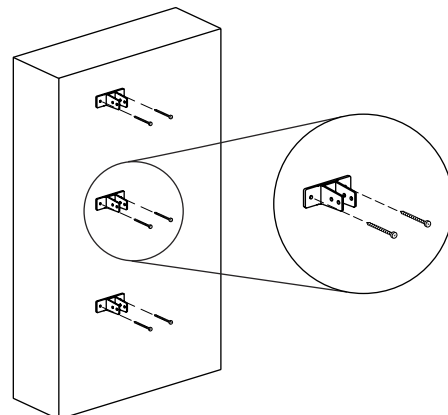


Janitor Cart

Assembly Instructions



Step 5

Attach Partition: Using either a second person or a block, align the partition (A) with the brackets (B). Mark and drill pilot holes and use the short self-tapping screws (C) to attach partition to the brackets.

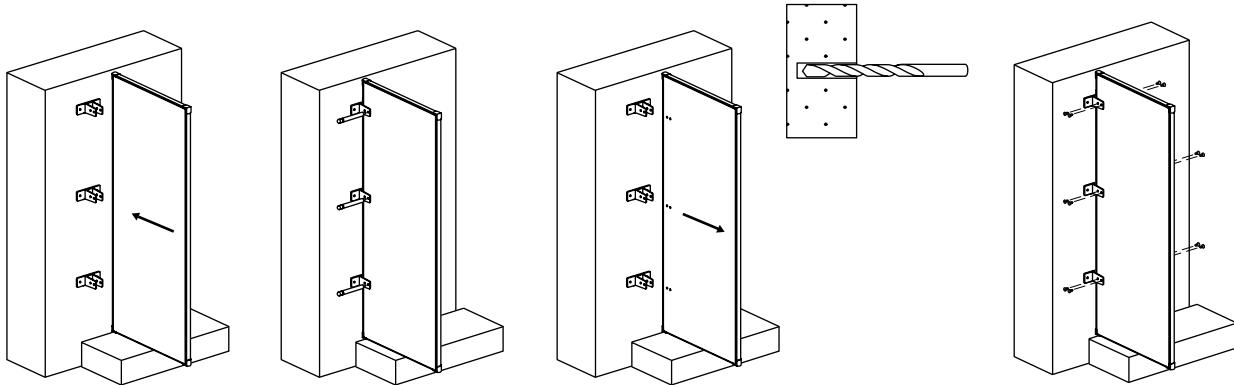

Cleaning

Wipe Regularly: Using a surface cleaner, regularly wipe the partition to remove any buildup. Do not use bleach.