# Installation Manual

# Flat Benches

Island Style

Z000000127


Revised 11/28/18



Flat Bench Island Frame Page 2 of 5

# **Unpacking Your Shipment**

Unpack and identify each component in each box that you received. If your shipment is missing parts, or too many parts were shipped, please contact Plymold.

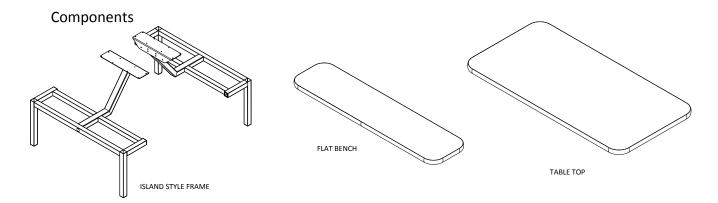

#### **P85794 HARDWARE KIT FLAT BENCH**





REAR SEAT HOOK

TEK SCREW #10 x 1"

#### P85888 JUPITER FRAME HARDWARE KIT





1/4-20 x 3/4" BOLT

NUT 1/4-20


#### P85889 JUPITER **TABLE & FLOOR HARDWARE KIT**





SCREW #10 X 1"

ADJUSTABLE PLASTIC GLIDE (A)



EXPANSION SPACER

# **Tools Required**







PENCIL OR MARKER





SOCKET, RATCHET, AND WRENCH SET



LEVEL



TAPE MEASURE



SCREW DRIVER




Manual Flat Bench Island Frame Page 3 of 5

# Assembly


# Step 1: Glide Assembly - Island Style Frame

a. Assemble a thread-in glide into the insert in each of the four (4) legs.

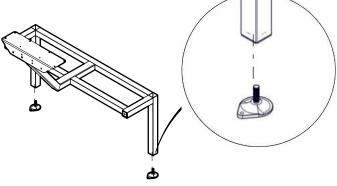

Step 2: Assemble Seat to Frame

 Note: An expansion spacer is required for table tops wider than 24".

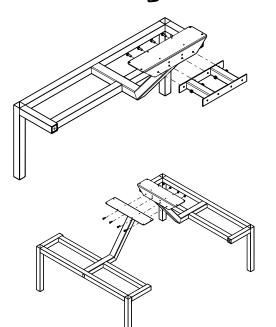


b. Align the table angle holes.

c. Locate the Jupiter Frame Hardware Kit and fasten the two frame halves together using 1/4-20x3/4" bolts and nuts.

Note: Hand tighten nuts and bolts.

- d. Level table angles.
- e. Tighten nuts and bolts using a wrench.

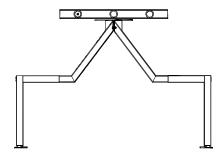


Flat Bench Island Frame Page 4 of 5


# Assembly

## Step 3: Assemble Seat to Frame

- a. Locate Flat Bench hardware kit.
- b. Position seat centered on island frame.
- c. Insert short tongue of rear seat hook into the seat plate. Using a flathead screwdriver pry rear seat hook until it pops into place. (4x per Bench) Note: Booth Hooks should be inside the frame.

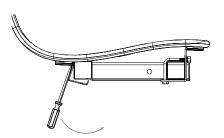


Screw drive shown prying rear seat hook on contour seat. above Same method used for flat bench.

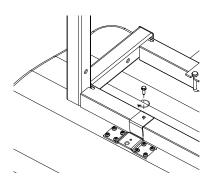

d. Now that the seat is installed, insert a self-drilling screw into the hole in the rear seat hook. One screw for each rear seat hook. Do not over tighten.


48"L BOTTOM VIEW

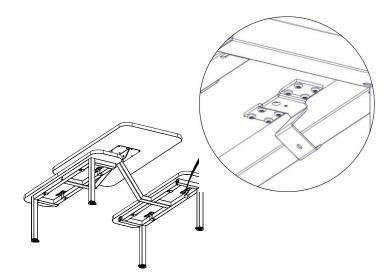

**CENTER** 

## Step 4: Installing Table Top

- a. Locate the Jupiter Table & Floor Hardware Kit.
- b. Place the table top on the frame.
- c. Position table per drawings below.
- d. Secure the table top from moving while fastening, using  $#10 \times 1.0$ " screws.

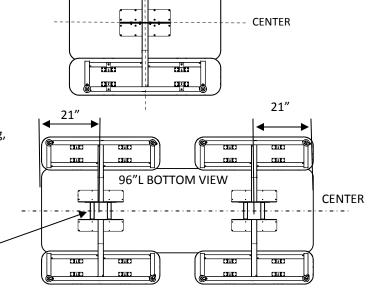

Address 14400 Southcross Drive West Burnsville, Minnesota 55306 Web Plymold.com
Phone 800.PLYMOLD

SHOWN WITH 
EXPASION SPACERS



Flat Bench Island Frame Page 5 of 5


# Assembly

# Step 5: Position and Level Booth

- a. Confirm location of booth/frames with the floor plan.
- b. Level booth by adjusting glides.

## Step 6: Fasten Glides to Floor

- a. Rotate glides to point the mounting hole towards the center of the booth.
- b. With a pencil, mark the hole location on the floor using the holes in the glide.
- c. Turn the glide away 90 degrees from its current position to expose the mark on the floor.





- e. Place a plastic anchor in the hole and then rotate glide back so the hole lines up with the plastic anchor in the floor.
- f. Insert a  $\#10 \times 1.0$ " screw through the hole in the glide and secure into the plastic anchor.

Note: Frames must be anchored to the floor to maintain stability and prevent personal injury.

## Step 7: Care.

a. Clean furniture and protect unit until

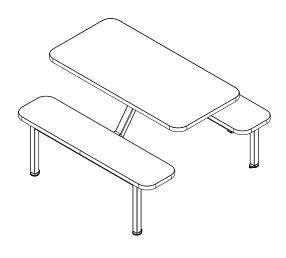

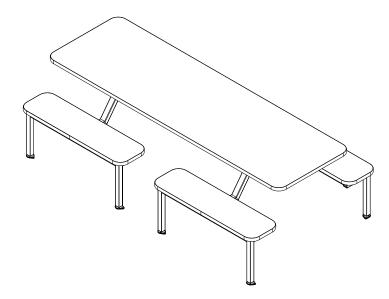

Address 14400 Southcross Drive West Burnsville, Minnesota 55306 Web Plymold.com
Phone 800.PLYMOLD

