



ARB1236FRY

12" x 36" Fry Basket Station

Assembly Instructions



INSTR-RB1236FR 4/2013


Note: the two 1/2 size sheet pans with grates are not supplied with the unit, but should always be used with it as shown.




All collars:

Use aluminum split sleeves and retainer rings as shown below.


1.

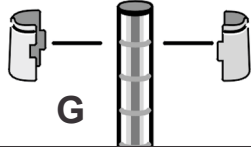

2.

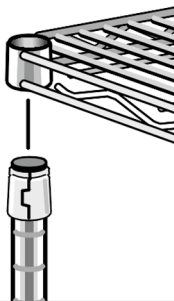

3.

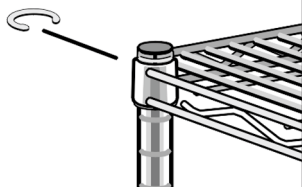


groove #33

groove #20

groove #7

Note: brake casters on front posts

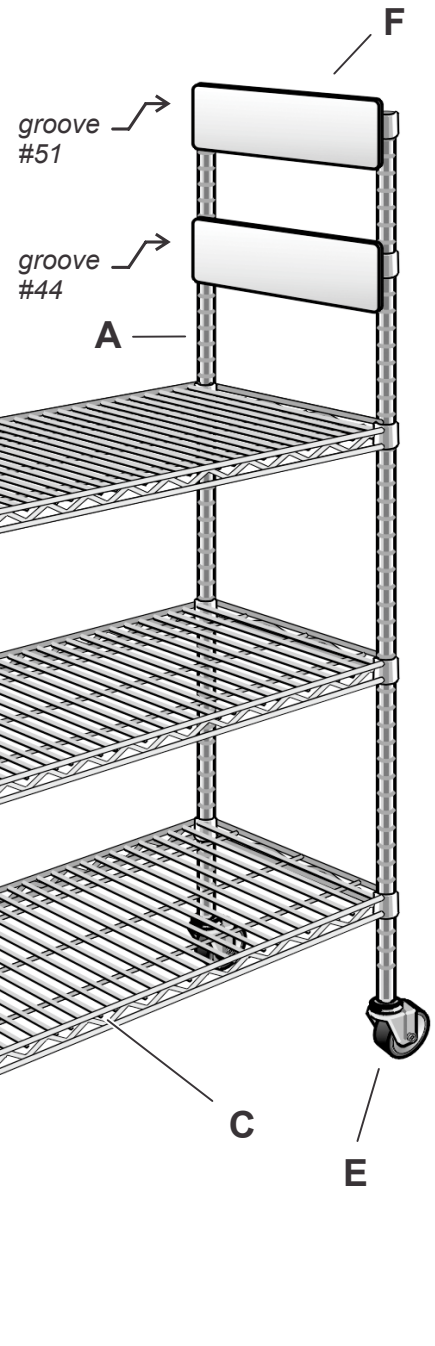

Key	Qty.	Metro Part #	Description	Assembly Notes:
A	2	51CPK3	Super Erecta Post, NK3 Finish, 51-3/8" H	Groove # indicates number on post to be covered by split-sleeve. 1. Install casters into the bottoms of the posts, with the brake casters on the two shorter front posts. 2. Attach bottom shelf first using split sleeves and retainer rings. Tap and seat each corner with a hammer and board or mallet. 3. Attach remaining shelves and accessories working from bottom to top. Seat each corner.
B	2	33PK3	Super Erecta Post, NK3 Finish, 34-1/2" H	
C	3	CC8190 (1236NK3)	Super Erecta Wire Shelf, NK3 Finish, 12" W, 36" L	
D	2	DD2798	Super Erecta Threaded Stem Caster, 3" dia. wheel	
E	2	DD2798B	Super Erecta Threaded Stem Caster, 3" dia. wheel with brake	
F	2	DD8250	Basket Holder Rail, 12" W	
G	4	9986S	Bag of 4 Aluminum Split Sleeves with rings	