


NOTE: INSTALL ALL CHANNELS AND FASTENERS IN WRAPPER ASSEMBLY PRIOR TO INSTALLING TANK ASSEMBLY.

NOTA: INSTALE TODOS LOS CANALES Y SUJETADORES DE LA CUBIERTA EXTERIOR ANTES DE SOLOCAR EL DEPOSITO.



SLIDE TUBING INTO CABINET FROM THE TOP AND DROP THRU THE BOTTOM CHANNELS. FULLY WELD AROUND TOP AND BOTTOM.

INTRODUCIR LOS TUBOS DESDE ARRIBA Y HASTA LOS CANALES DE LA BASE. SOLDAR COMPLETAMENTE EN TORNO AL TOP Y LA BASE.

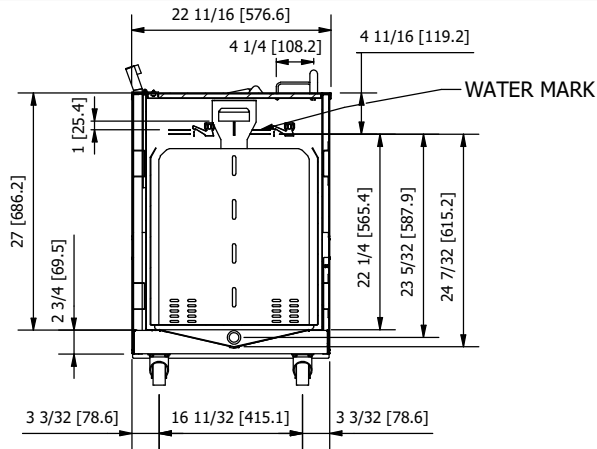


NOTE: BUILD THE WRAPPER ASSEMBLY FIRST, THEN FIT THE TANK ASSEMBLY IN PLACE AND INSTALL END PANEL TO COMPLETE WRAPPER ASSEMBLY.

NOTA: ENSAMBLE PRIMERO EL EXTERIOR, DESPUES COLOQUE EL ENSAMBLE DEL DEPOSITO EN SU LUGAR. ENSAMBLE EL PANEL EXTERIOR PARA COMPLETAR EL EXTERIOR.

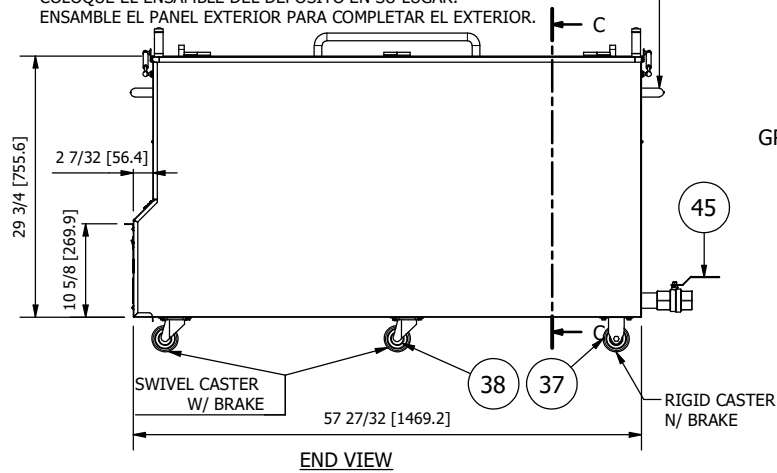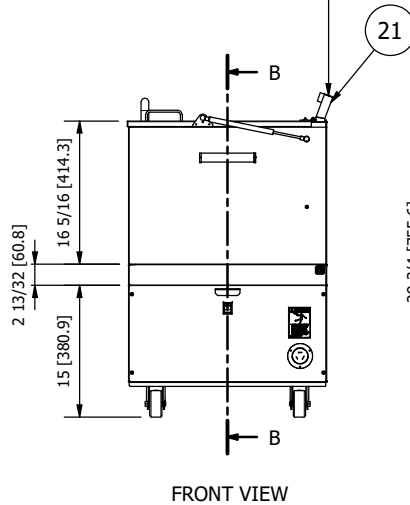

NOTE: INSTALL GAS SPRINGS WITH LID IN THE OPEN POSITION AND ROD IN THE DOWN POSITION. INSTALL SAFETY CLIPS AFTER GAS SPRINGS ARE IN PLACE.

NOTA: INSTALE EL AMORTIGUADOR CON LA TAPA ABIERTA Y CIERRELA. INSTALE LOS CLIPS DE SEGURIDAD CON LOS AMORTIGUADORES YA EN POSICION.

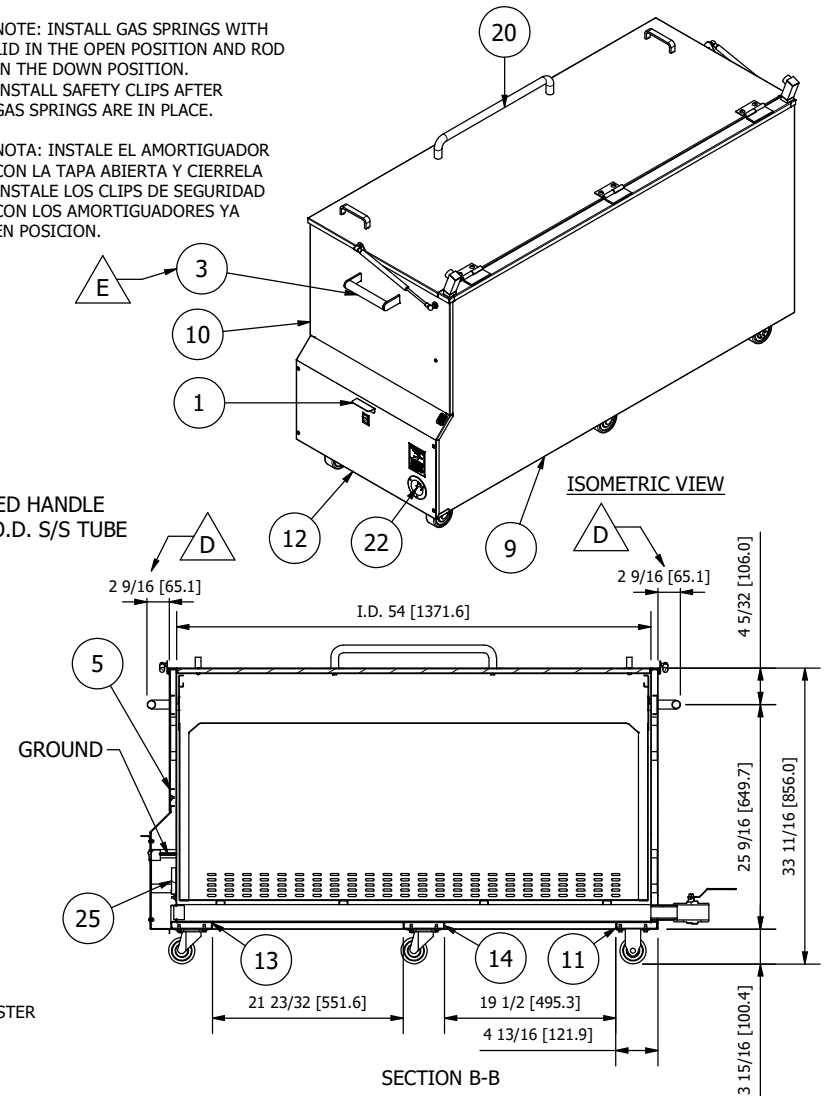

DATE: 11/7/2012	MATERIAL:	SYM	REVISION	DATE	CUSTOMER:
DRAWN: esanchez	WIDTH: N/A	E	20231887 FR	2/27/2024	
SCALE:	GRAIN LENGTH: N/A				
COMMENTS:					
THESE DRAWINGS AND SPECIFICATION ARE THE PROPERTY OF H&K AND SHALL NOT BE REPRODUCED OR COPIED OR TRANSFERRED TO A THIRD PARTY WITHOUT THE WRITTEN PERMISSION OF H&K.					ITEM NO:
SIZE: B	SHEET 2 OF 4	TITLE: MOBILE HEATED TANK, HINGED LID 54" x 20"			BIK008