

WALL-MOUNTED CATCH TRAY (EZT016 / EZT017)

SETTING UP YOUR PRODUCT

To install your catch tray you will need:

- Pencil - to mark location of screws for brackets
- 4- Anchors & screws - to affix the mounting brackets to the wall
- 2' or 3' level - to ensure the mounting brackets are level
- Drill - to make the holes in the wall for the anchors
- Screwdriver - Phillips or blade, depending on anchor type)

Consult your contractor or home improvement store as to the type of anchor required for your wall material and weight.

INITIAL ASSEMBLY

1. Remove items from carton and compare to illustration to confirm all pieces are included.

If you are missing a part call Rosseto at 847-763-1215.

2. Lift catch tray top off and set aside.
3. Remove the 2 metal mounting brackets and the plastic bag with pair of black plastic side caps (Part EZM046). Set aside for later use.
4. Using a level, measure a minimum of 6" down from the bottom opening of your topping dispenser and draw a light line with your pencil the width of where your dispenser is mounted. This indicates where the top of your catch tray will be.
5. Using the same level, measure down 2-3/8" from the previous line you just made, and draw a very light line. This line represents where the top hole will be for the mounting brackets. Refer to Figure A for additional dimensions to note.
6. Now, assemble the catch tray side caps to the bottom tray following the instructions in Step 9 for Figure C.
7. Place the assembled catch tray bottom on the wall as pictured, centered below the topping dispensers, mark the ends of the tray on the bottom line you just drew.
 - a. Metal brackets will be installed 1-3/8" from the outside edge of the tray
8. On the lower line, measure in 1-3/8" from outside edge mark and make a small circle on the line
 - a. For the EZT016, measure 15-5/16" away from 1-3/8" mark for the opposite mounting bracket hole
 - b. For the EZT017 measure 26-1/2" away from the 1-3/8" mark for the opposite mounting bracket hole
9. Place the top hole of the mounting bracket on the top mark on the wall and mark the bottom hole, repeat for the opposite mounting bracket.

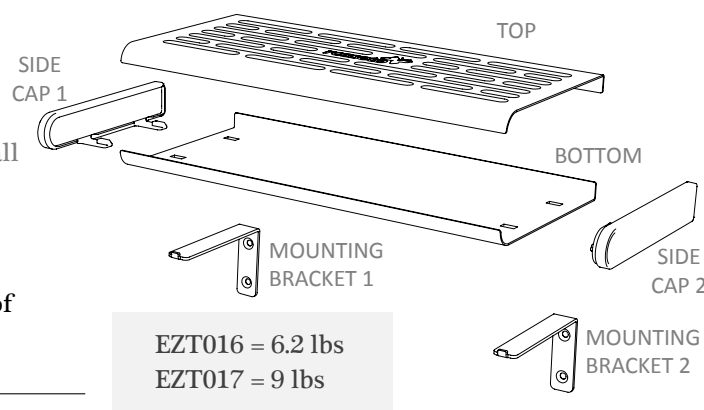


Figure A: EZT017


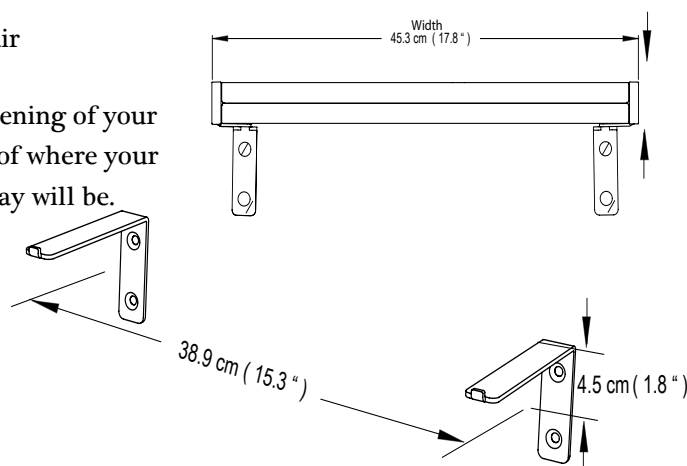


Figure B: EZT016

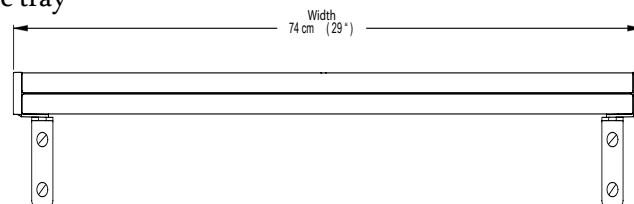

NEED ASSISTANCE?

Please contact our customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 W. Pratt Avenue. Lincolnwood, IL 60712
Visit our website at: www.rosseto.com

10. As recommended by your contractor or home improvement store, drill the correct hole sizes and install the anchors per manufacturer instructions, securing brackets to wall.
11. Place the assembled catch tray bottom on the brackets; make sure tabs of mounting brackets fit securely into hole of black catch tray side caps for safety.
12. Place the catch tray top on the mounted bottom... Good job! Your Catch Tray is now ready for use!

FIGURE C

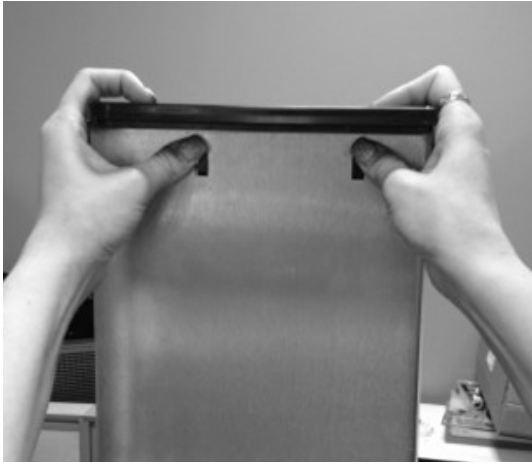


FIGURE D



CLEANING INSTRUCTIONS:

1. Lift and set aside the metal cover.
2. Wipe loose debris from the catch tray bottom.
3. For sticky residue, to wash, carefully remove the Catch Tray from mounting brackets – make sure to not spill any loose crumbs onto the floor!
4. Hold the tray in a vertical orientation as in Figure C - the black plastic side caps at the top and at the bottom, and the underside of the tray facing away from you.
5. Position your hands such that your pointing fingers are able to support the top of the plastic side caps. Locate the 2 square slots on the metal where the plastic tabs lock in. Using both thumbs, gently push the tabs forward until both are cleared through the metal slot.
6. At this point, you should be able to flip the plastic connector off the metal (towards you), in one smooth and swift motion.
7. Turn the tray upside down and do the same for the other plastic connector.
8. Hand wash the plastic connectors with warm soapy water. Rinse and dry with a soft cloth for best results.
9. Clean both sides of the metal surfaces with a damp washcloth. You may use either water or a stainless steel cleaner. A soft microfiber cloth is advisable – please avoid using any abrasive materials or harsh chemicals.
10. To reassemble, hold the tray in a position similar to Step 3 (see above).
11. Hold the plastic connector in preparation to install it (Don't push it in yet!). Make sure that the rounded side matches to the curved side of the tray, and that the plastic tabs are on the underside.
12. **Carefully align the plastic side cap with the metal tray – the plastic should fit to the inner curve of the metal.** Tip: Insert the plastic connector between the protruded corners first (as shown in Figure D). Then, align the rest of it with the metal. Push down gently; secure one side at a time. Adjust the tabs to fit through the slots.
13. Repeat Steps 8 thru 11 for the other end.
14. Set the metal cover in position, and re-place the Catch Tray on top of the wall-mounted brackets.

NEED ASSISTANCE?

Please contact our customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 W. Pratt Avenue. Lincolnwood, IL 60712

Visit our website at: www.rosseto.com