


AQUASPEC FAUCETS



MODEL - Z6900-VG VANDAL-GUARD LAVATORY SHIELD

TOOLS NEEDED:

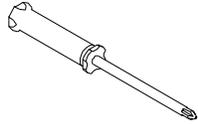

PHILLIPS
SCREW DRIVER




JIG SAW



COMPASS SUPPLIED




3/16" DRILL BIT

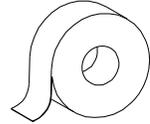

TAPE

* INSTALLATION INSTRUCTIONS

1. PLACE THE LAVATORY SHIELD UNDER SINK FLUSH WITH WALL AS HIGH AS POSSIBLE AND TEMPORARILY FIX TO WALL WITH TAPE (DUCT, MASKING, PACKAGING, ETC.)
2. USING COMPASS PROVIDED CAREFULLY SCRIBE THE OUTLINE OF THE UNDERSIDE OF THE SINK ONTO THE LAVATORY SHIELD KEEPING THE COMPASS VERTICAL AT ALL TIMES.
3. REMOVE LAVATORY SHIELD FROM WALL AND CUT OUT THE SCRIBED LINE USING JIG SAW.
4. ONCE PROPER FIT OF SHIELD TO UNDERSIDE OF SINK HAS BEEN ACCOMPLISHED PLACE SHIELD FLUSH WITH WALL AND SINK THEN MARK HOLES FOR FASTENING.
5. DRILL 3/16" HOLES FOR SUPPLIED ANCHORS AND SECURE SHIELD INTO PLACE.

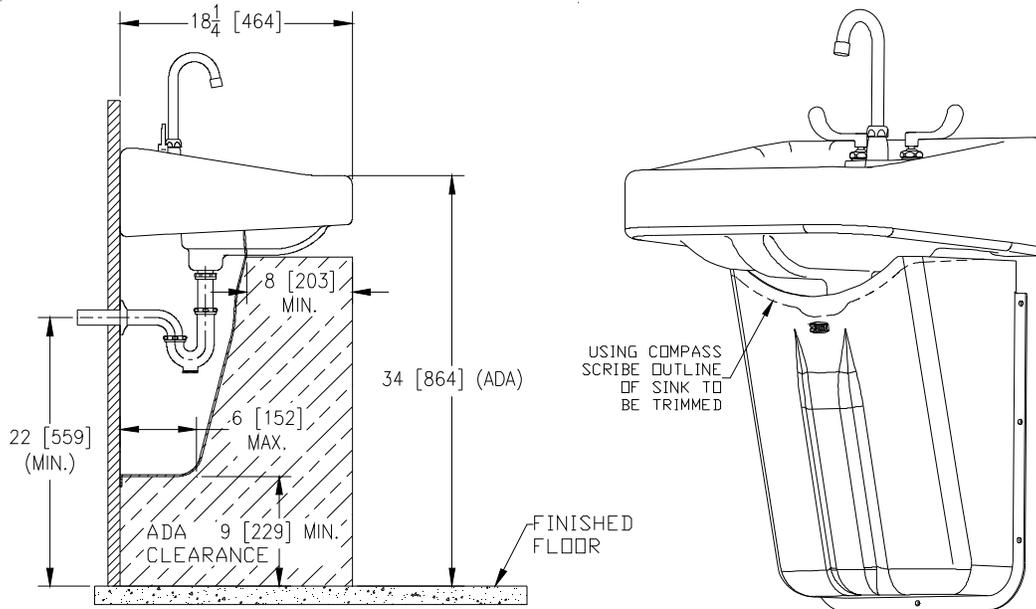

REPLACEMENT PARTS

MOUNTING HARDWARE ASSEMBLY (G68021) INCLUDING:

- #6x1" OVAL HEAD SCREWS 7X
- 3/16" DRY WALL ANCHORS 7X
- COMPASS 1X

ZURN INDUSTRIES, LLC. ♦ COMMERCIAL BRASS OPERATION ♦ 5900 ELWIN BUCHANAN DRIVE ♦ SANFORD NC 27330

Phone: 1-800-997-3876 ♦ Fax: 919-775-3541 ♦ World Wide Web: www.zurn.com

In Canada: ZURN INDUSTRIES LIMITED ♦ 7900 Goreway Drive Unit 10 ♦ Brampton, Ontario L6T5W6 ♦ Phone: 905-405-8272 Fax: 905-405-1292