


WARING COMMERCIAL®

DMC20
DMX25/DMC20 Canada

DMC60/Bar Mixer
(Discontinued)

DMC10/DMC 20 with Timer
(Discontinued)

DMC10X/DMC10 Canada
(Discontinued)

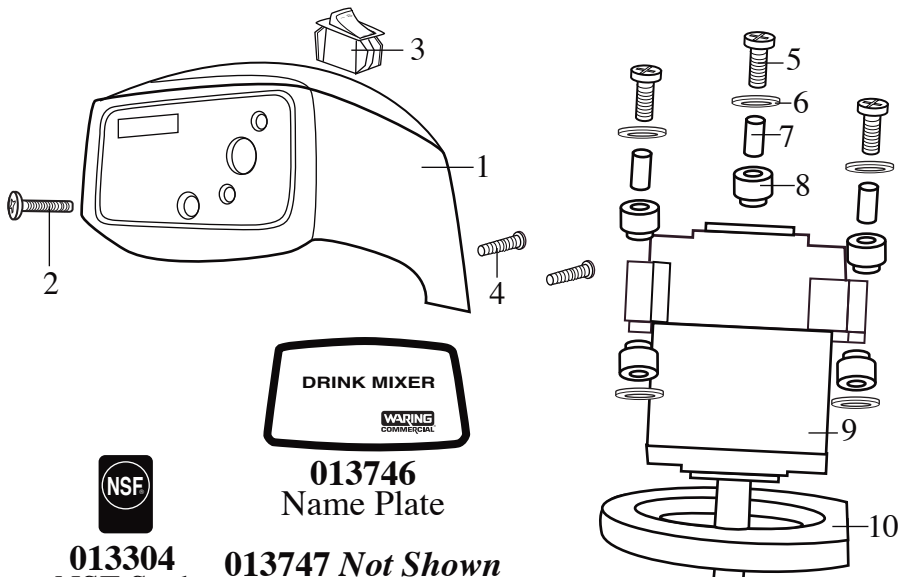


013746
Name Plate






013304
NSF Seal

013747 Not Shown
Name Plate
DMC10, DMX10

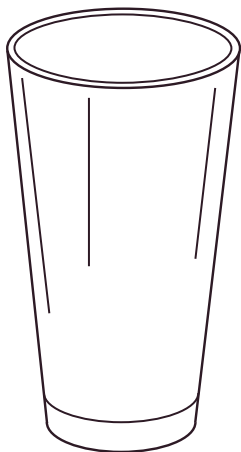

030556 Container (CAC20)
(optional)

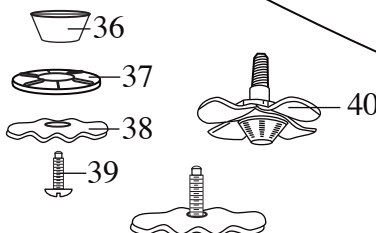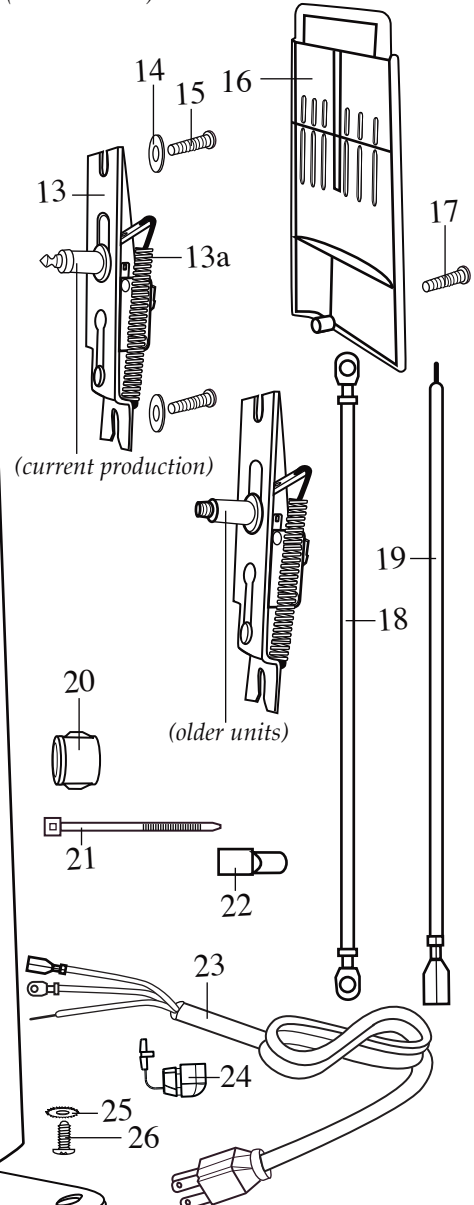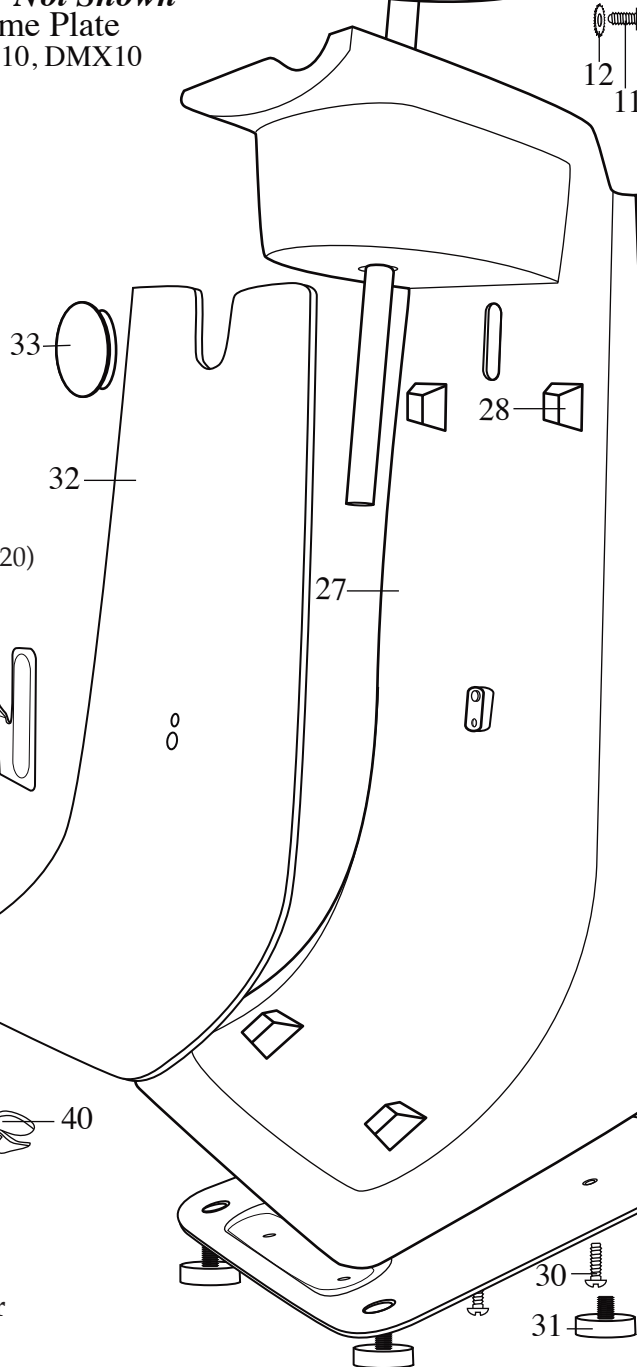

032587
Solid Agitator
with Screw
(CAC09)

Unit Information		
	1 Amp.	
	Water Load	Milkshake Load
RPM's	High - 20,000	High - 15,000
	Low - 15,000	
	Butterfly Agitator - soft ice cream	
	Solid Agitator - hard ice cream	

Catalog #	Model #
DMC20	31DM43
DMX25	31DM37
DMC60	31DM28 (<i>Discontinued</i>)
DMC10	31DM36 (<i>Discontinued</i>)
DMX10	31DM52 (<i>Discontinued</i>)




Illustration #	Part #	Description
1	501480 500933	Top Housing Top Housing /DMC60
2	013662	Sems
3	018374 500784	Rocker Switch Switch /older DMX25
4	013661	Sems 2 Req.'d
5	013658	Sems 3 Req.'d
6	013604	Washer 6 Req.'d
7	011917	Spacer 3 Req.'d
8	013603	Vibration Dampener 6 Req.'d
9	025255 702120	Motor Motor /DMC60
10	013710	Baffle
11	013659	Sems
12	002943	Washer
13	503056 501353 502731 501172	Switch Assy. Switch Assy. (<i>older units</i>) Switch Assy. /DMX25 Switch Assy. /DMC60
13a	013612	Switch Return Spring
14	002943	Washer 4 Req.'d
15	013659	Sems 2 Req.'d
16	016118	Rear Cover Plate
17	013658	Sems
18	500671	Lead /green
19	500692	Lead /brown
20	013606	Snap Bushing
21	013731	Cable Tie 2 Req.'d
22	012409	Crimp Connector 2 Req.'d 3 Req.'d-DMX25, DMC10, DMX10
23	003565 500830	Cord Set Cord Set (<i>older units</i>)
24	013680	Strain Relief
25	002943	Washer
26	013659	Sems

Catalog #	Model #
DMC20	31DM43
DMX25	31DM37
DMC60	31DM28 (Discontinued)
DMC10	31DM36 (Discontinued)
DMX10	31DM52 (Discontinued)


Illustration #	Part #	Description
27	016117	Body /coated
28	016979	Bumper 4 Req.'d
29	500679	Bottom Plate Assy.
30	013660	Sems 2 Req.'d
31	017576	Mounting Foot 4 Req.'d
32	017861 014900	Front Panel Front Panel /DMC60
33	026720 501355 014982	Actuator Knob /snap on Actuator Knob (older units) Actuator /DMC60
34	013646	Container Support
35	013918	Container Support Screw
36	013630	Shaft Collar
37	013654	Splash Guard Disc
38	016599	Disk Agitator
39	016384	Screw
40	500669	Butterfly Agitator

Items Not Shown

- 502706 - Fuse Assy. /DMX25
- 019938 - Shaft Extension 1" longer /must use 013664 Screw Ill. #39
- 013600 - Pilot Light /DMC10, DMX10 - Obsolete
- 013824 - Timer Knob /DMC10, DMX10
- 013698 - Screw 2 Req.'d /timer knob DMC10, DMX10
- 500675 - Timer & Lead Assy. /DMC10, DMX10

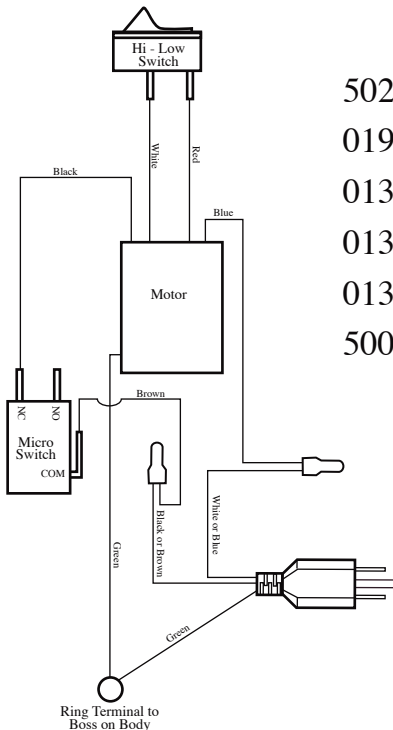

Wiring Diagram for DMC20

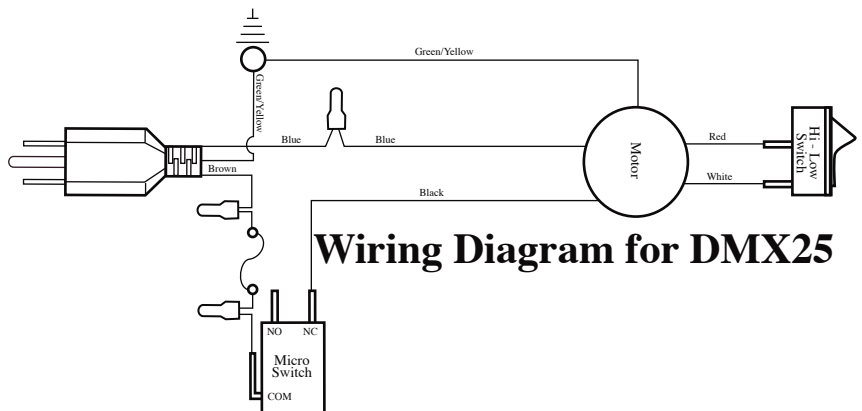

Wiring Diagram for DMX25