INSTRUCTIONS FOR MAINTENANCE

BOBRICK SANITARY NAPKIN/TAMPON VENDORS - MODELS B-37063, B-370634, and B-370639

MAINTENANCE

To load Dispensers:

Insert 20 napkin packages, measuring between 2-7/8" x 3/4" x 4-1/8" to 3-1/8" x 1-1/8" x 4-3/8" (73 x 19 x 105mm to 80 x 29 x 111mm) in the napkin magazine (see Advisory Bulletin TB-25). Then insert 30 tampons, measuring between 4-5/8" long x 9/16" diameter minimum to 5-1/8" long x 3/4" diameter maximum (118 x 14mm to 130 x 19mm) in the tampon magazine.

To empty Coin Box: (25¢ and 50¢ only)

Unlock coin box lock with key provided and pull forward to remove. Empty coin box then reinsert coin box ensuring rectangular feet are fully inserted into coin box bracket mounting slots (see Fig. A). Lock coin box into place.

To dispense Napkin or Tampon:

Insert coin(s) in coin slot (25¢ and 50¢ only), push button as far as it will go and release. When one napkin or tampon is left, the napkin or tampon red *empty* indicator blocks the coin slot to prevent another coin from being inserted and indicates time to refill.

REPLACEMENT PARTS (refer to Fig. R)

	REPLACEMENT PARTS (refer to Fig. B)
56	Door Assembly Kit, Free (includes Bezel Assemblies)
95	Tampon Bezel Assembly Kit Free
96	Napkin Bezel Assembly Kit Free
94	Tampon Magazine Assembly Kit Free
95	Napkin Magazine Assembly Kit Free
66	Token Conversion Kit
197	Tampon Bezel Assembly Kit Token
98	Napkin Bezel Assembly Kit Token
96	Tampon Magazine Assembly Kit Token
97	Napkin Magazine Assembly Kit Token
05	Tokens (qty. 100)
57	Door Assembly Kit, 25¢ (includes Bezel Assemblies)
	Tampon Bezel Assembly Kit 25¢
92	Napkin Bezel Assembly Kit 25¢
05	Tampon Magazine Assembly Kit 25¢
	Napkin Magazine Assembly Kit 25¢
sal	
	Product Tray Kit
44	Coin Box Kit
40	Coin Conversion Kit, Free, 25¢ (includes Bezel Assemblies
	Door Lock & Key (keyed to Cat 74)
75	Door Lock & Key (keyed to Cat 118 for added security)
	95 96 97 98 99 99 99 99 99 99 99 99 99

BOBRICK

370634-17 2" Skirt FOR Semi-Recessing

370639-18 6" Skirt for Surface-Mounting

If Vendor fails to work properly, ensure that:

- 1. Machine is loaded with correct size napkins and tampons.
- 2. Damaged napkins or tampons are not jamming mechanism.
- 3. Coin box is seated properly on coin box bracket. (25¢ and 50¢
- 4. Coin box is not full. (25¢ and 50¢ only)

To replace individual Magazine Assembly:

Order applicable Free, 25¢ or 50¢ Napkin and/or Tampon Magazine Assembly Kit. Remove napkins and/or tampons from vendor. Remove existing magazine by unscrewing two (2) hex nuts from each magazine assembly as indicated in figure B; install new magazine assembly using same hex nuts.

To convert coin denomination:

Order Part No. 3706-240 Coin Conversion Kit which includes two (2) Bezels. Label Sheet with Free. 25¢, and 50¢ labels, and lever assembly for each coin denomination. For complete set of instructions for conversion in the field, refer to Form No. 3706-261.

Note: If converting from Free to a coin operated vendor, a coin box kit. Part No. 3706-344 must be ordered separately. (Refer to Form No. 3706-261 for complete conversion instructions).

To replace Bezel Assembly:

Remove existing bezels from the door by removing three (3) plastite screws from each bezel assembly on the door. Install new bezels ensuring that the locating pins are properly engaged and reinstall existing screws. Refer to replacement parts for correct Bezel assembly.

To replace Product Tray Kit:


Order Part No. 3706-60. Remove four (4) plastite screws from bottom of cabinet and remove tray. Install new tray using same screws. If unit is recessed, unit must be removed from wall to access screws for product tray replacement.

To replace Door Locks:

Order 2 each Part No. 383257 or 3706-175. Remove lock nut from inside of door. Install new locks, securing them with new lock nut.

To replace Door:

Order Part No. 3706-156 for Free operation, 37063-157 for 25¢ or 37063-158 for 50¢. Unlock and open door. Use nail or similar object to push hinge pin out of hinge knuckle and use pliers to pull hinge pin out. Remove door. Using same hinge pin, align hinge knuckles of new door with the cabinet and insert pin from top. Ensure hinge pin is aligned flush at top or bottom of hinge barrel and filed smooth.

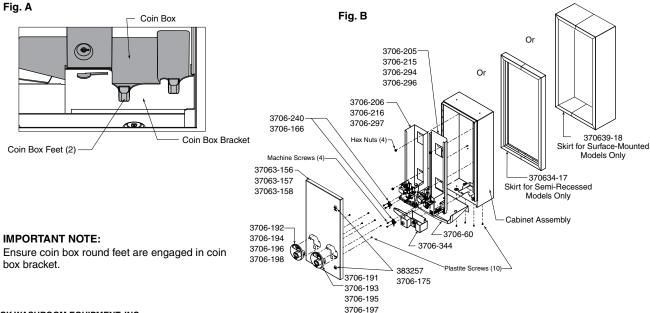

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213: Tel: (818) 982-9600, FAX: (818) 503-1102 New York: 200 Commerce Drive. Clifton Park. NY 12065-1350: Tel: (518) 877-7444. FAX: (518) 877-5029. or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada; Tel; (877) 423-6555 • FAX; (877) 423-8555

Western Canada: Tel: (877) 423-6444
FAX: (877) 423-8444

Product protected under U.S. Patent No's, 7,469,779 & 7,950,513: Other U.S. and foreign Patents Pending


INSTRUCTIONS FOR CONVERSION

BOBRICK ADA COMPLIANT SANITARY NAPKIN/TAMPON VENDOR MODELS B-2706, B-3706, B-37063, B-370634, B-370639, B-4706, B-47064, B-47069

To Convert Coin Denomination:

From Coin to Token, 50¢ to 25¢

- 1. Remove two (2) machine screws (T15 Torx Drive) from each of the 25¢ Coin Return Lever Assemblies at the locations indicated in figure A.
- 2a. For conversion from 25¢ to token, order part number 3706-166: Install Token Coin Lever Assembly (included with kit) so that the 25¢ embossment is on top (see figure A2) and reinstall screws.
- 2b. For conversion from 50¢ to 25¢, order part number 3706-161: Install 25¢ Coin Return Lever Assemblies (included with kit) so that the 25¢ embossment is on top (see figure A2) and reinstall screws
- Adhere coin label (included with kit) onto existing Bezels to match the coin denomination of the magazine. Adhere Napkin graphics label on left Bezel and Tampon graphics label on right Bezel.

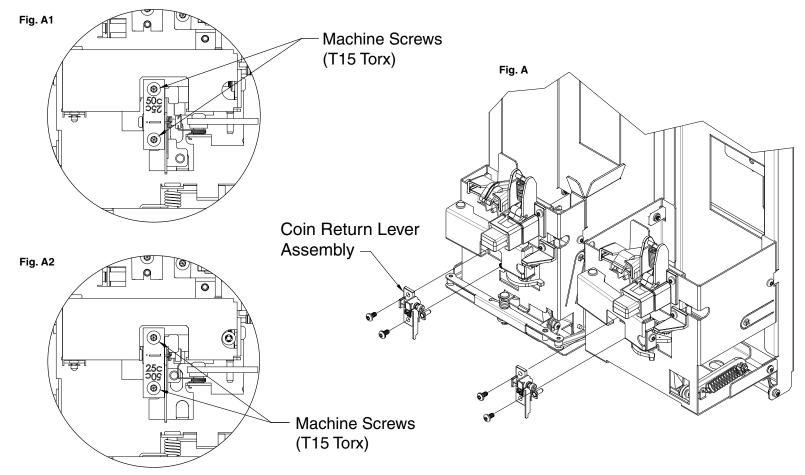



© 2018 Bobrick Washroom Equipment, Inc.

Form No. 3706-261 r7/19/18

Printed in U.S.A.

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CÁ 91605-6213: Tel: (818) 982-9600, FAX: (818) 503-1102 New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, FAX: (518) 877-5029, or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

- 45 Rolark Drive, Scarborough, Ontario M1R 3B1 Eastern Canada: Tel: (877) 423-6555 FAX: (877) 423-8555
- Western Canada: Tel: (877) 423-6444 FAX: (877) 423-8444

INSTALLATION INSTRUCTIONS FOR BEZEL ASSEMBLY

BOBRICK ADA COMPLIANT SANITARY NAPKIN/TAMPON VENDOR MODELS B-2706, B-3706, B-37063, B-370634, B-370639, B-4706, B-47064, B-47069

To Replace Bezel Assembly:

Remove existing Bezels from the door by removing three (3) Plastite screws (T15 Torx Drive) from each Bezel assembly at the back of the door (see figures A & B). Install new Bezels ensuring that the locating pins are properly engaged in the door pilot holes and reinstall existing screws (see figures A & B).

Back View of Door Plastite Screws (T15 Torx) Locating Pins Fig. A Plastite Screws (T15 Torx) Napkin Bezel For ClassicSeries® Model Numbers B-2706, B-3706 and Assembly TrimLineSeries™ Model Numbers B-37063, B-370634, B-370639 3706-191 Tampon Bezel Assembly Kit 25¢ 3706-192 Napkin Bezel Assembly Kit 25¢ 3706-193 Tampon Bezel Assembly Kit 50¢ 3706-194 Napkin Bezel Assembly Kit 50¢ Tampon Bezel 3706-195 Tampon Bezel Assembly Kit Free (Not shown) Assembly 3706-196 Napkin Bezel Assembly Kit Free (Not shown) 3706-197 Tampon Bezel Assembly Kit Token 3706-198 Napkin Bezel Assembly Kit Token Fig. B For ConturaSeries® Model Numbers B-4706, B-47064, B-47069 4706-191 Tampon Bezel Assembly Kit 25¢ 4706-192 Napkin Bezel Assembly Kit 25¢ Front 4706-193 Tampon Bezel Assembly Kit 50¢



Napkin Bezel Assembly Kit 50¢

Tampon Bezel Assembly Kit Free (Not shown) Napkin Bezel Assembly Kit Free (Not shown)

4706-194

4706-195

4706-196

© 2018 Bobrick Washroom Equipment, Inc. Form No. 3706-271 r7/17/18 Printed in U.S.A.

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213: Tel: (818) 982-9600, FAX: (818) 503-1102 New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, FAX: (518) 877-5029, or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada: Tel: (877) 423-6555 • FAX: (877) 423-8555

• Western Canada: Tel: (877) 423-6444 • FAX: (877) 423-8444

INSTRUCTIONS FOR MAGAZINE REPLACEMENT

BOBRICK ADA COMPLIANT SANITARY NAPKIN/TAMPON VENDOR MODELS B-2706, B-3706, B-37063, B-370634, B-370639, B-4706, B-47064, B-47069

TOOLS REQUIRED: Ratchet with 3/8" Socket

To replace individual Magazine Assembly:

Note: Remove napkin boxes and/or tampon tubes from vendor before replacing Magazine Assemblies.

- 1. Unlock and remove Coin Box from unit.
- 2. Remove two (2) Hex nuts (#10-32) from each Napkin and Tampon Magazine Assemblies using a ratchet with 3/8" socket.
- 3. Pull Napkin Magazine forward and out of cabinet.
- 4. Pull Tampon Magazine forward and out of cabinet.
- 5. Install new Napkin and Tampon Magazine Assemblies into cabinet in the reverse order as they were removed and reinstall existing Hex nuts.
- 6. Replace Coin Box into position below magazines and lock in place.


REPLACEMENT PARTS

For ClassicSeries® Model Numbers B-2706, B-3706 and TrimLineSeries™ Model Numbers B-37063, B-370634, B-370639

_		
_	-	_

Free	
3706-256	Door Assembly Kit, Free (includes Bezel Assemblies)
3706-195	Tampon Bezel Assembly Kit Free
3706-196	Napkin Bezel Assembly Kit Free
3706-294	Tampon Magazine Assembly Kit Free
3706-295	Napkin Magazine Assembly Kit Free
Token	
3706-166	Token Conversion Kit
3706-197	Tampon Bezel Assembly Kit Token
3706-198	Napkin Bezel Assembly Kit Token
3706-296	Tampon Magazine Assembly Kit Token
3706-297	Napkin Magazine Assembly Kit Token
3706-405	Tokens (qty. 100)
25¢	
3706-157	Door Assembly Kit, 25¢ (includes Bezel Assemblies)
3706-191	Tampon Bezel Assembly Kit 25¢
3706-192	Napkin Bezel Assembly Kit 25¢
3706-205	Tampon Magazine Assembly Kit 25¢
3706-206	Napkin Magazine Assembly Kit 25¢
Universal	
3706-60	Product Tray Kit
3706-344	Coin Box Kit
3706-240	Coin Conversion Kit, Free, 25¢ (includes Bezel Assemblies)
383257	Door Lock & Key (keyed to Cat 74)
3706-175	Door Lock & Key (keyed to Cat 118 for added security)
370634-17	2" Skirt FOR Semi-Recessing

370639-18 6" Skirt for Surface-Mounting

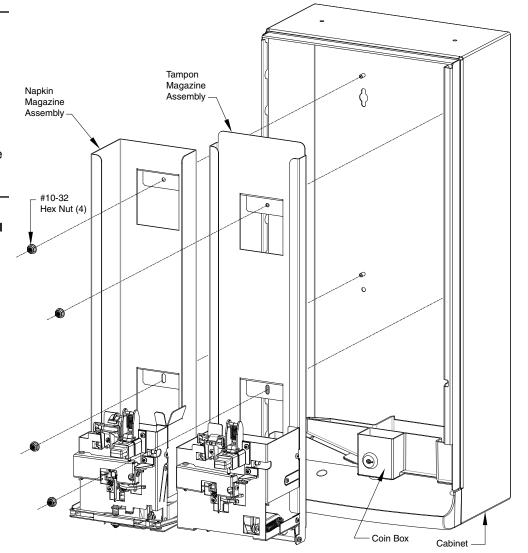

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213: Tel: (818) 982-9600, FAX: (818) 503-1102 New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, FAX: (518) 877-5029, or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada: Tel: (877) 423-6555 • FAX: (877) 423-8555 • Western Canada: Tel: (877) 423-6444 • FAX: (877) 423-8444

© 2018 Bobrick Washroom Equipment, Inc. Form No. 3706-275 r6/22/18 Printed in U.S.A.

BOBRICK