


ADJUSTING ADAPTER INSTRUCTIONS

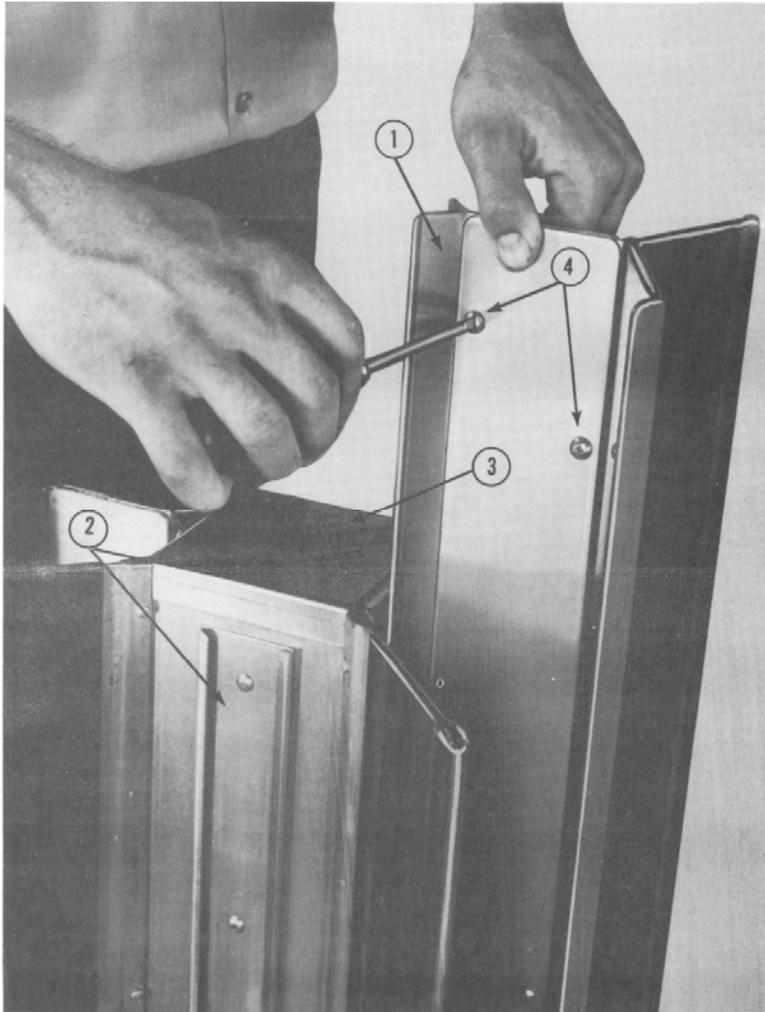

- 1. Adapter**
- 2. Adapter Channel**
- 3. Center Post**
- 4. Philips Head Screws**

1. Lift adapter (1) from channel (2) on post (3) until Philips head screws (4) are easily reached with screw driver.

2. Loosen the Philips head screws (4) that hold adapter together. There are four Philips head screws – two on top and two on the bottom.

3. Adapter (1) telescopes, slide adapter in or out to desired position and tighten screws (4).

4. Slide adapter (1) down channel to original location.