
Visit www.metro.com/resources or scan the QR code for assembly videos, warranty information, cleaning guidelines and more!


Scanner ici pour visionner une vidéo de l'assemblage détaillé

Para ver un video de instrucciones detalladas sobre el montaje, escanee aquí.

ASSEMBLY AND USE INSTRUCTIONS
SECURITY UNIT – SUPER ERECTA®

Save this document for application, load rating, and safety reference.

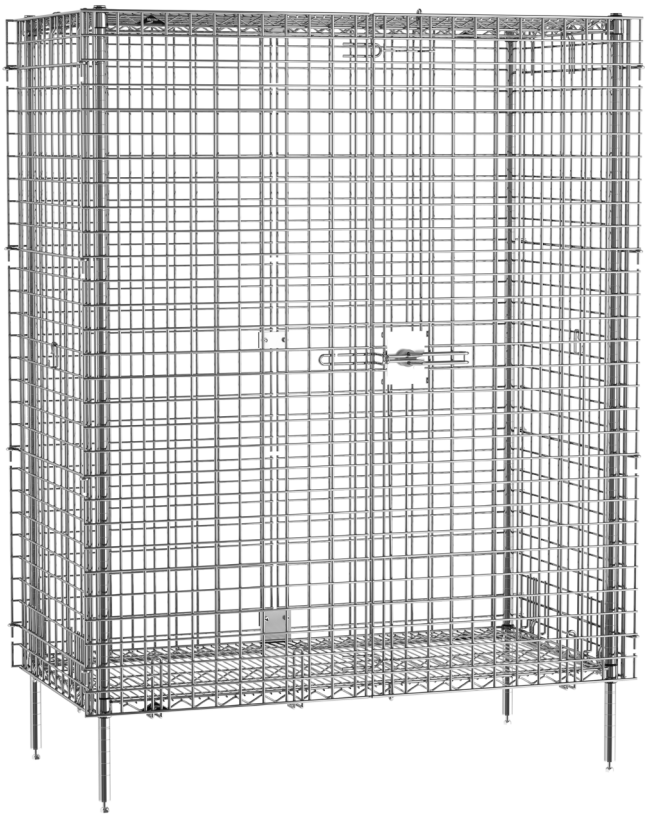

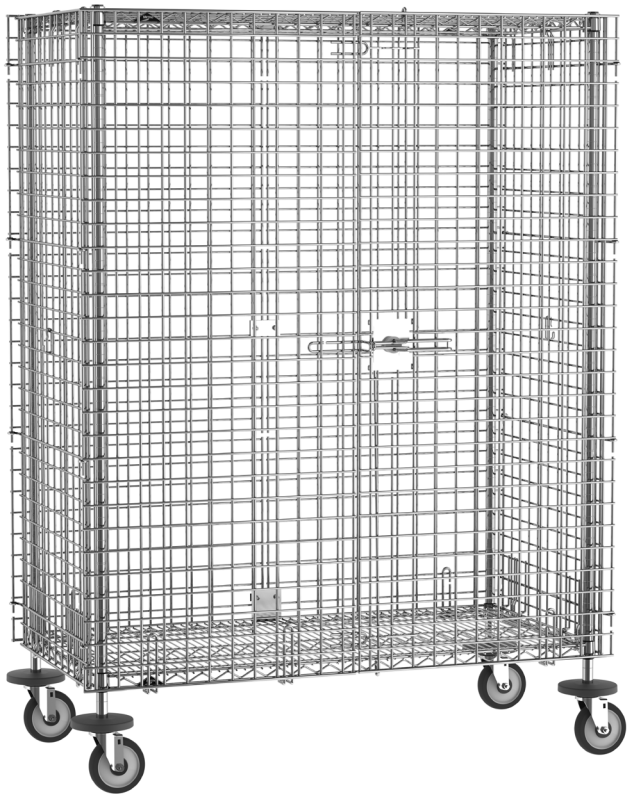

⚠ CAUTION - MAXIMUM LOAD CAPACITY

Load capacity per shelf (evenly distributed)	
Super Erecta (SES)	
800 lbs. (363 kg)	18 in. to 48 in. (457 mm to 1219 mm)
600 lbs. (272 kg)	54 in. (1370 mm) or longer

Load capacity per unit (evenly distributed)
Stationary units have a maximum load capacity (evenly distributed) of 2,000 lbs. (907 kg).
Mobile units have a maximum capacity of three times the caster load rating up to but not exceeding 1,000 lbs. (453 kg) total. Consult the Metro catalog for caster load ratings.
The total weight of the assembled drying unit must remain within the shelving system's rated load capacity.


Failure to follow these instructions could result in personal injury or property damage.

⚠ WARNING - TIPPING HAZARD


- Do not stand or climb on shelving.
- Place heavy objects on lowest shelf.
- Distribute weight as evenly as possible.
- Do not drop heavy objects on shelves or subject units to shock such as forklifts or dollies.
- Move mobile units along long axis only. (↔)
- Shelves should be assembled with a maximum spacing of 30 in. (76cm). Additional accessories (i.e. 3-sided frames) may be used in lieu of shelves to safely support the shelving unit.
- Place shelving on solid and level floors. Level the unit by adjusting the leveling feet.
- Install bottom shelf as low as possible.
- For 18 in. (457mm) deep Security Units, use casters no larger than 5 in. diameter.

TWO PEOPLE REQUIRED TO ASSEMBLE UNIT


Security Components

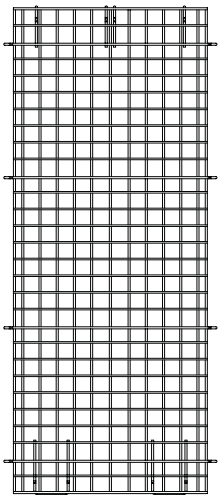


End Panels
(2)

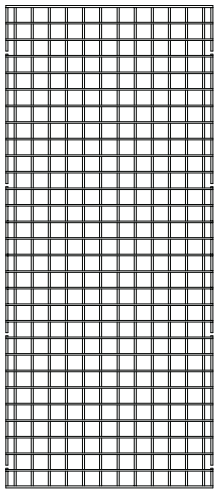

Back Panels
(2)

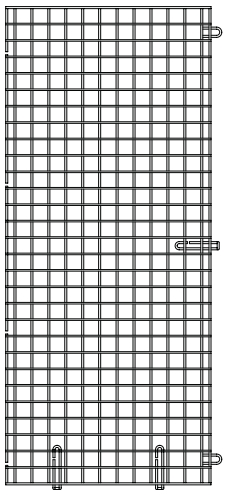


*Right Door
Panel

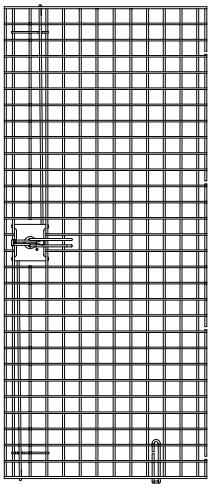


*Left Door
Panel




Bushings
(16)

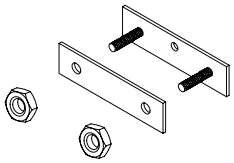


Upper Back Plate
with long studs

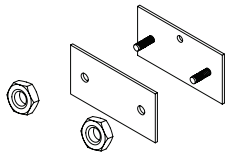


Middle Back Plate
with short studs

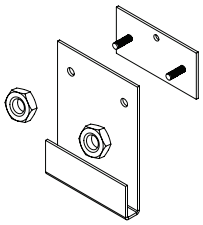

Lower Back Plate
with short studs



Post (4)

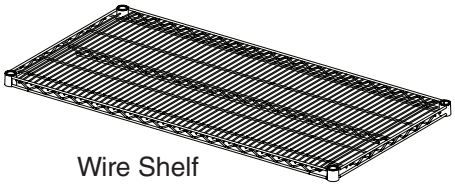

Wire Shelf

Optional:



Brake
Caster (2)




Swivel
Caster (2)




Door Clips
(2)

Tool Required


3/8 in. Wrench

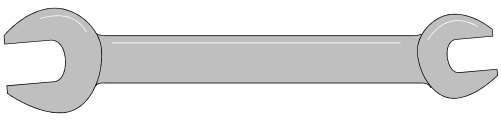

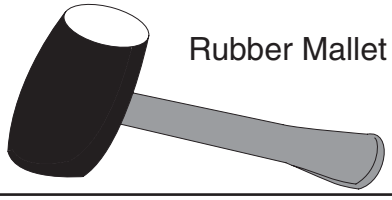

Rubber Mallet

Stem Caster Installation

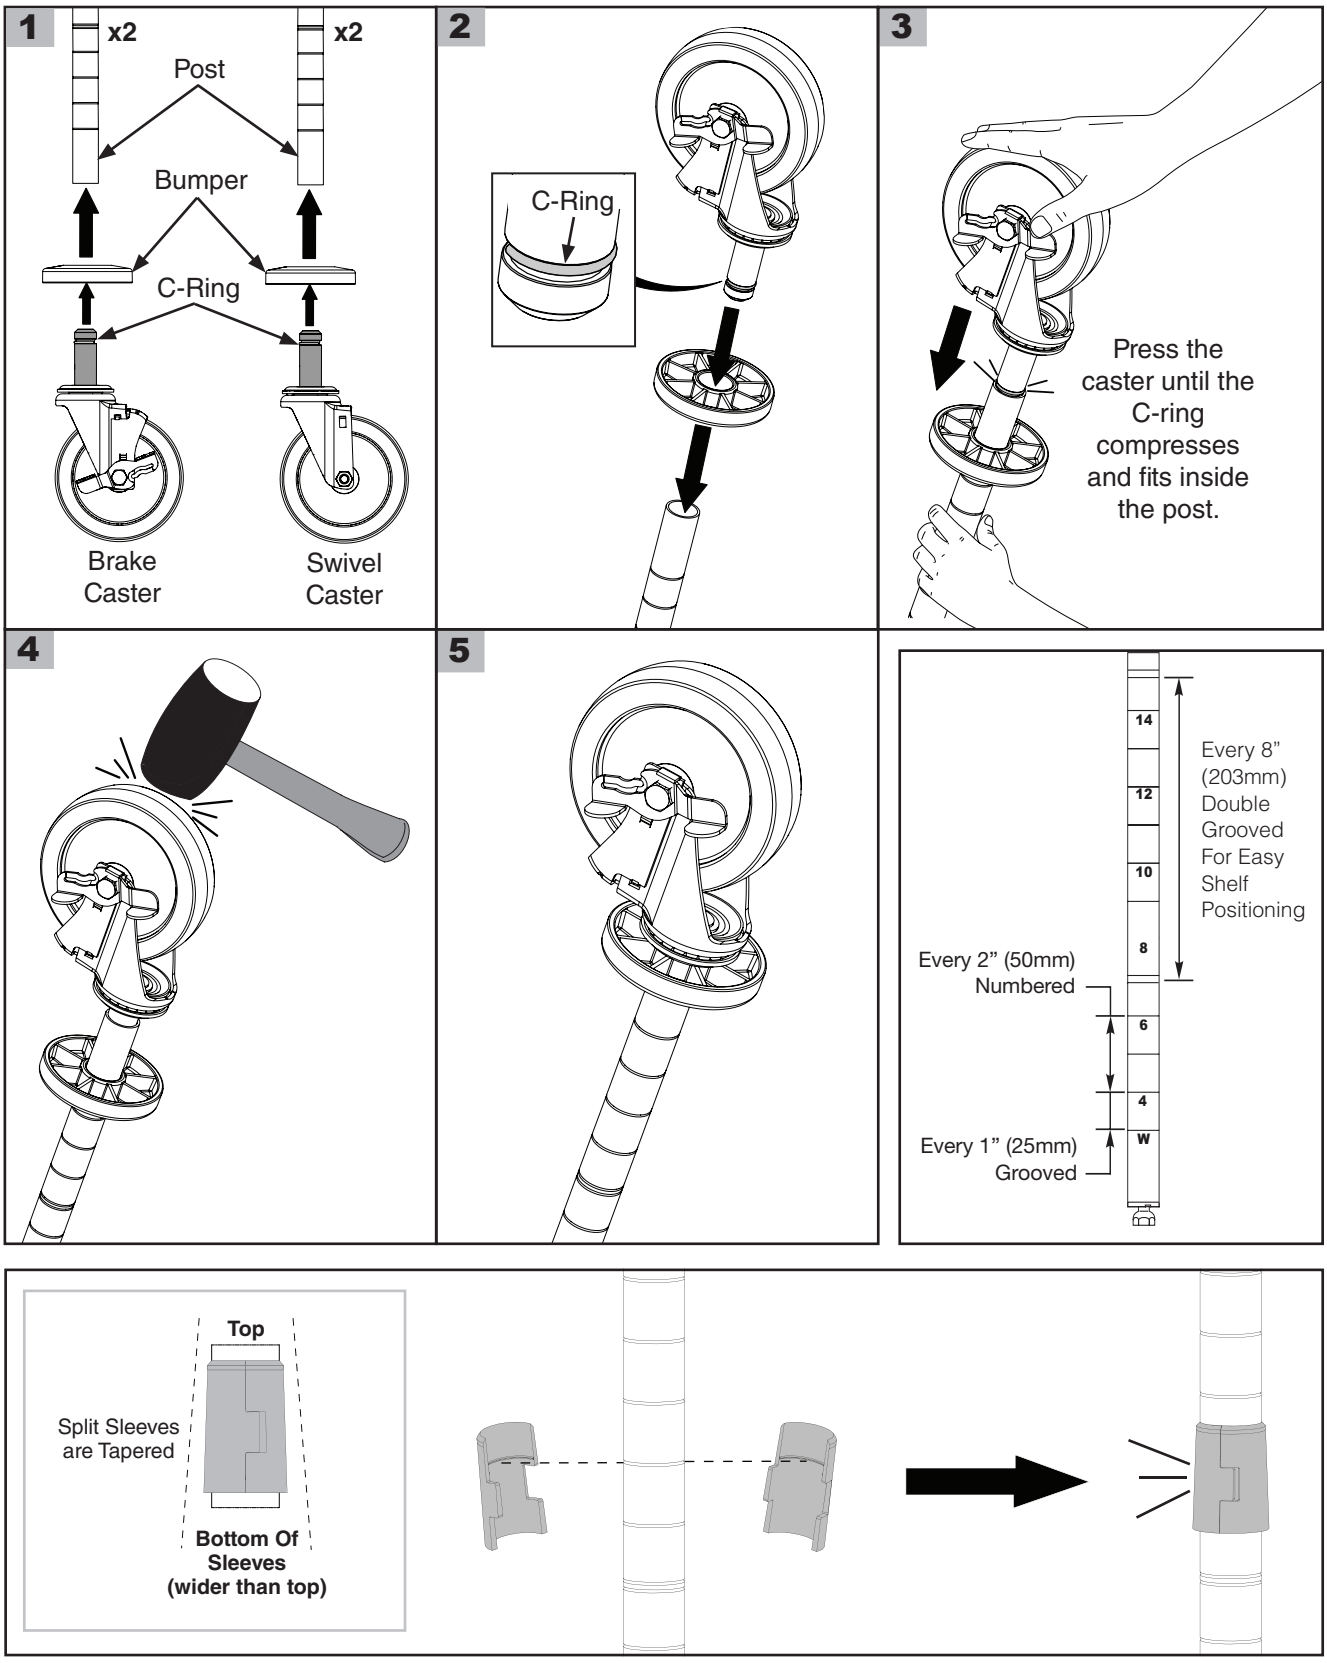


Shelf Installation


1 Bottom Shelf Placement

Maintain at least 6" (152mm) of clearance between the floor and the lowest shelf for proper cleaning.

Stationary: Groove #9

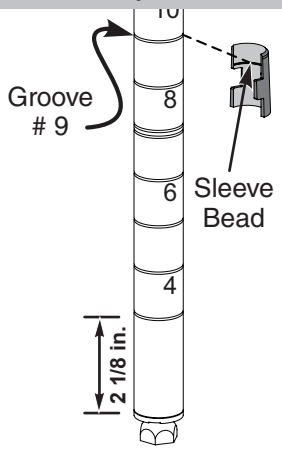


Mobile: Groove #5

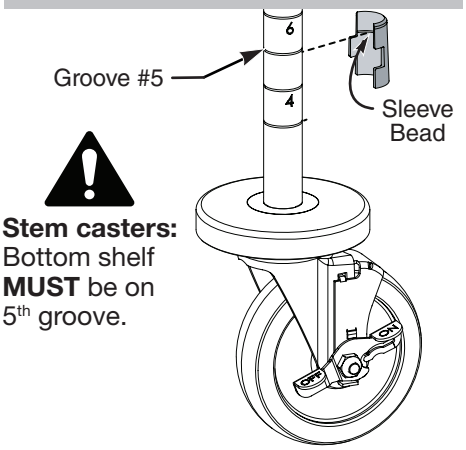


Stem casters: Bottom shelf **MUST** be on 5th groove.

Dolly: Groove #5

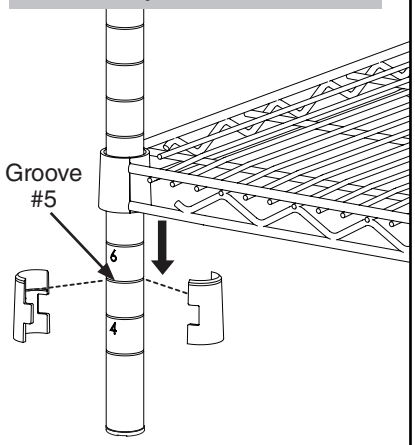

2

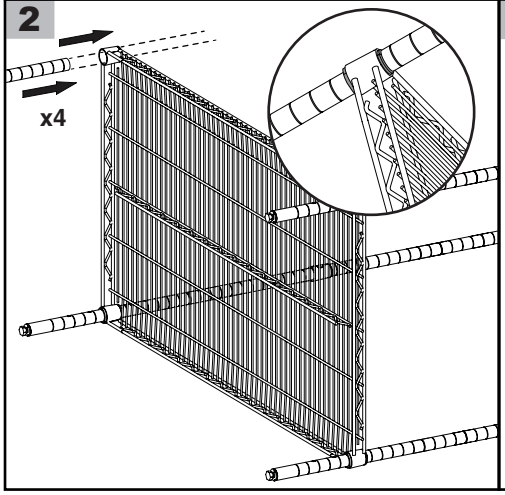


3 Optional Shelves


Note: Do not install intermediate shelves on the following:

Stationary: Grooves #34 to #39.

Mobile: Grooves #30 to #36

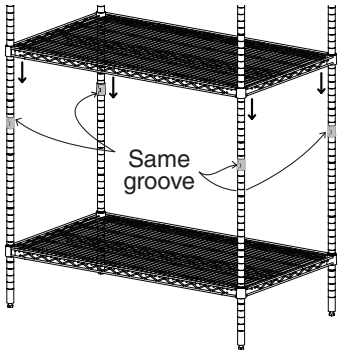


4

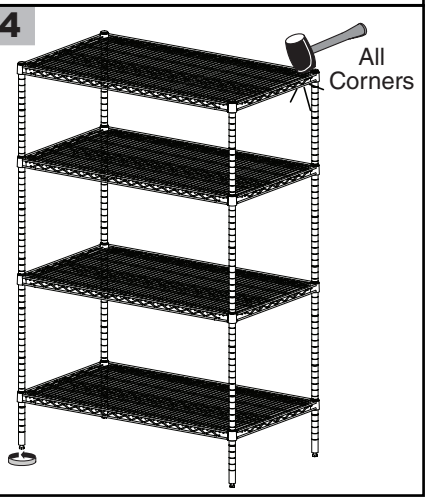


Dolly Installation


1

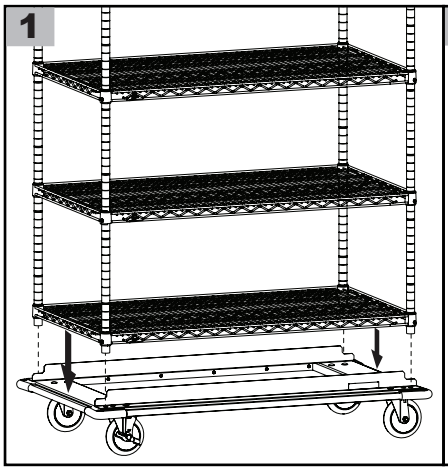

2

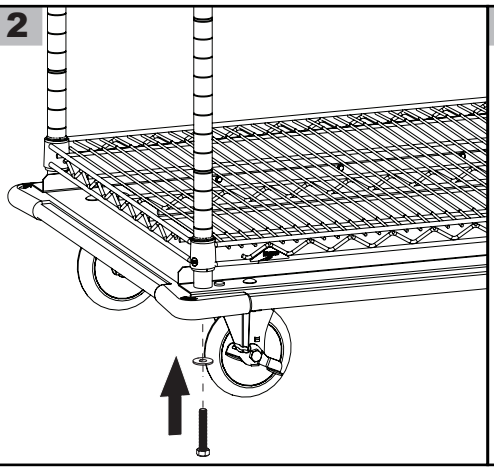

3

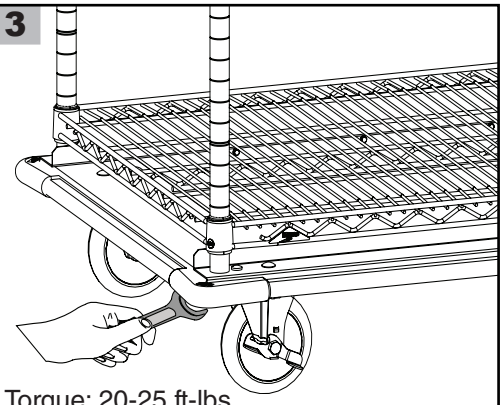


Torque: 20-25 ft-lbs


Refer to L01-236 for detailed instructions.

Security Cage Assembly

1

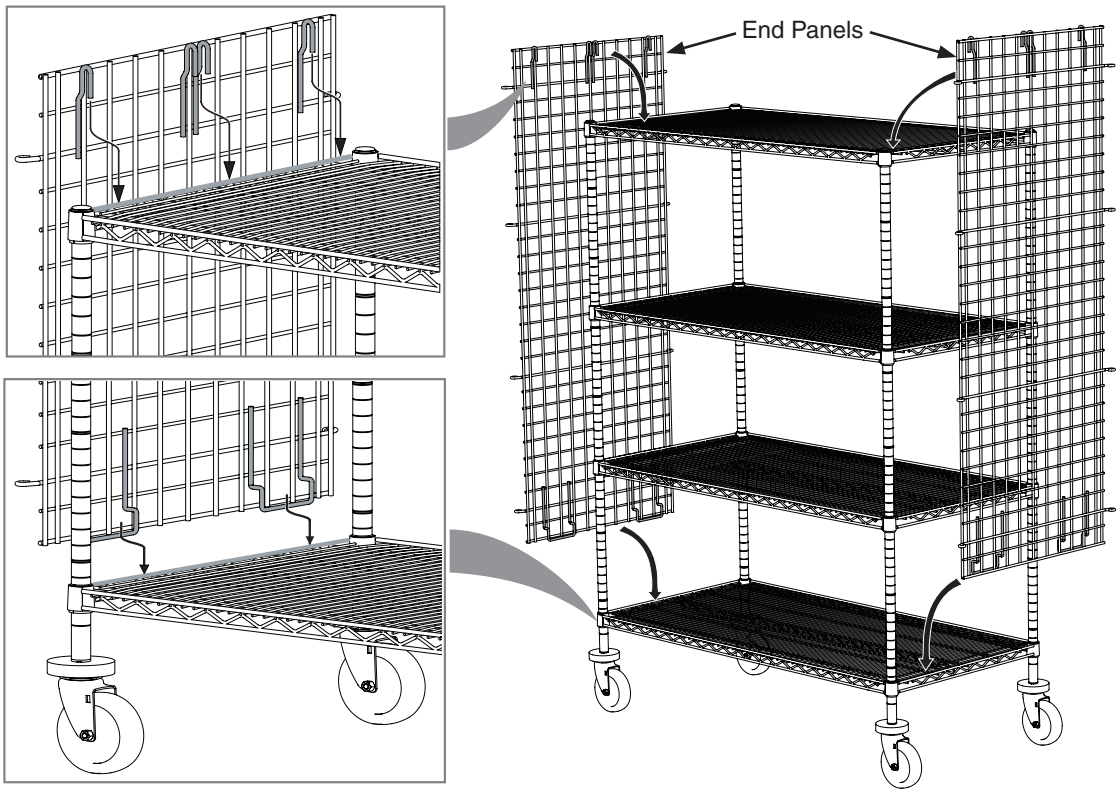

2

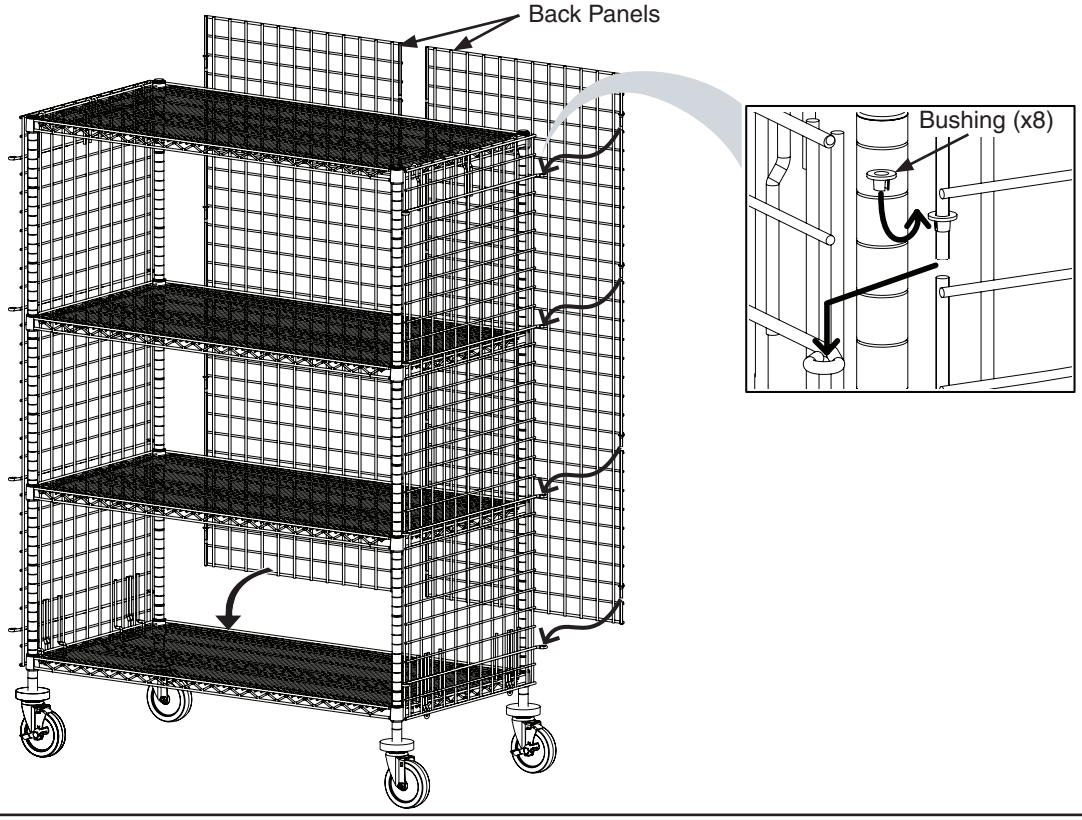

3


3/8 in. wrench




Upper Back Plate with long studs and #10-24 Hex Nuts


Middle Back Plate with short studs and #10-24 Hex Nuts


Lower Back Plate with short studs and #10-24 Hex Nuts

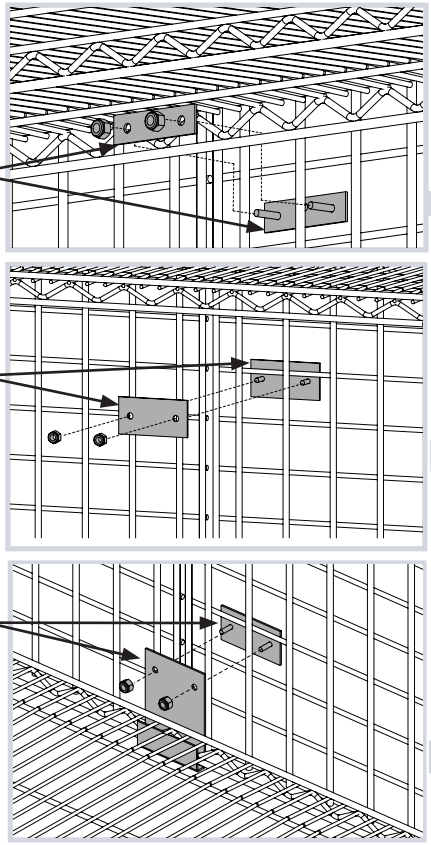

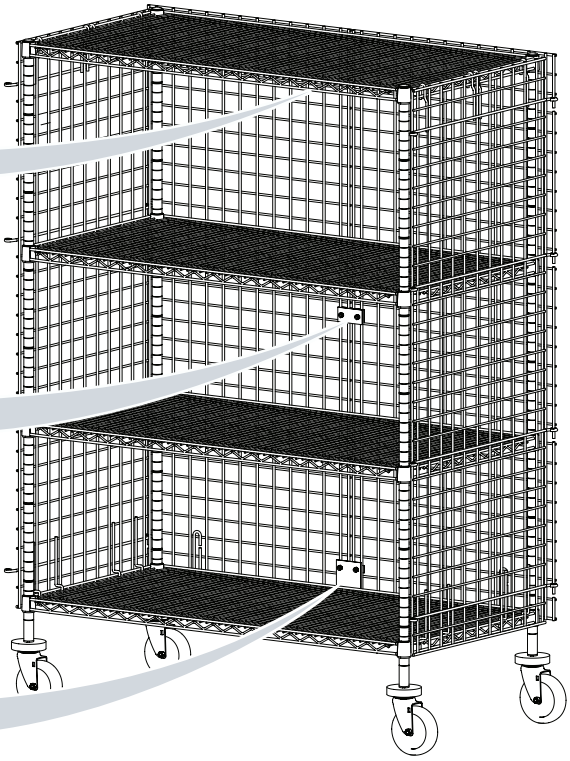


4

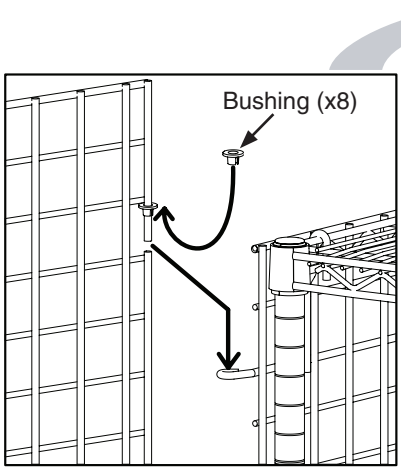


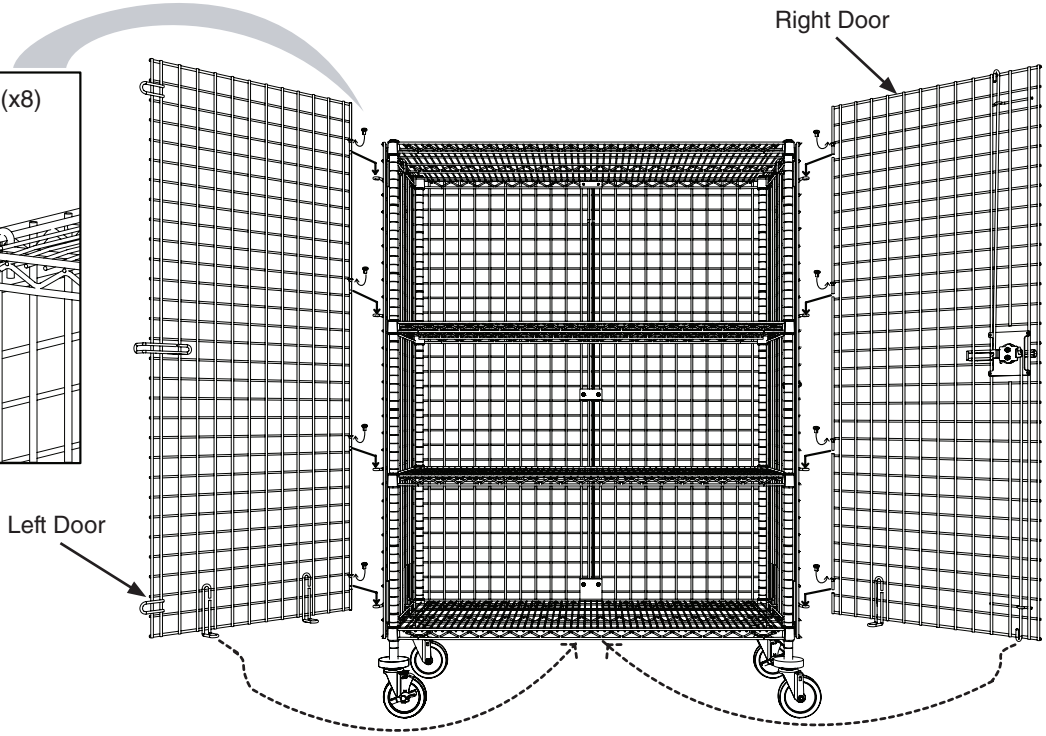


Door locking operation

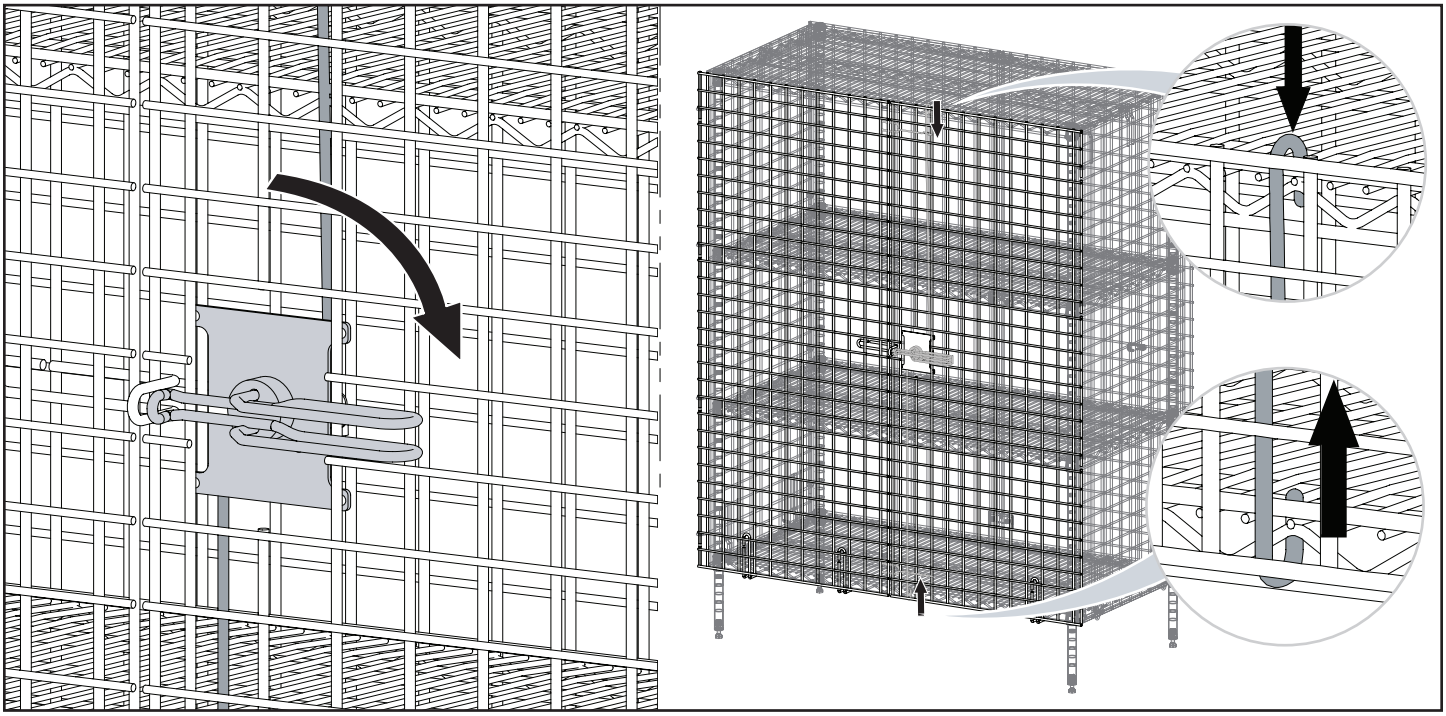


Door unlocking operation

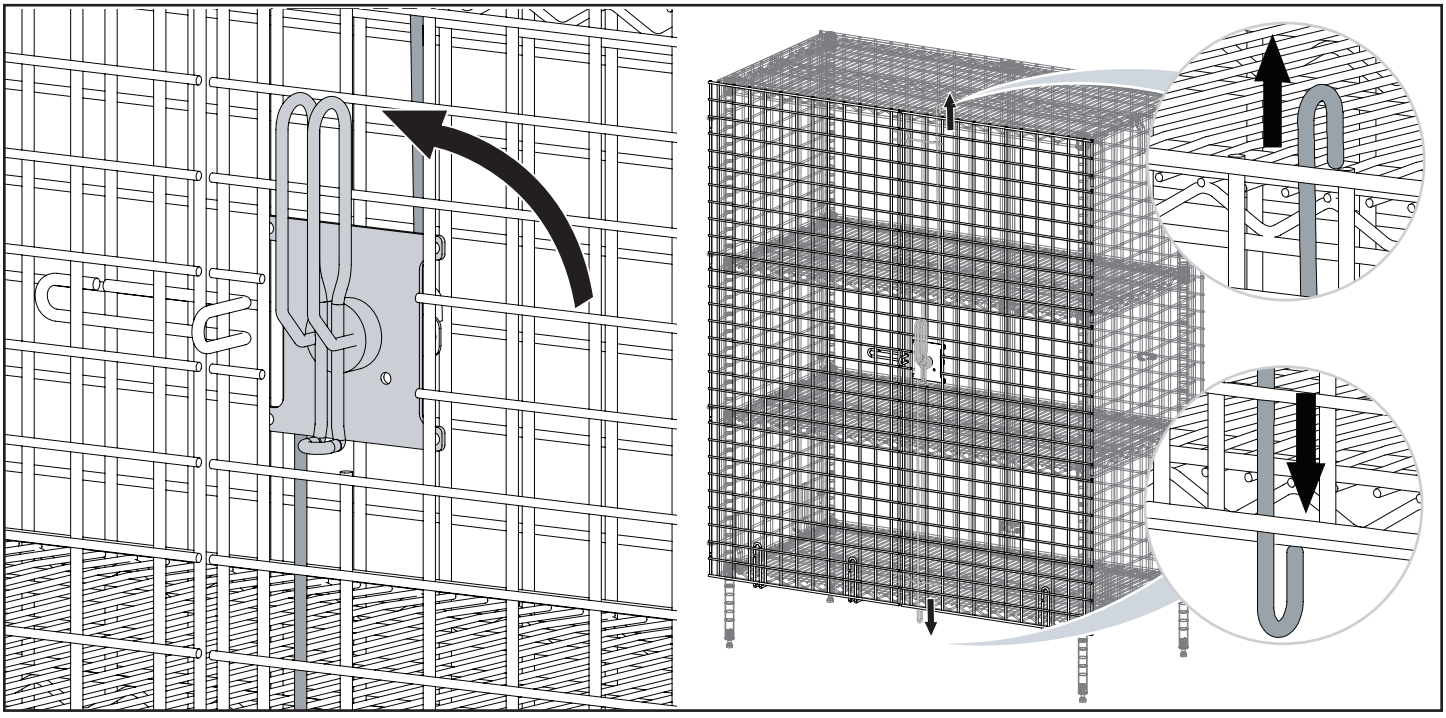

Door Clips

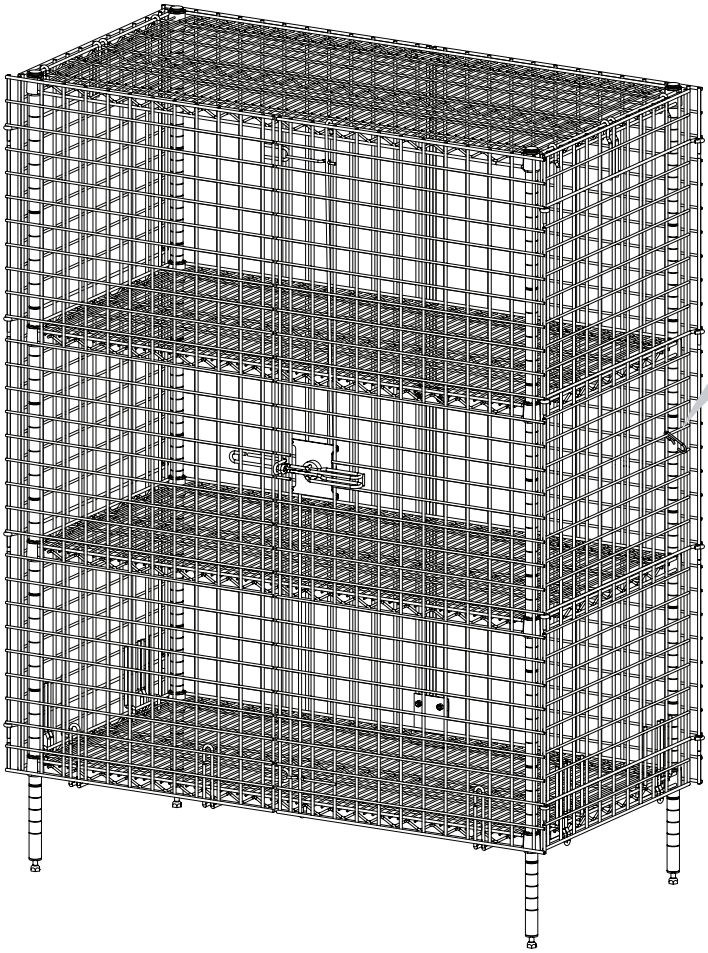

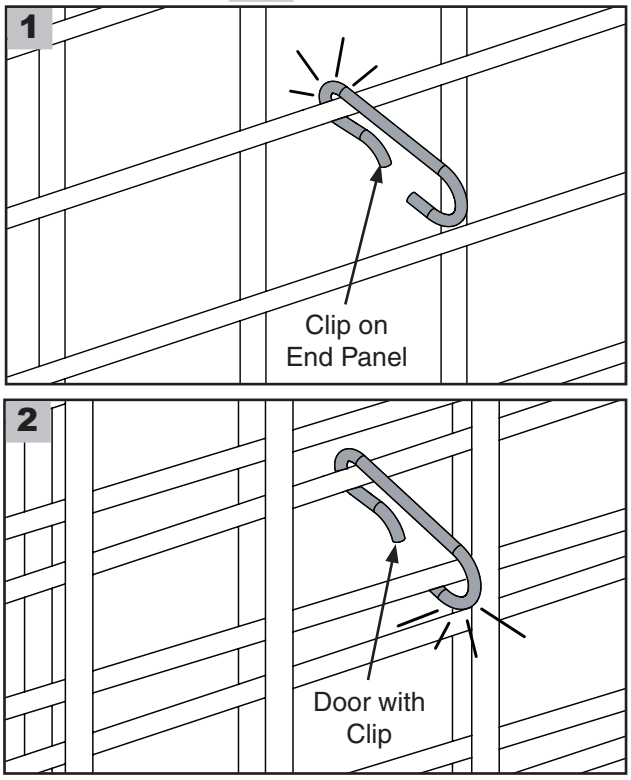

© 2025 InterMetro Industries Corporation, Wilkes-Barre, PA 18705
L01-400 REV D 09/25

METRO®
We put space to work.®

ALI GROUP

WELBILT
an Ali Group Company