


Empty the booster - Vaciar el termo - Vider le surchauffeur




STEP 1

PRESS BUTTONS SIMULTANEOUSLY

Disconnect the power supply - Débrancher l'appareil - Desconecte la alimentación eléctrica

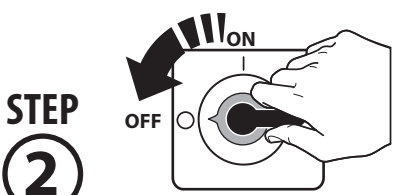


STEP 2

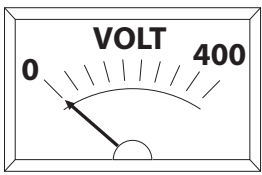


SHOCK HAZARD

Remove the pressure switch control hose - Retire la manguera del presostato - Retirez le tuyau du pressostat

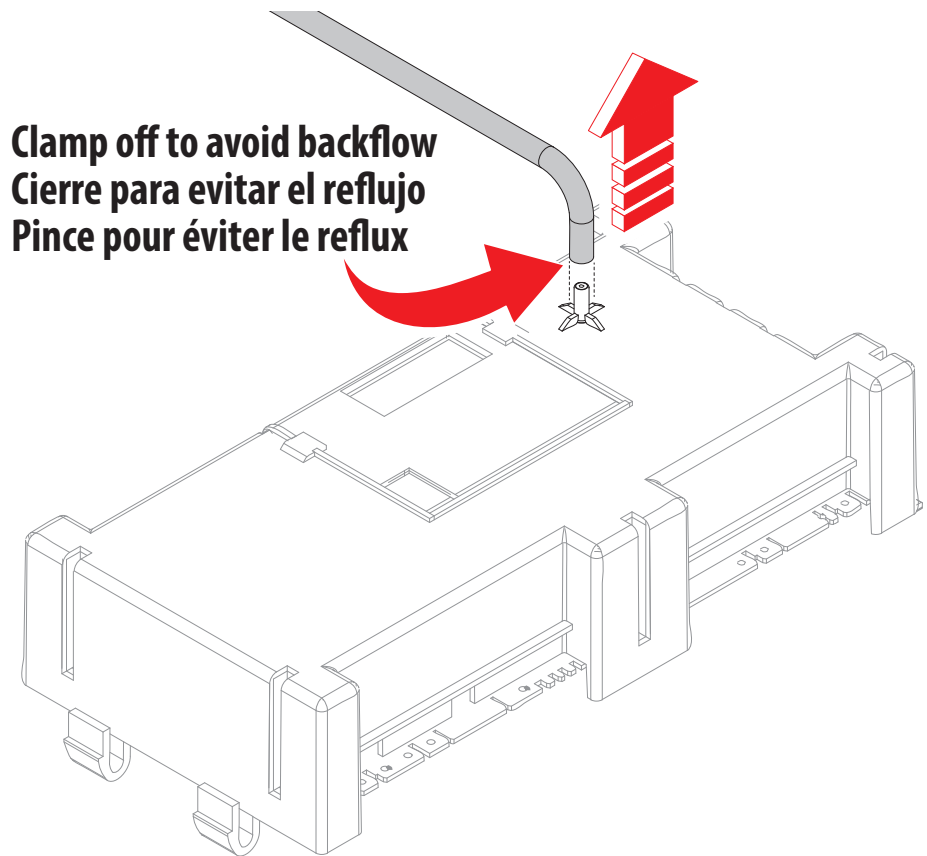


STEP 3

Remove all connectors - Retire todos los conectores - Retirez tous les connecteurs

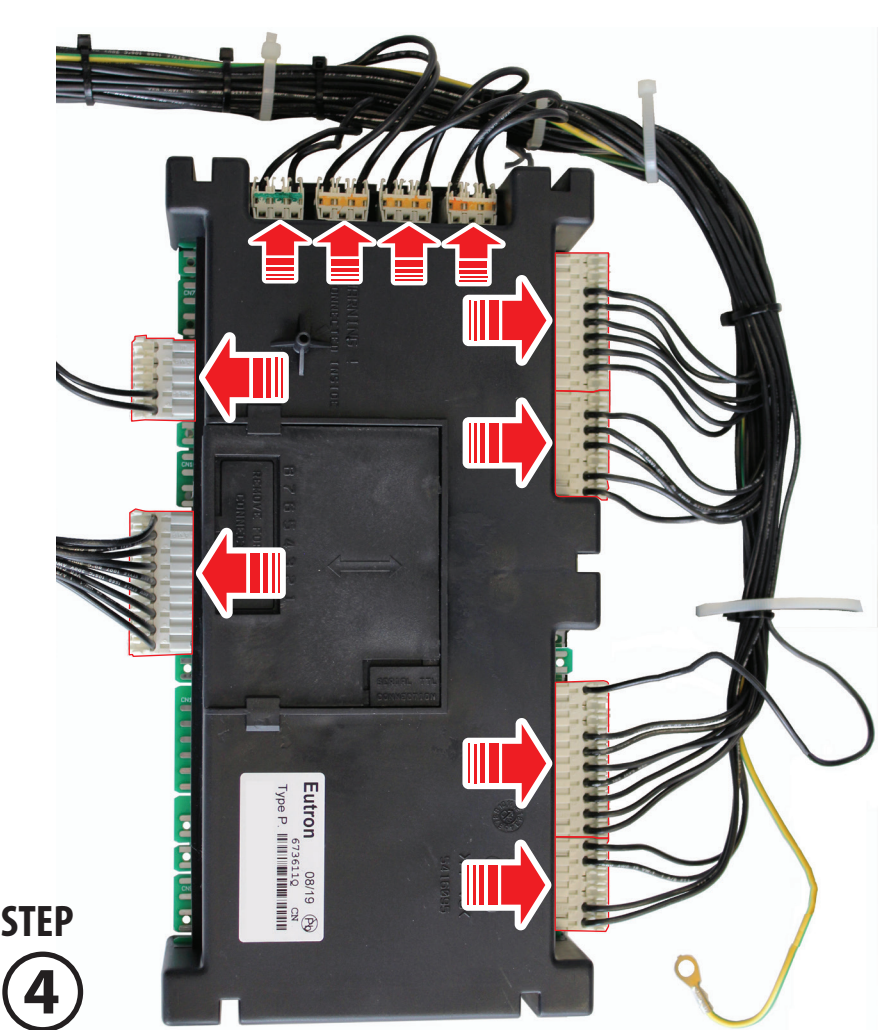


STEP 4

REPLACE EXISTING BOARD WITH NEW PART

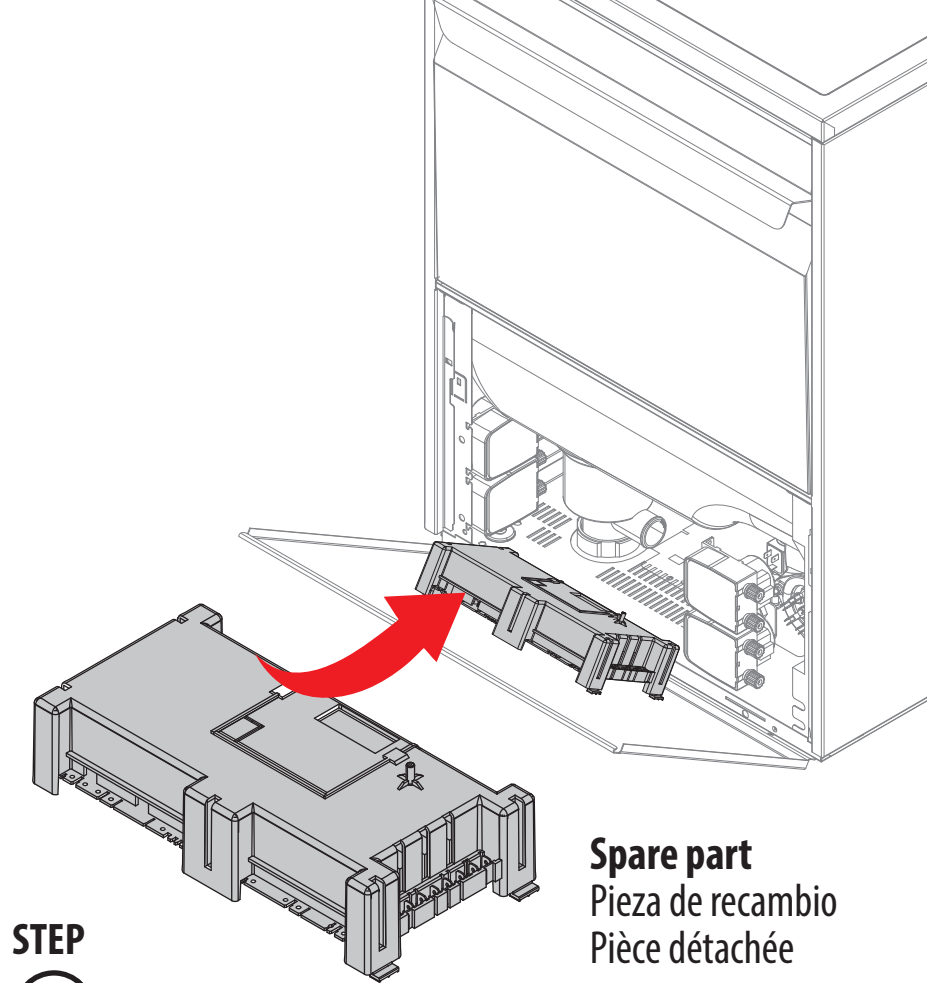

STEP 5

Refit the previously removed connectors - Vuelva a montar los conectores que retiró previamente - Remontez les connecteurs précédemment démontés

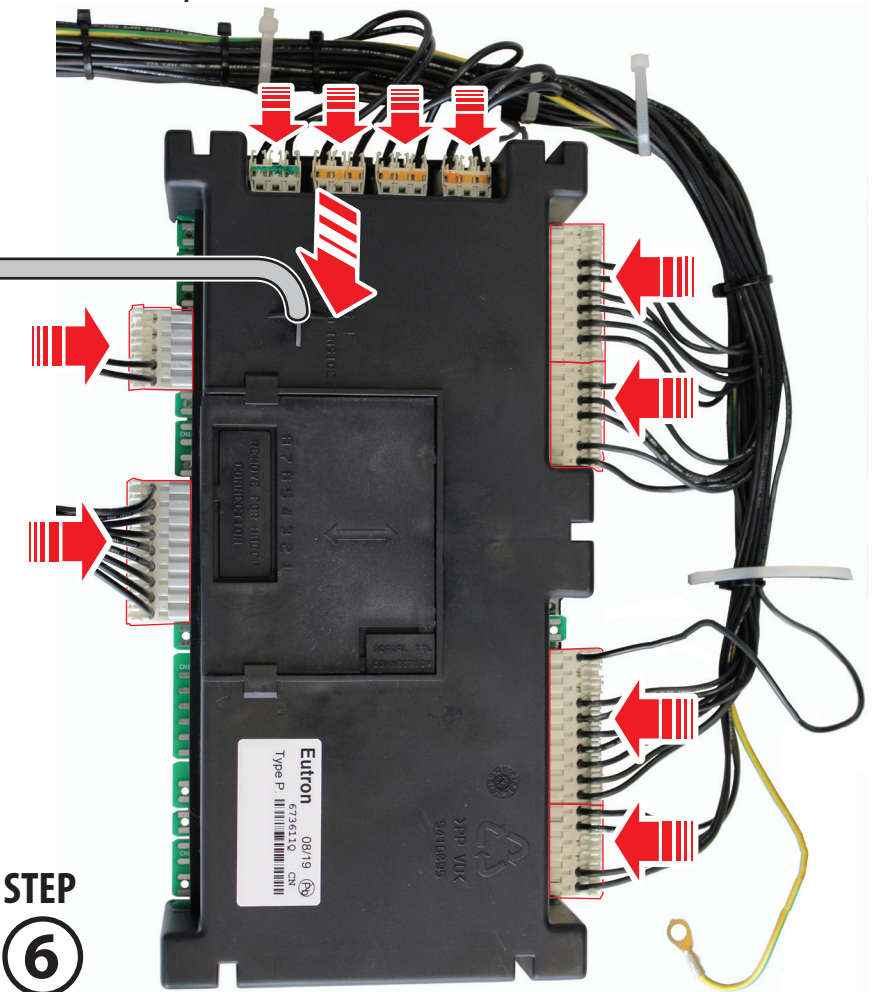

STEP 6

QUESTIONS? NEED ASSISTANCE? PLEASE CALL TECHNICAL SUPPORT (215) 624-4800
¿PREGUNTAS? ¿NECESITA AYUDA? POR FAVOR LLAME A SOPORTE TECNICO (215) 624-4800
DES QUESTIONS? BESOIN D'ASSISTANCE? VEUILLEZ CONTACTER LE SUPPORT TECHNIQUE (215) 624-4800