


Cool Down Procedures



1. Select the cleaning symbol from the main menu (full serve mode) or the thermometer symbol (quick serve mode).



2. In the temperature screen, select the blue thermometer symbol to disable heating and start the cooling cycle.

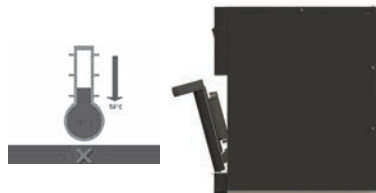

3. The cooling progress is displayed. To reduce the cool down time, keep the appliance door open slightly.




4. Once the cooling process is complete you will see a 'clean cavity' screen. The oven is now ready for cleaning.




IT IS VERY IMPORTANT TO COOL DOWN THE OVEN BEFORE CLEANING.


Cleaning the Oven and Oven Parts

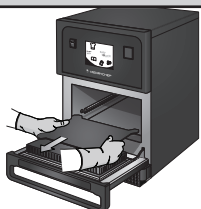


1. Open the appliance door and remove the cook plate and any other cooking accessories from the cavity.

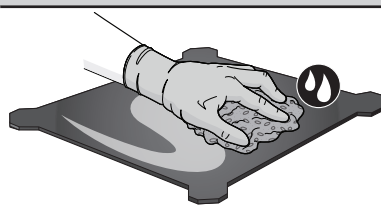


2. Wash all parts in warm soapy water using a sponge. Rinse off and dry using a clean cloth.

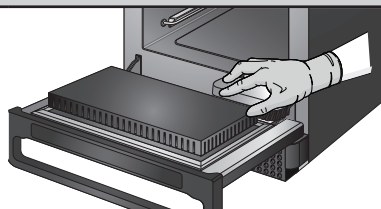


3. Use a dry clean brush to remove any food particles from between the cavity floor and the inside of the front door.

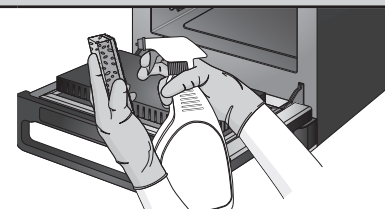


4. Spray Merrychef approved cleaner onto a sponge and clean all internal surfaces **except the cavity roof (jet plate) and door seal**.

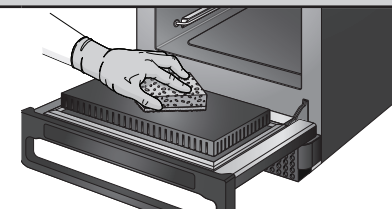


5. For difficult areas, leave to soak for 10 minutes with the appliance door open and then use a non-abrasive nylon scrub.

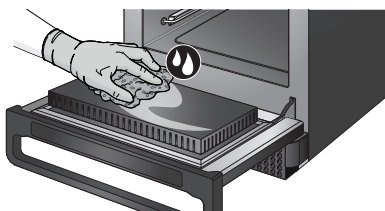


6. Wash all surfaces using a wet clean cloth. The cavity roof and door seal can also be wiped if necessary to remove food debris, but they do not need regular cleaning.

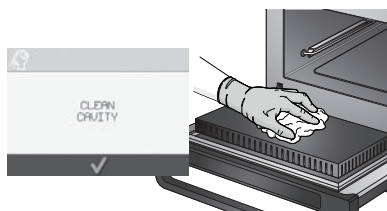


7. Dry oven and parts using a clean cloth. Press the tick on the 'clean cavity' screen to continue.

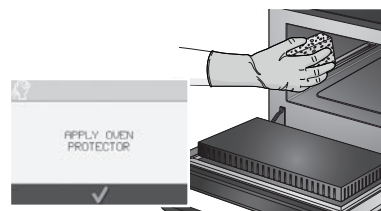

8. Apply oven protector (optional). Use a sponge to spread it lightly on all internal surfaces except the cavity roof and door seal. Press the tick on screen to continue.

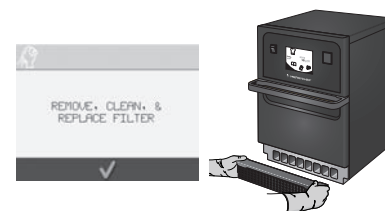

9. Replace the cook plate and close the door. Remove the air filter and wipe it clean or wash in soapy water. Dry and replace and then press the tick on screen to continue.

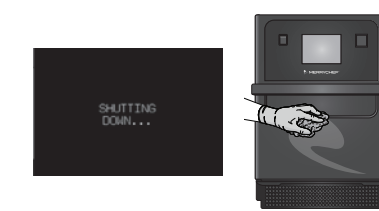

10. The appliance will now shut down. Wipe the outside of the appliance with a damp cloth.

Note: If oven protector has been applied, after step 10, switch on the oven to cure the protective chemical.



- Wear protective glasses and protective rubber gloves during the cleaning procedure.
- Do not scrub the roof (jet plate) or door seal.
- Do not use metallic scourers on any part of the appliance at any time.

- Do not use a caustic cleaner on the oven as this will cause permanent damage to the oven.
- Do not spray cleaning product directly into the cavity.
- Do not use the appliance without a clean air filter in place.