Parts Manual

Commercial
Gas Ranges



351S24(L/N), 351S36(L/N), 351S60(L/N), 351S36G24(L/N), 351S60G24(L/N), 351S60GS24(L/N), 351S36G12(L/N), 351S36SU(L/N), 351S36G36(L/N), 351S60G36(L/N), 351S60G48(L/N), 351C36(L/N)

REVISED 04/2025

Parts Manual

Contents

Safety Precautions 3
Gas Pressure 3

351S24(L/N)

Range Main Body Parts List & Diagram 4–5
Gas Control Assembly Parts List & Diagram 6
Oven Tank Assembly Parts List & Diagram 7

351S36(L/N)

Range Main Body Parts List & Diagram 8-9
Gas Control Assembly Parts List & Diagram 10
Oven Tank Assembly Parts List & Diagram 11

351S60(L/N)

Range Main Body Parts List & Diagram 12–13
Gas Control Assembly Parts List & Diagram 14
Oven Tank Assembly Parts List & Diagram 15

351S36G12(L/N)

Body Parts List & Diagram 16-17
Oven Tank Assembly Parts List & Diagram 18

351S36G24(L/N)

Body Parts List & Diagram 19-20
Oven Tank Assembly Parts List & Diagram 21
Oven Door Assembly Parts List & Diagram 22

351S36G36(L/N)

Range Main Body Parts List & Diagram 23-24
Gas Control Assembly Parts List & Diagram 25
Oven Tank Assembly Parts List & Diagram 26

351S60G24(L/N)

Range Main Body Parts List & Diagram 27-28
Gas Control Assembly Parts List & Diagram 29
Oven Tank Assembly Parts List & Diagram 30

351S60G36(L/N)

Range Main Body Parts List & Diagram 31-32
Gas Control Assembly Parts List & Diagram 33
Oven Tank Assembly Parts List & Diagram 34

351S60G48(L/N)

Range Main Body Parts List & Diagram 35-36
Gas Control Assembly Parts List & Diagram 37
Oven Tank Assembly Parts List & Diagram 38

Intertek 4003027

Conforms to ANSI STD Z83.11b-2009 (R2011)
Conforms to CSA STD 1.8b-2009 (R2011) NSF
Tested by ETL

Parts Manual

351S60GS24(L/N)

Range Main Body Parts List & Diagram 39-40
Gas Control Assembly Parts List & Diagram 41
Oven Tank Assembly Parts List & Diagram 42

351S36SU(L/N)

Range Main Body Parts List & Diagram 43-44
Gas Control Assembly Parts List & Diagram 45
Oven Tank Assembly Parts List & Diagram 46

351C36(L/N)

Range Main Body Parts List & Diagram 47-48
Gas Control Assembly Parts List & Diagram 49
Oven Tank Assembly Parts List & Diagram 50

Wiring Diagram 51

Safety Precautions

CAUTION:

- Failure to comply with the following operation instructions could lead to potential hazards and/or unsafe practice and could result in injury and damage to product and property.

NOTICE:

- Local codes regarding installation vary greatly from one area to another. The National Fire Protection Association, Inc., states in its NFPA96 latest edition that Local codes are “Authority Having Jurisdiction” when it comes to requirement for installation of equipment. Therefore, installation should comply with all Local codes.
- This product is intended for commercial use only. Not for residential use.

WARNING:

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other equipment.
- Improper installation, adjustment, alteration, service or maintenance could lead to property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing CPG equipment. This manual must be retained for future reference.
- A factory authorized agent must handle all maintenance and repair.

Gas Pressure

- The appliance and its individual shutoff valve (to be supplied by user) must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of ½ PSI (3.45 kPa).
- The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ PSI (3.45 kPa).


351S24(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	2	Back Panel Support
3	-	1	Inner Flue Assembly
4	-	2	Slide Rail
5	-	1	Right Side Panel
6	351228058007	1	Crumb Tray - 19" x 26"
7	351302090149	4	Adjustable Leg with Plate
8	351302130384	1	Oven Burner
9a	35128051088	1	Oven Pilot - NAT
9b	351302130447	1	Oven Pilot - LP
10	351302170058	1	Thermocouple
11a	351302150198	1	#36 Burner Orifice - NAT
11b	351302150189	1	#50 Burner Orifice - LP
12	-	1	Orifice Elbow
13a	351302190428	1	Door Hinge - Right
13b	351302190430	1	Door Hinge - Left
14	-	1	24" Kick Plate
15	-	1	Oven Door Assembly
16	351302070220	1	Door Handle
17	-	1	Oven Tank Assembly
18	-	1	Left Side Panel
19	351301130111	1	Oven Knob
20	351202230111	4	Stove Knob
21	-	1	Front Panel
22	351302220064	1	Oven Thermostat Valve
23	351228046045	2	Range Pilot Pipe (Short)
24	351228046016	2	Range Pilot Pipe (Long)
25	351302130019	4	Range Pilot
26	351128051028	2	Burner Assembly (Short)
27	351128051027	2	Burner Assembly (Long)
28	351302250132	4	Burner Grate

351S24(L/N)


RANGE MAIN BODY

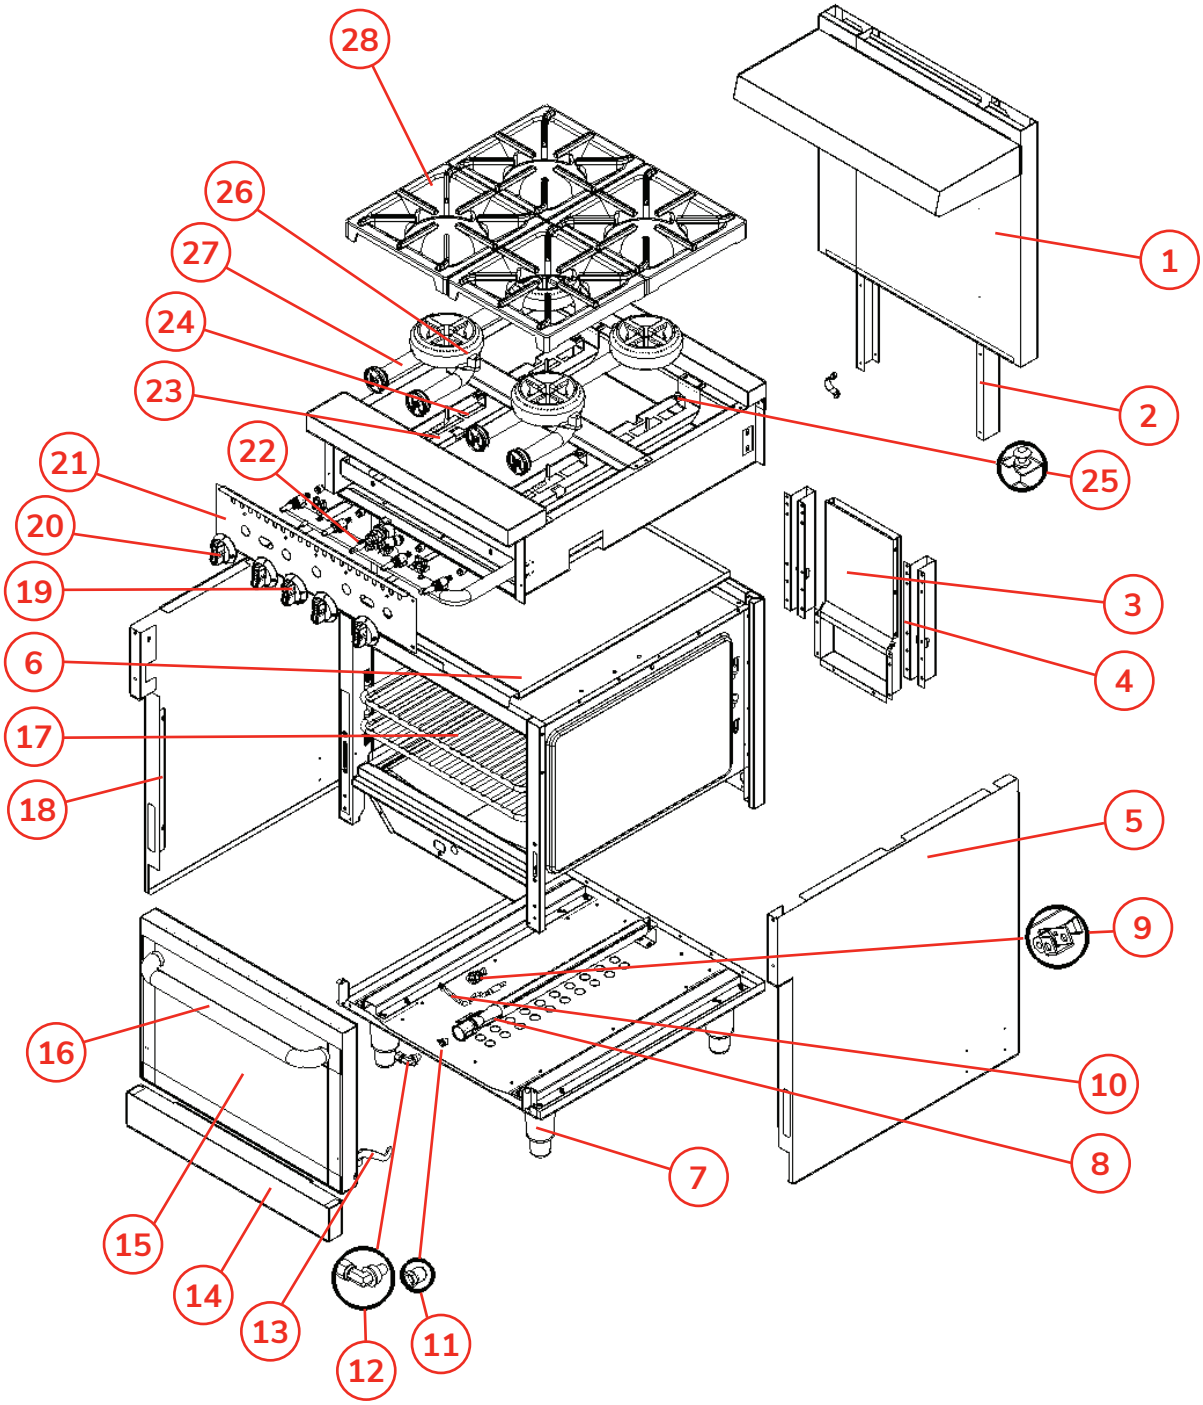

351S24(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150198	4	#36 Burner Orifice - NAT
1b	351302150190	4	#51 Burner Orifice - LP
2	351302050051	4	Gas Stove Valve
3	351302220027	2	Dual Pilot Valve
4	-	1	Screw
5	351302220064	1	Oven Thermostat Valve
6	-	1	Gas Inlet Pipe

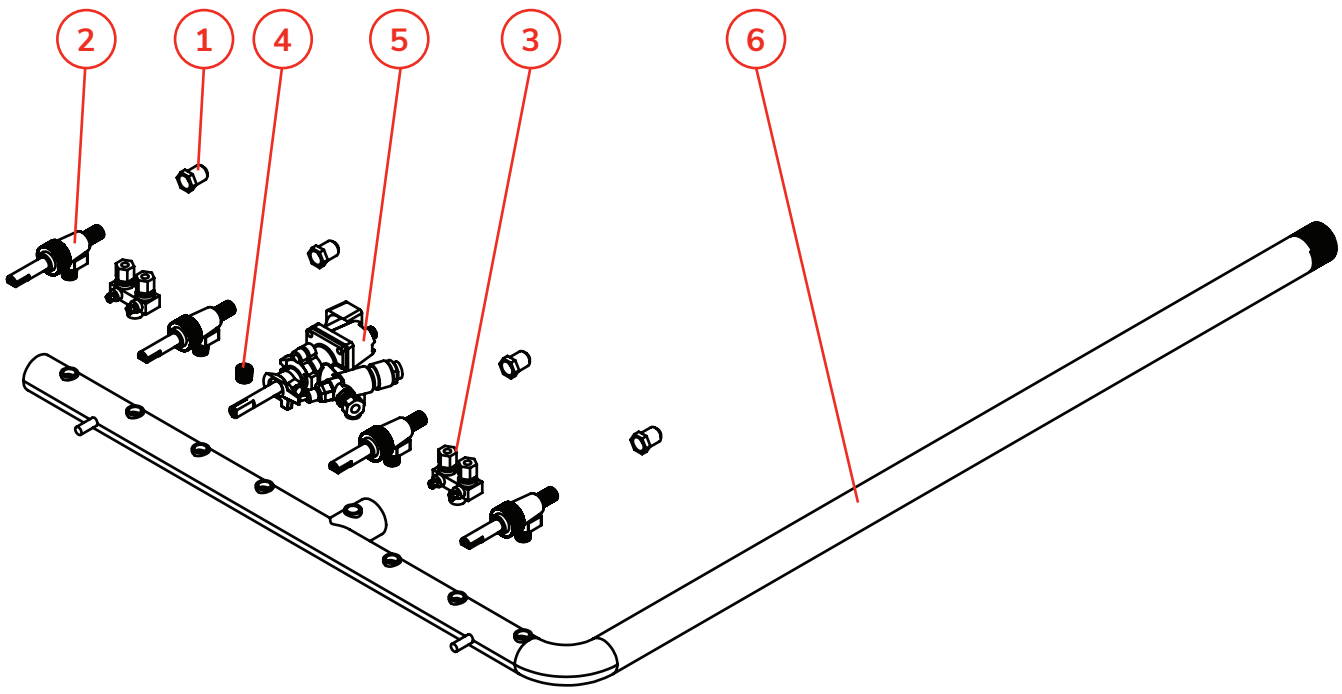

351S24(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	351302110504	2	Rack Holder
8	-	1	Oven Tank Lower Front Plate
9	-	1	Baseboard
10	-	1	Deflector/baffle
11	351302110557	2	Rack 20" x 24.5"
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

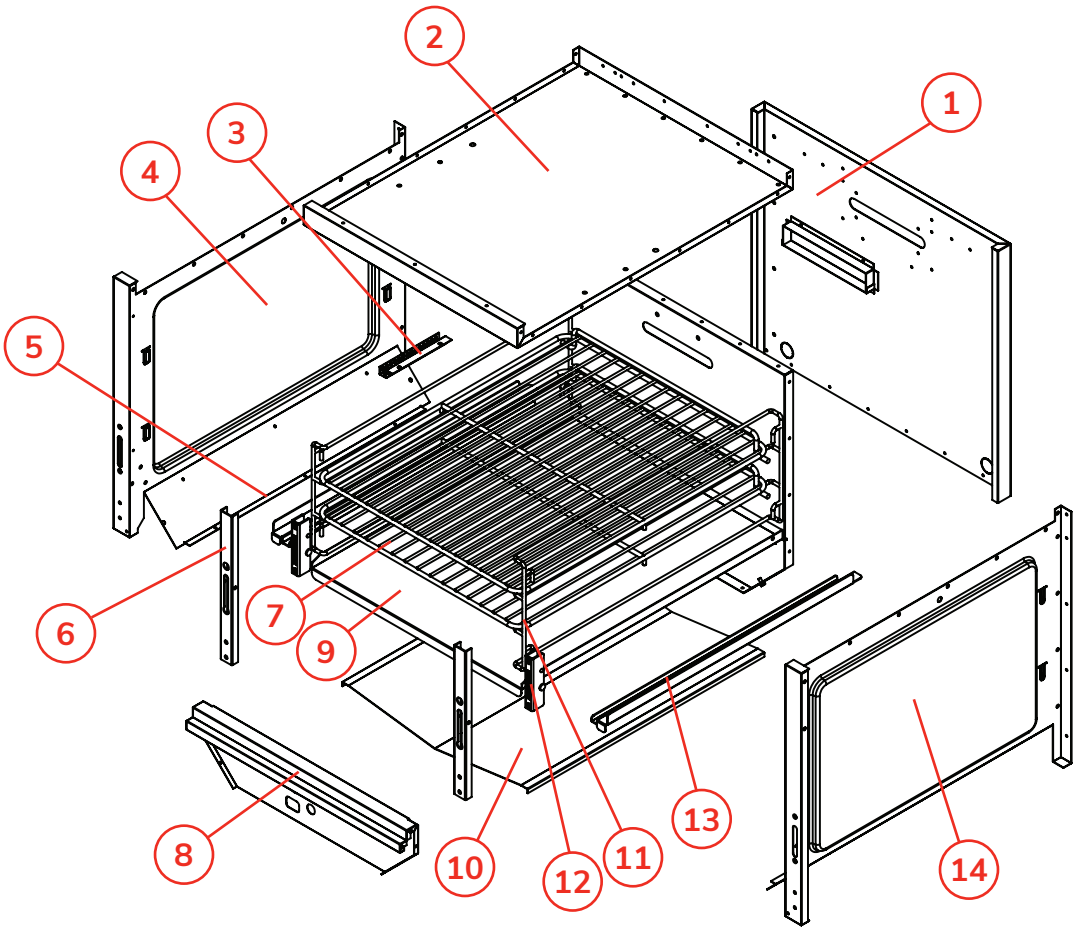


351S36(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	2	Back Panel Support
3	-	1	Inner Flue Assembly
4	-	2	Slide Rail
5	-	1	Right Side Panel
6	351228051012	1	Crumb Tray - 31" x 32"
7	351302090149	4	Adjustable Leg with Plate
8	351302130384	1	Oven Burner
9a	35128051088	1	Oven Pilot - NAT
9b	351302130447	1	Oven Pilot - LP
10	351302170058	1	Thermocouple
11a	351302150198	1	#36 Burner Orifice - NAT
11b	351302150189	1	#50 Burner Orifice - LP
12	-	1	Orifice Elbow
13a	351302190428	1	Door Hinge - Right
13b	351302190430	1	Door Hinge - Left
14	-	1	32" Kick Plate
15	-	1	Oven Door Assembly
16	351302070144	1	Door Handle
17	-	1	Oven Tank Assembly
18	-	1	Left Side Panel
19	351301130111	1	Oven Knob
20	351202230111	6	Stove Knob
21	-	1	Front Panel
22	351302220064	1	Oven Thermostat Valve
23	351228046045	3	Range Pilot Pipe (Short)
24	351228046016	3	Range Pilot Pipe (Long)
25	351302130019	6	Range Pilot
26	351128051028	3	Burner Assembly (Short)
27	351128051027	3	Burner Assembly (Long)
28	351302250132	6	Burner Grate

351S36(L/N)


RANGE MAIN BODY

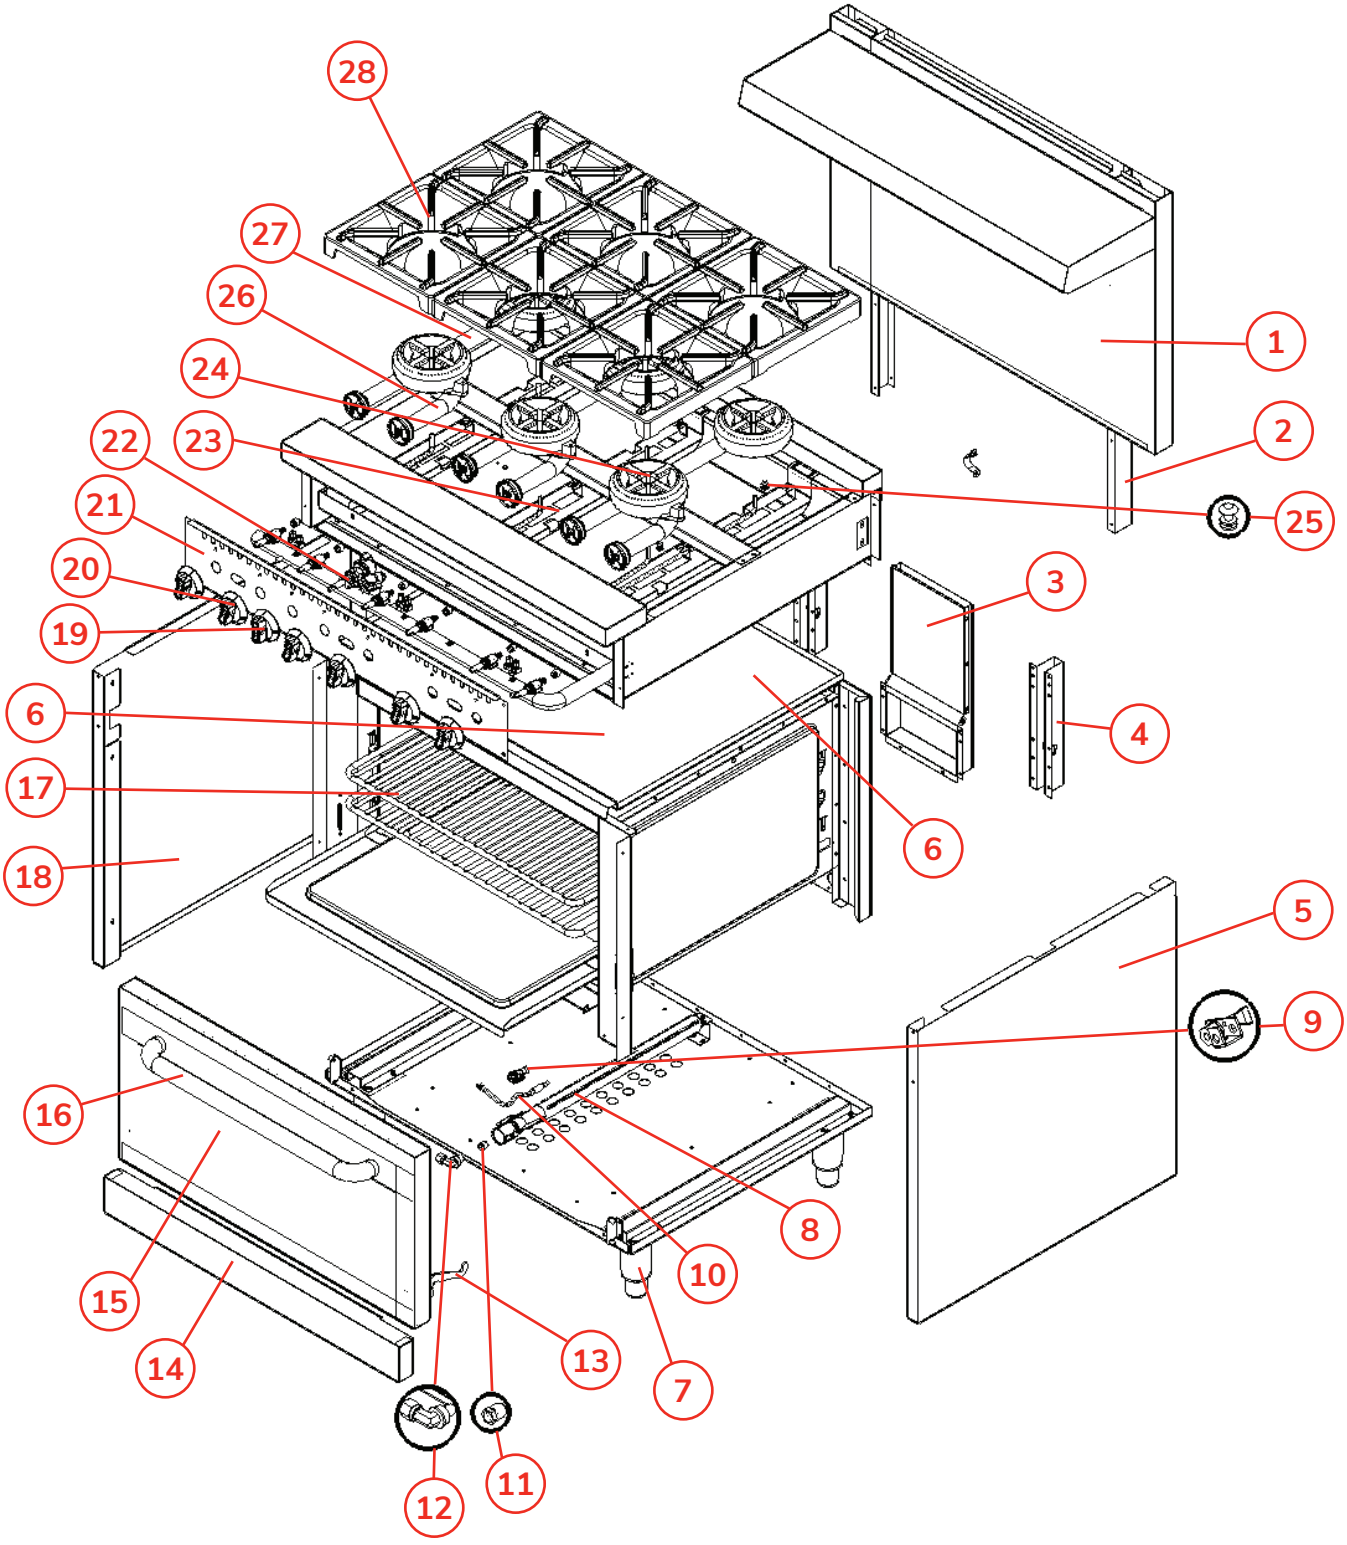

351S36(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150198	6	#36 Burner Orifice - NAT
1b	351302150190	6	#51 Burner Orifice - LP
2	351302050051	6	Gas Stove Valve
3	351302220027	3	Dual Pilot Valve
4	351302220064	1	Oven Thermostat Valve
5	-	1	Screw
6	-	1	Gas Inlet Pipe

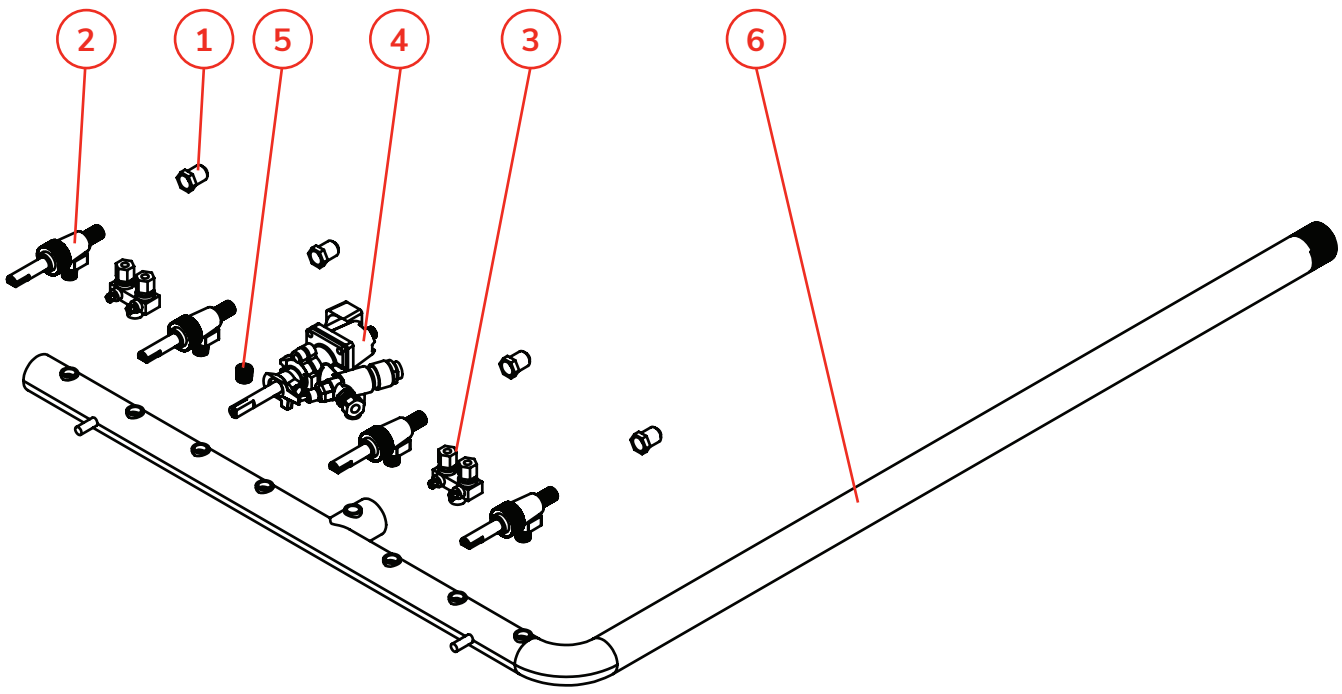

351S36(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110503	2	Rack 26" x 24.5"
9	-	1	Baseboard
10	35128051028	1	Deflector/baffle
11	351302110504	2	Rack Holder
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

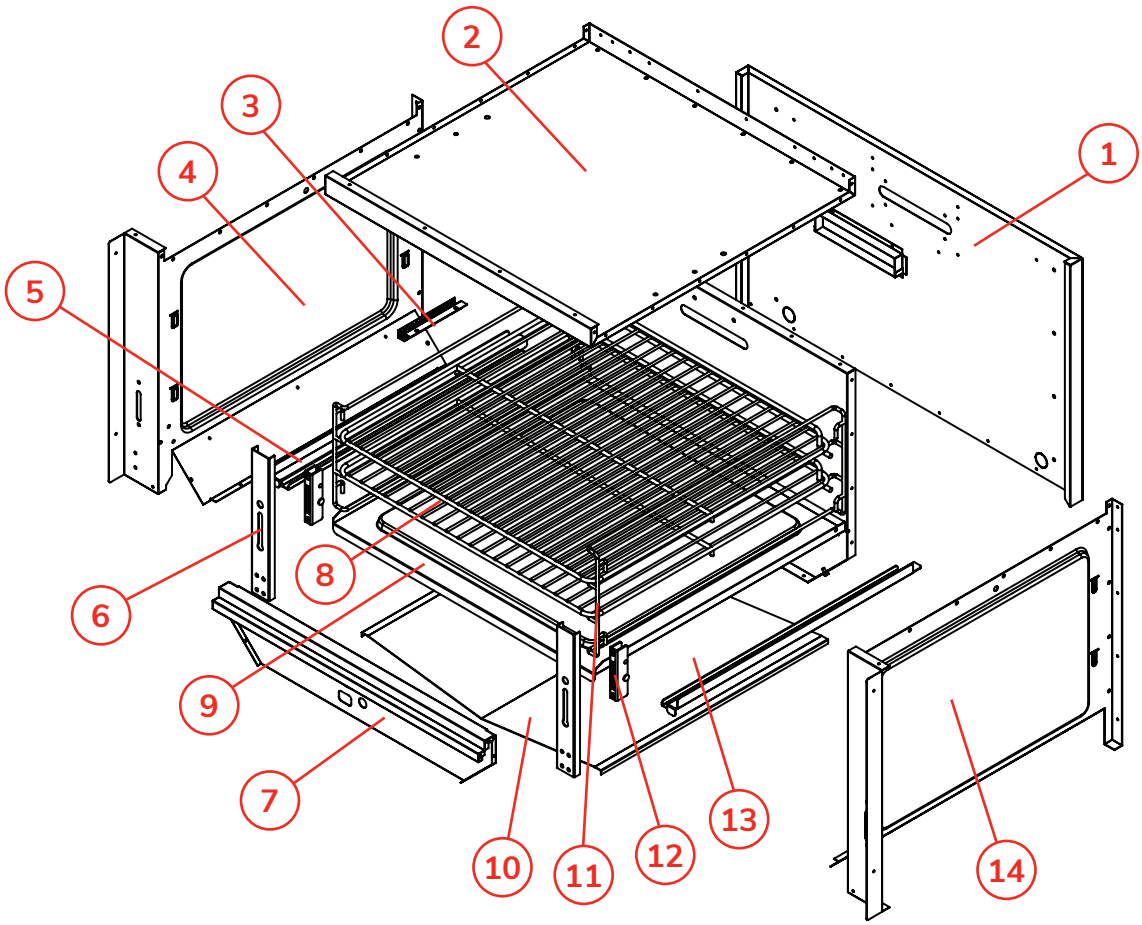


351S60(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back panel Assembly
2	35128051040	3	Back Panel Support
3	-	2	Inner Flue Assembly
4	-	3	Slide Rail
5	-	1	Right Side Panel
6	351228051012	2	Crumb Tray 31" x 32"
7	-	2	Oven Tank Assembly
8	351302090149	6	Adjustable leg with Plate
9	351302130384	2	Oven Burner
10	351302170058	2	Thermocouple
11a	351302130447	2	Oven Pilot - LP
11b	35128051088	2	Oven Pilot - NAT
12a	351302150198	2	#36 Burner Orifice - NAT
12b	351302150189	2	#50 Burner Orifice - LP
13	-	2	Orifice Elbow
14a	351302190428	2	Door Hinge - Right
14b	351302190430	2	Door Hinge - Left
15	-	2	30" Kick Plate
16	-	2	Oven Door Assembly
17	351302070144	2	Door Handle
18	-	1	Left Side Panel
19	351301130111	2	Oven Knob
20	351202230111	10	Stove Knob
21	-	1	Front Control Panel
22	351302050051	2	Gas Stove Valve
23a	351228046045	5	Range Pilot Pipe (Short)
23b	351228046016	5	Range Pilot Pipe (Long)
24	351302130019	10	Stove Pilot
25	351128051028	5	Burner Assembly (short)
26	351128051027	5	Burner Assembly (long)
27	351302250132	10	Burner Grate

351S60(L/N)


RANGE MAIN BODY

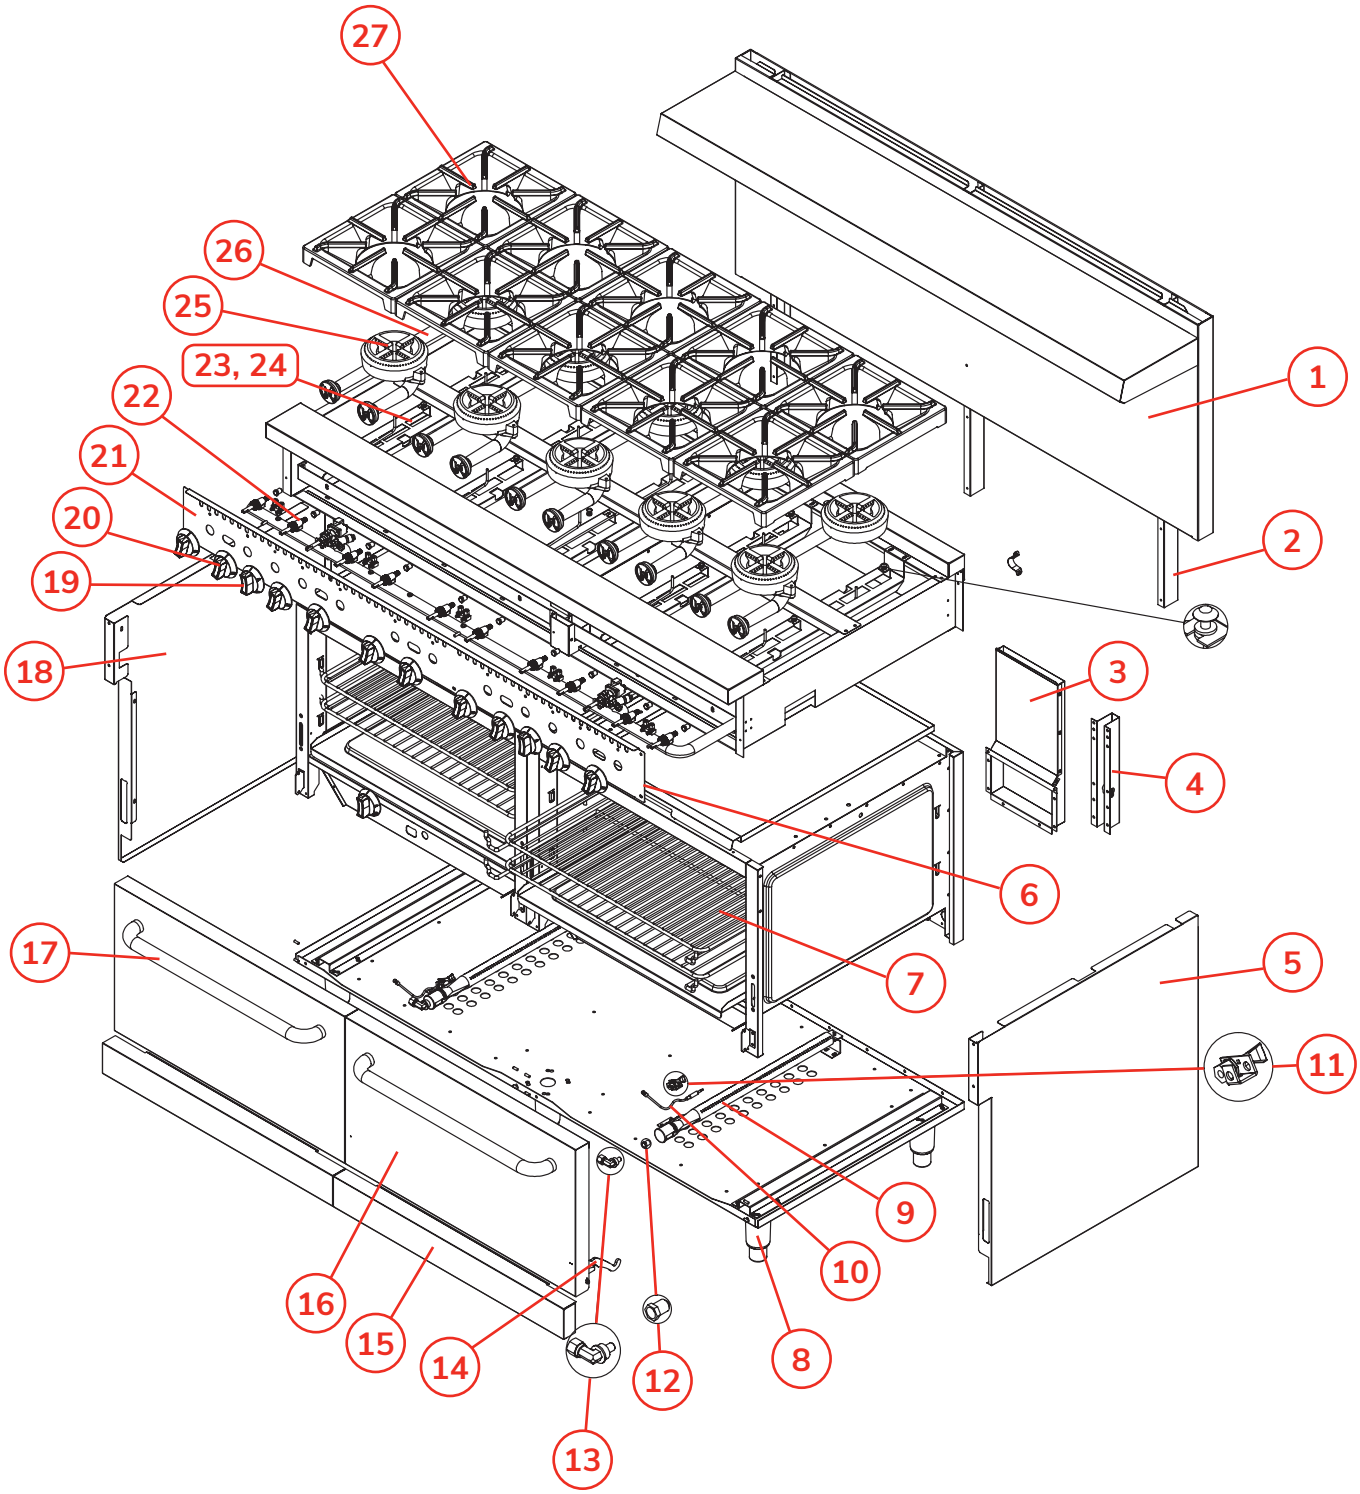

351S60(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150198	10	#36 Burner Orifice - NAT
1b	351302150190	10	#51 Burner Orifice - LP
2	351302050051	10	Gas Stove Valve
3	351302220027	5	Dual Pilot Valve
4	351302220064	2	Oven Thermostat Valve
5	-	1	Gas Inlet Pipe

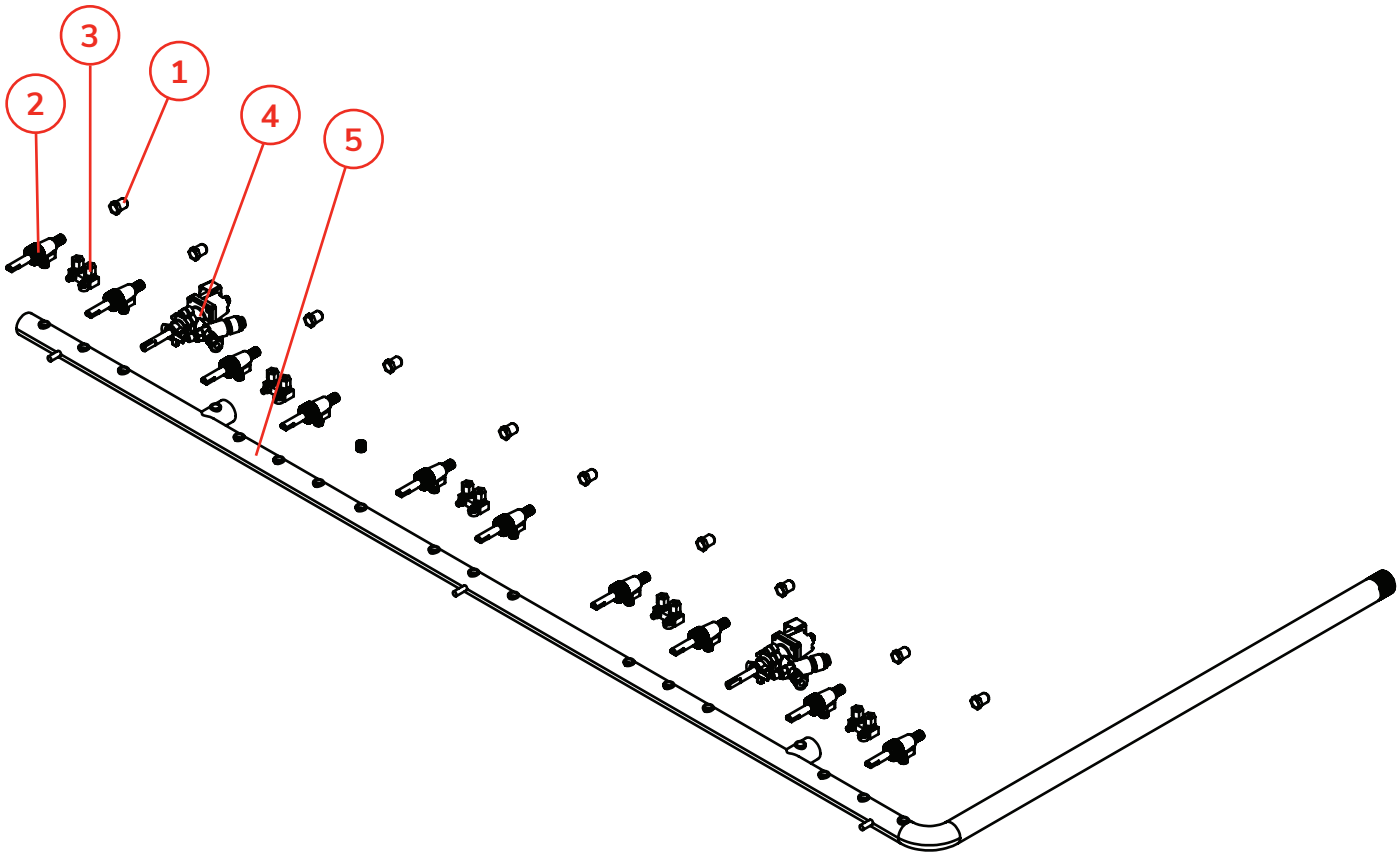

351S60(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110504	2	Rack Holder
9	351302110503	2	Rack 26" x 24.5"
10	-	1	Baseboard
11	35128051028	1	Deflector/baffle
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

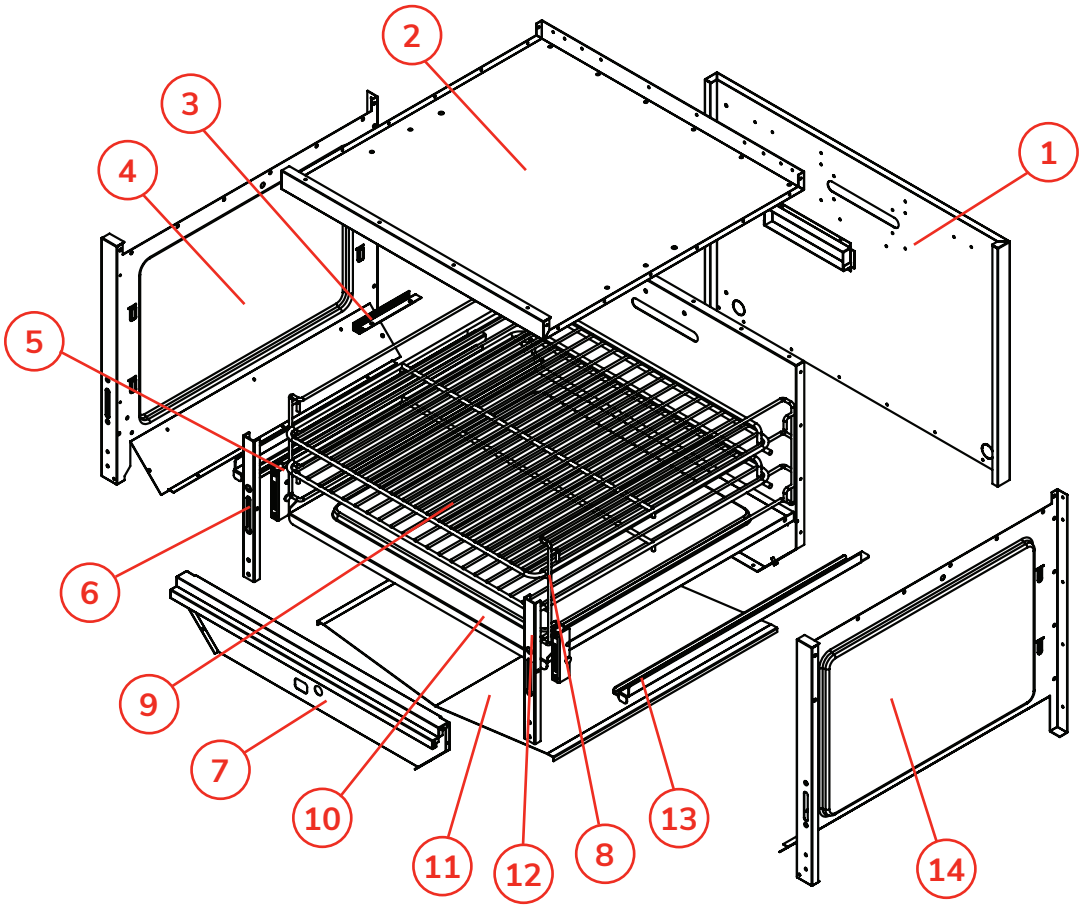


351S36G12(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	2	Back Panel Support
3	-	1	Inner Flue Assembly
4	-	1	Slide Rail
5	-	1	Griddle Plate Assembly
6	351302130387	1	Giddle Burner
7	35128078006	1	Grease Tray
8	-	1	32" Kickplate
9	351302090149	4	Adjustable leg with Plate
10	351302130384	1	Oven Burner
11	351302170058	1	Thermocouple
12a	35128051088	1	Oven Pilot - NAT
12b	351302130447	1	Oven Pilot - LP
13a	351302150198	1	#36 Burner Orifice - NAT
13b	351302150189	1	#50 Burner Orifice - LP
14	-	1	Orifice Elbow
15a	351302190428	1	Door Hinge - Right
15b	351302190430	1	Door Hinge - Left
16	-	1	Oven Door Assembly
17	351302070144	1	Door Handle
18	-	1	Oven Tank Assembly
19	351228058007	1	Crumb Tray 19" x 26"
20	351301130111	1	Oven Knob
21	351202230111	5	Stove/Griddle Knob
22	-	1	Front Control Panel
23	351228046045	2	Range Pilot Pipe (Short)
24	351228046016	2	Range Pilot Pipe (Long)
25	351302130019	4	Stove Pilot
26	351302050051	5	Gas Stove/Griddle Valve
27a	351302150197	1	#44 Griddle Burner Orifice - NAT
27b	351302150193	1	#54 Griddle Burner Orifice - LP
28a	351302150198	4	#36 Stove Burner Orifice - NAT
28b	351302150190	4	#51 Burner Orifice - LP
29	351302220064	1	Oven Thermostat Valve
30	351302220027	2	Dual Pilot Valve
31	351128051028	2	Burner Assembly (short)
32	351128051027	2	Burner Assembly (long)
33	351302250132	4	Burner Grate

351S36G12(L/N)


RANGE MAIN BODY

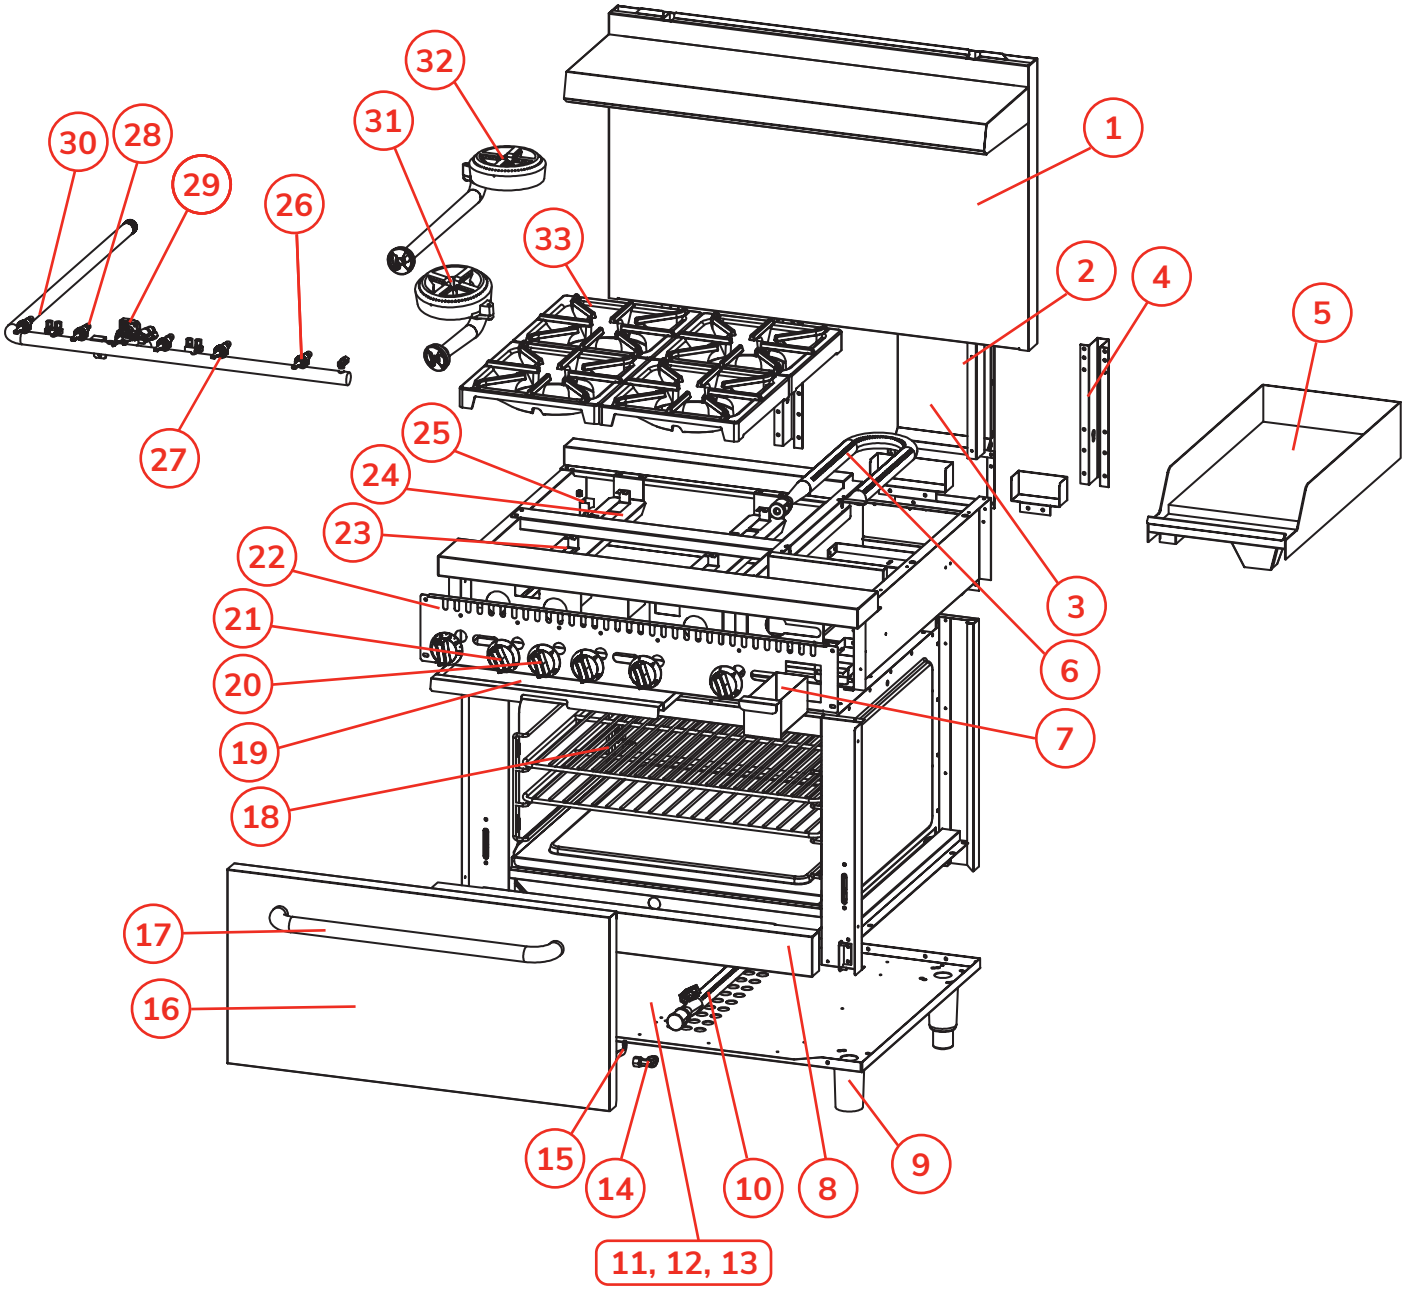

351S36G12(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110503	2	Rack 26" x 24.5"
9	-	1	Baseboard
10	35128051028	1	Deflector/baffle
11	351302110504	2	Rack Holder
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

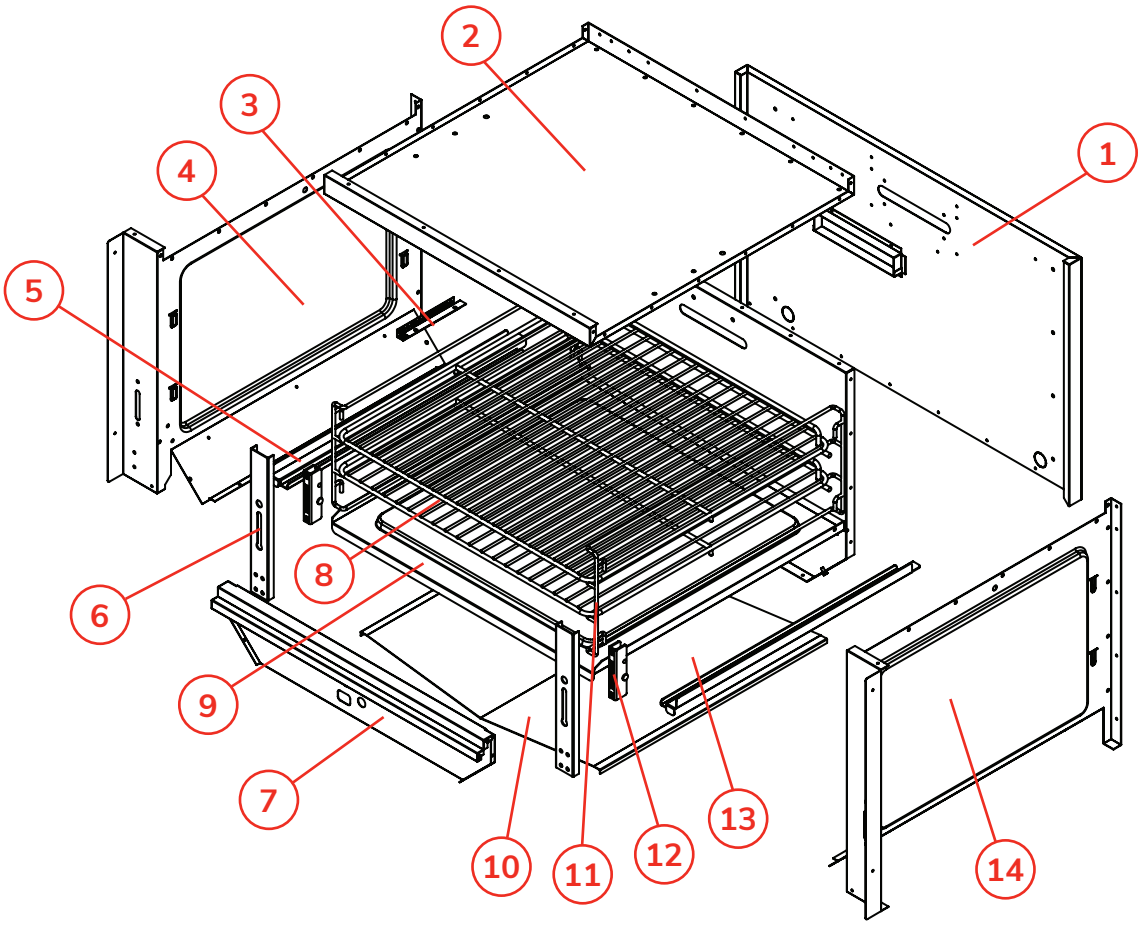


351S36G24(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	2	Back Panel Support
3	-	1	Griddle Plate Assembly
4	-	1	Inner Flue Assembly
5	-	1	Slide Rail
6	351302130387	2	Giddle Burner
7	-	1	Right Side Panel
8	351228077016	1	Crumb Tray 19" x 7"
9	35128078006	1	Grease Tray
10	-	1	Oven Tank Assembly
11	351302090149	4	Adjustable leg with Plate
12	351302130384	1	Oven Burner
13	351302170058	1	Thermocouple
14a	35128051088	1	Oven Pilot - NAT
14b	351302130447	1	Oven Pilot - LP
15a	351302150198	1	#36 Burner Orifice - NAT
15b	351302150189	1	#50 Burner Orifice - LP
16	-	1	Orifice Elbow
17a	351302190428	1	Door Hinge - Right
17b	351302190430	1	Door Hinge - Left
18	-	1	32" Kickplate
19	-	1	Oven Door Assembly
20	351302070144	1	Door Handle
21	351301130111	1	Oven Knob
22	351202230111	4	Stove/Griddle Knob
23	-	1	Front Control Panel
24	-	1	Gas Control Assembly
25	-	1	Crumb Tray
26	-	1	Left Side Panel
27	351228046045	1	Range Pilot Pipe (Short)
28	351228046016	1	Range Pilot Pipe (Long)
29	351302130019	2	Stove Pilot
30	351128051028	1	Burner Assembly (short)
31	351128051027	1	Burner Assembly (long)
32	351302250132	2	Burner Grate

351S36G24(L/N)


RANGE MAIN BODY

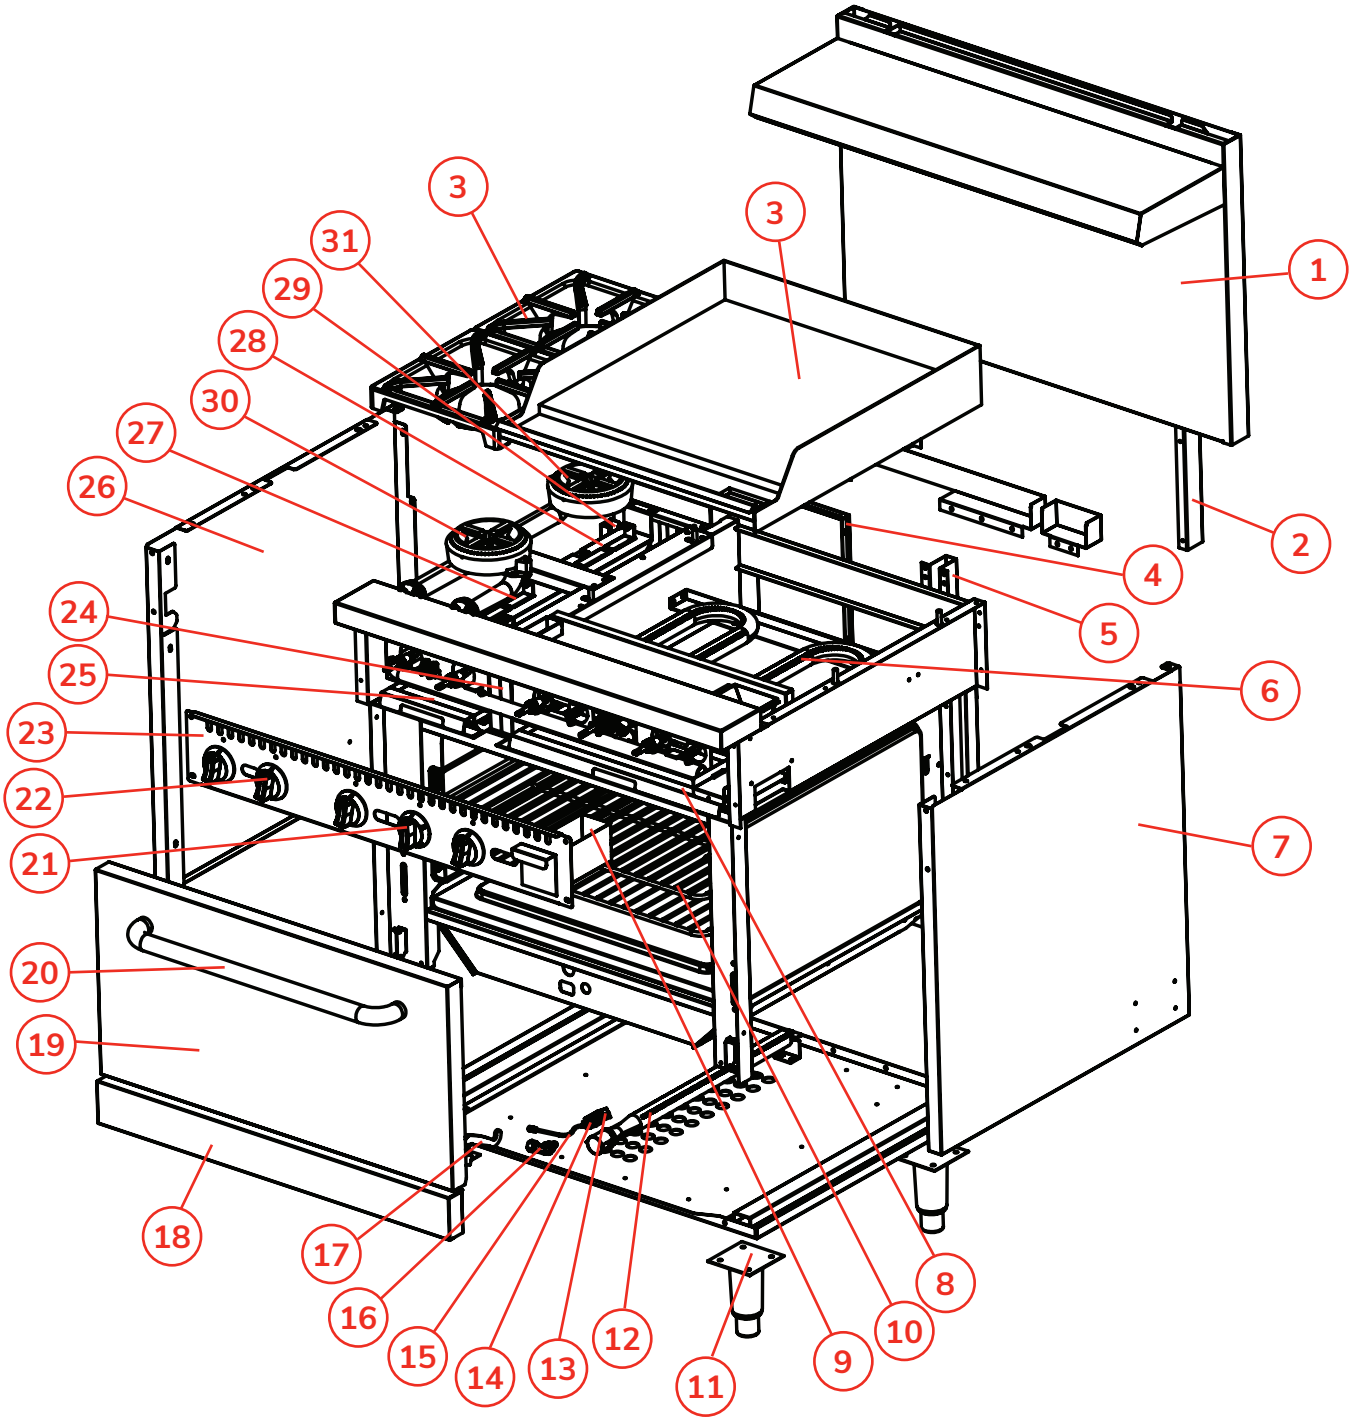

351S36G24(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150198	2	#36 Stove Burner Orifice - NAT
1b	351302150190	2	#51 Burner Orifice - LP
2	351302050051	4	Gas Stove/Griddle Valve
3	351302220027	1	Dual Pilot Valve
4a	351302150197	2	#44 Griddle Burner Orifice - NAT
4b	351302150193	2	#54 Griddle Burner Orifice - LP
5	351302220028	2	Pilot Valve
6	351302220064	1	Oven Thermostat Valve
7	-	1	Gas Inlet Pipe

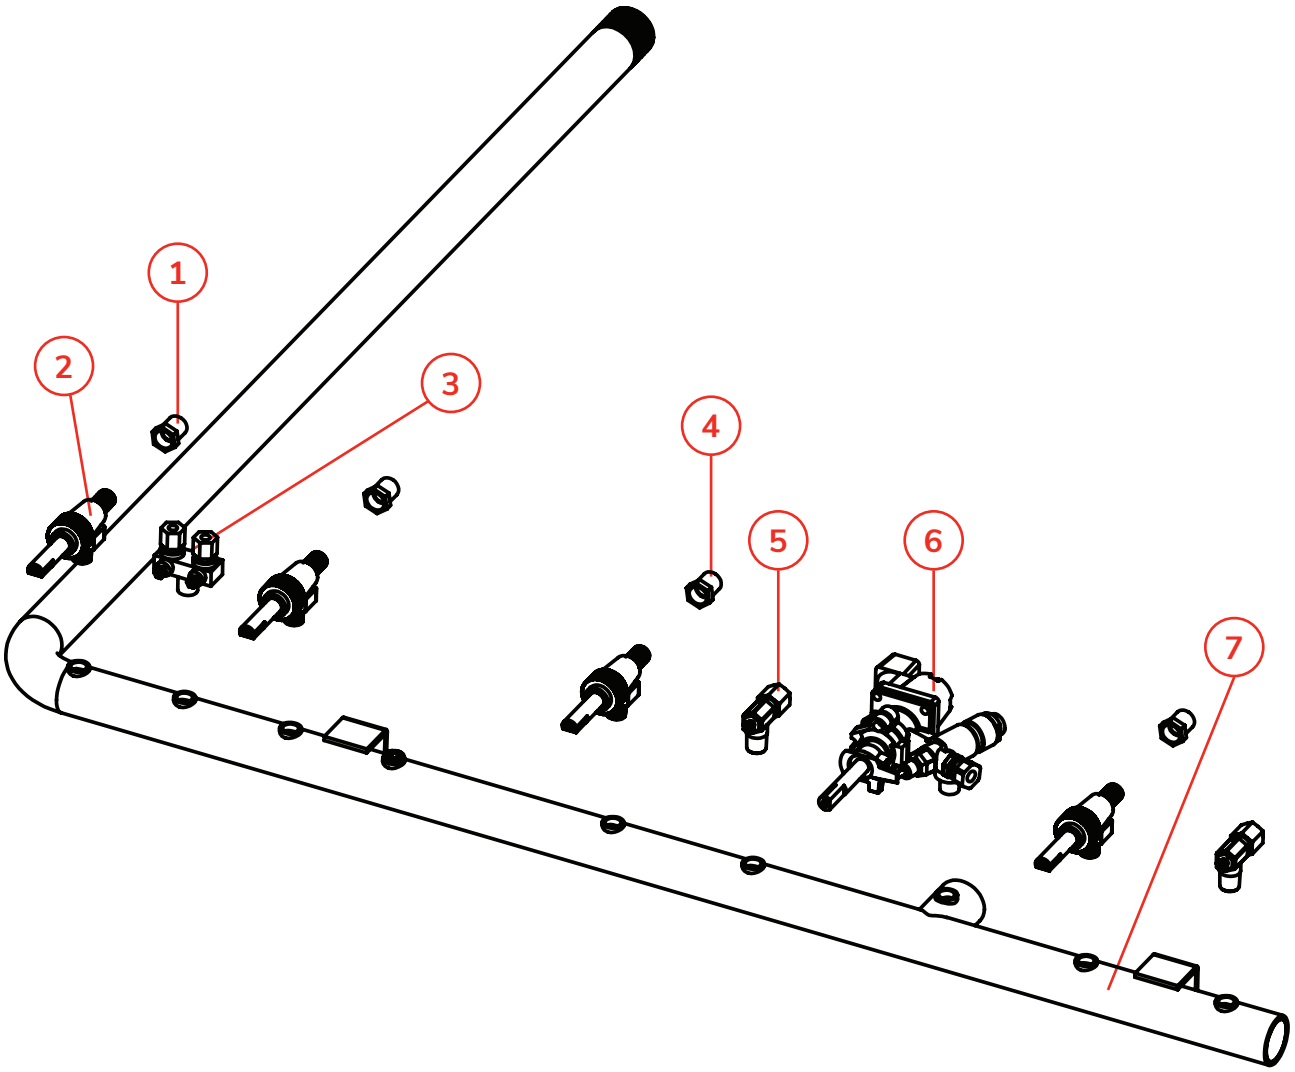

351S36G24(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110503	2	Rack 26" x 24.5"
9	-	1	Baseboard
10	35128051028	1	Deflector/baffle
11	351302110504	2	Rack Holder
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

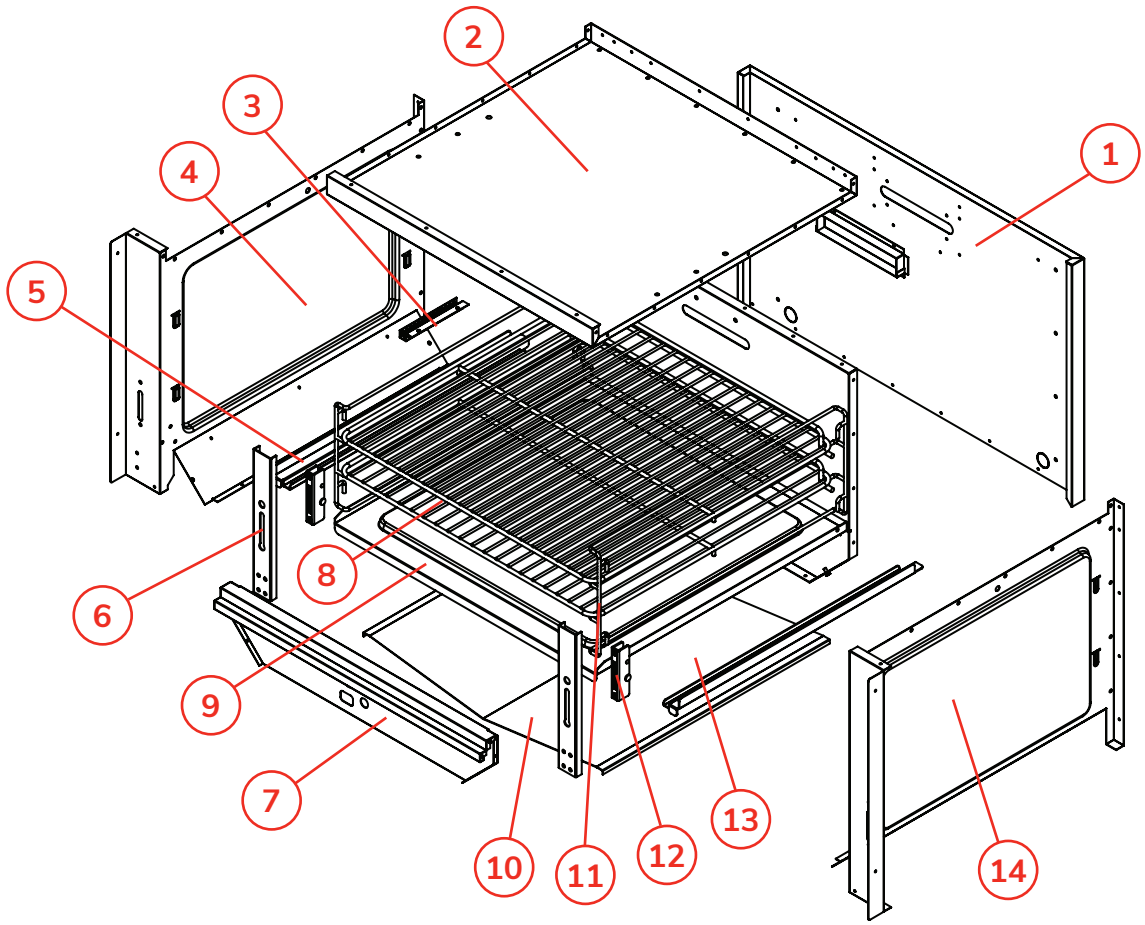


351S36G36(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	2	Back Panel Support
3	-	1	Inner Flue Assembly
4	-	1	Slide Rail
5	-	1	Griddle Assembly
6	351302130387	3	Giddle Burner
7	-	1	Crumb Tray
8	-	1	Right Side Panel
9	-	1	Oven Tank Assembly
10	351302090149	4	Adjustable leg with Plate
11	351302130384	1	Oven Burner
12	351302170058	1	Thermocouple
13a	35128051088	1	Oven Pilot - NAT
13b	351302130447	1	Oven Pilot - LP
14a	351302150198	1	#36 Burner Orifice - NAT
14b	351302150189	1	#50 Burner Orifice - LP
15	-	1	Orifice Elbow
16a	351302190428	1	Door Hinge - Right
16b	351302190430	1	Door Hinge - Left
17	-	1	Oven Door Assembly
18	351302070144	1	Door Handle
19	351301130111	1	Oven Knob
20	351202230111	3	Stove/Griddle Knob
21	-	1	Front Panel
22	-	1	Left Side Panel
23	-	1	Gas Control Assembly

351S36G36(L/N)


RANGE MAIN BODY

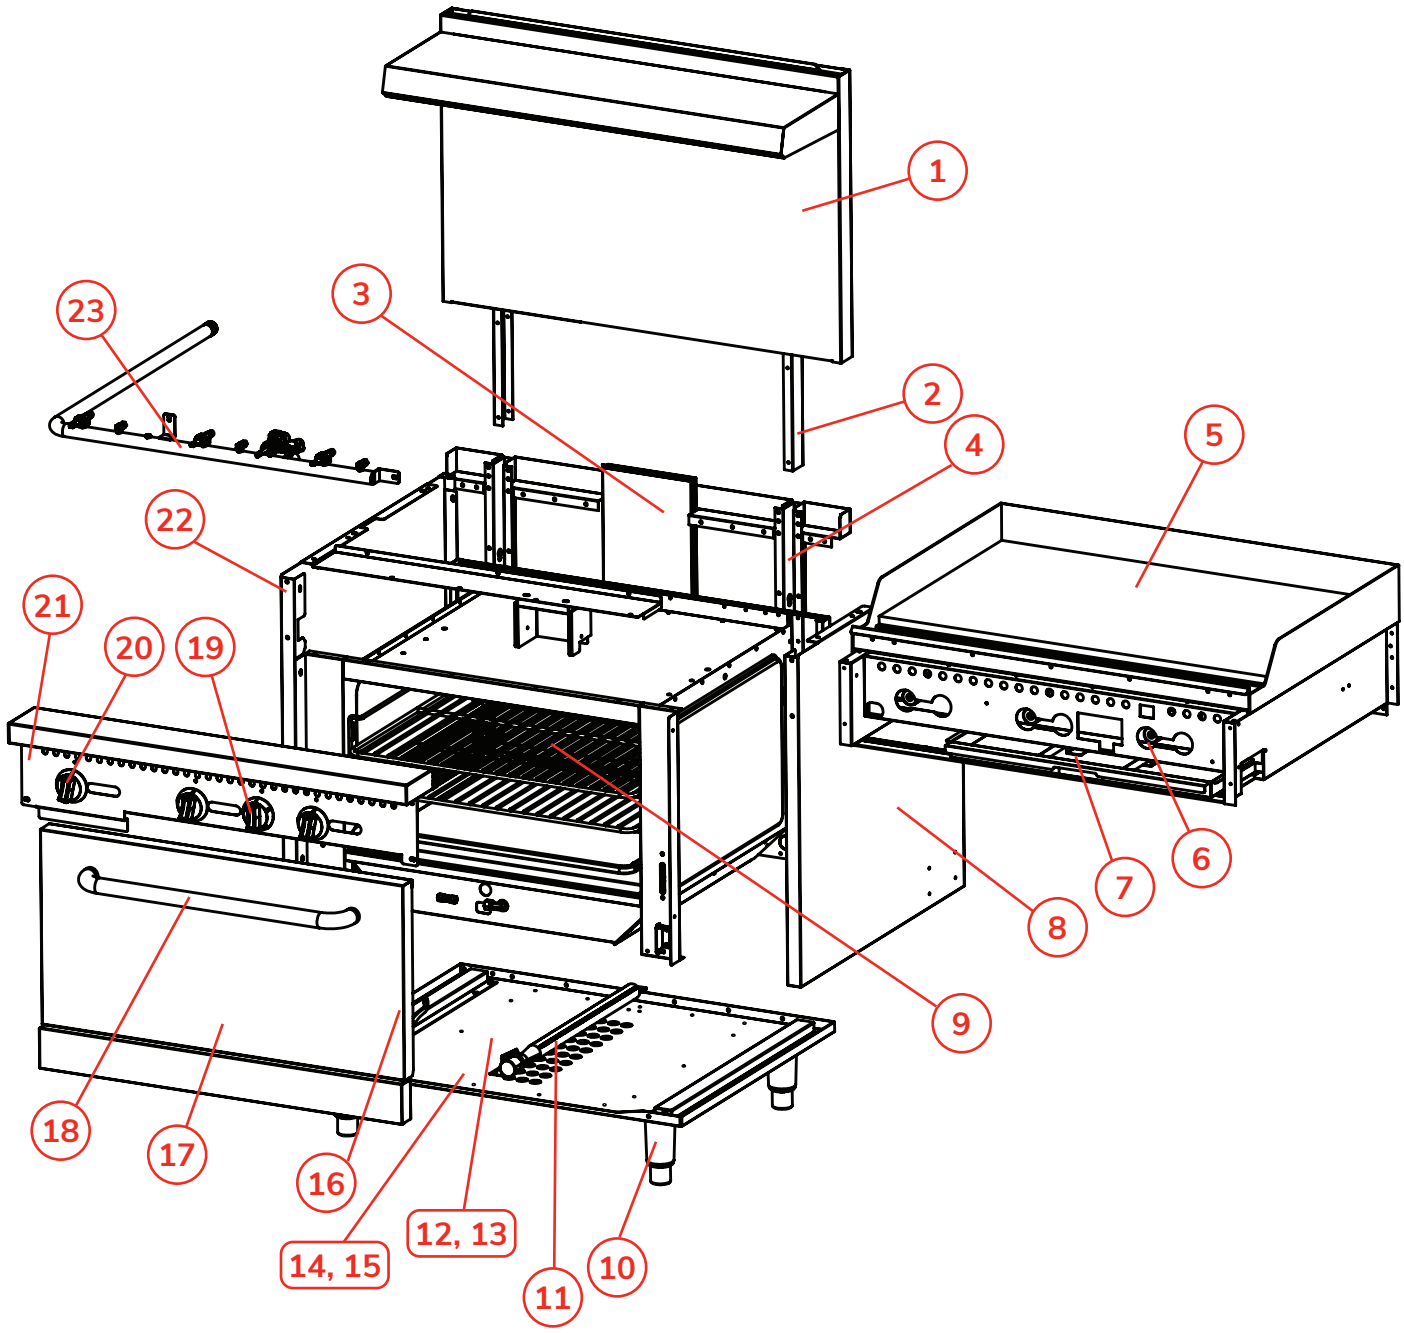

351S36G36(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150197	3	#44 Griddle Burner Orifice - NAT
1b	351302150193	3	#54 Griddle Burner Orifice - LP
2	351302050051	3	Gas Valve
3	351302220028	3	Pilot Valve
4	-	1	Screw
5	351302220064	1	Oven Thermostat Valve
6	-	1	Gas Inlet Pipe

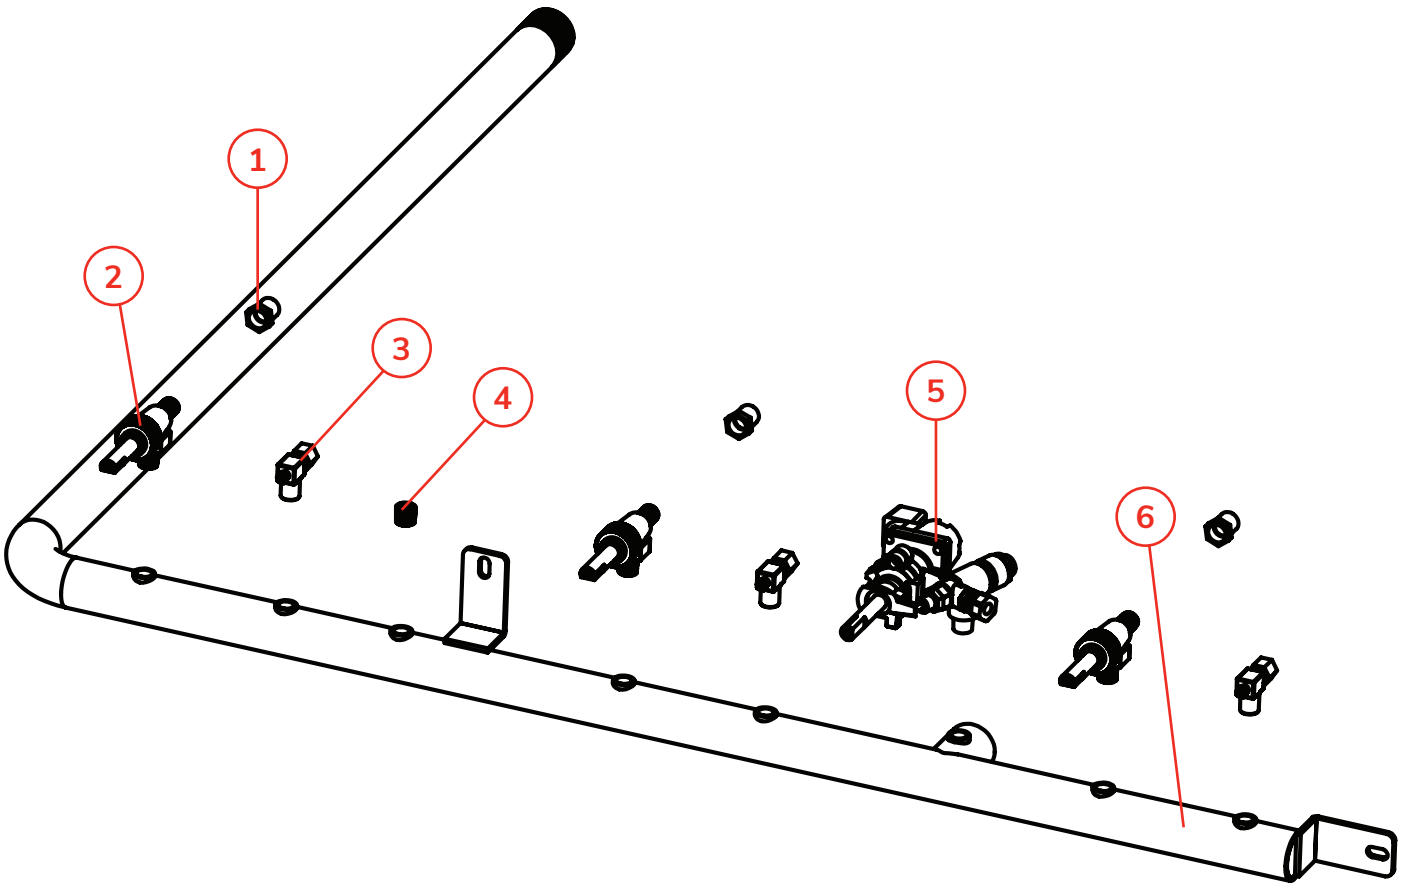

351S36G36(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	351302110504	2	Rack Holder
8	351302110503	2	Rack 26" x 24.5"
9	-	1	Oven Tank Lower Front Plate
10	-	1	Baseboard
11	35128051028	1	Deflector/baffle
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

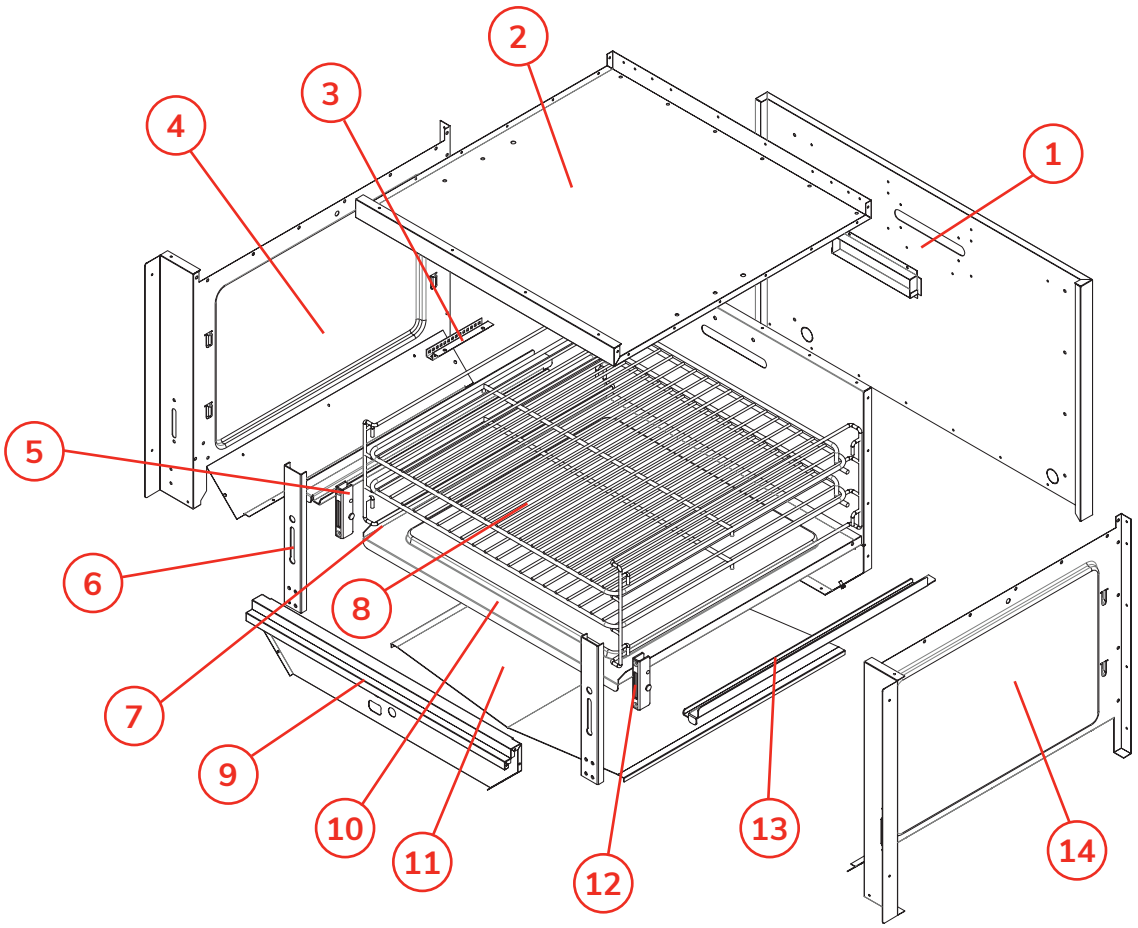


351S60G24(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	351302250132	6	Burner Grate
2	351128051028	3	Burner Assembly (short)
3	351128051027	3	Burner Assembly (long)
4	-	1	Left Side Panel
5	-	1	Front Countertop
6	-	1	Front Control Panel
7	351202230111	8	Stove/Griddle Knob
8	351301130111	2	Oven Knob
9	-	2	Oven Door Assembly
10	351228059011	2	30" Kickplate
11	35128078006	1	Grease Tray
12	351302140137	2	Orifice Elbow
13a	351302150198	2	#36 Oven Burner Orifice - NAT
13b	351302150189	2	#50 Burner Orifice - LP
14	351302170058	2	Thermocouple
15a	35128051088	2	Oven Pilot - NAT
15b	351302130447	2	Oven Pilot - LP
16	351302130384	2	Oven Burner
17/18	351302090149	6	Adjustable Leg with Plate
19	-	2	Oven Tank Assembly
20	-	1	Right Side Panel
21	351302130387	2	Griddle Burner
22	-	1	Griddle Plate Assembly
23	-	1	Griddle Flue Part 2
24	-	1	Griddle Flue Part 1
25	-	1	Back Panel Assembly
26	351228051012	1	Crumb Tray 31" x 32"
27	351228077016	1	Crumb Tray 19" x 7"
28	351302070144	2	Door Handle
29	351228046015	3	Range Pilot Pipe (Short)
30	351228046016	3	Range Pilot Pipe (Long)

351S60G24(L/N)


RANGE MAIN BODY

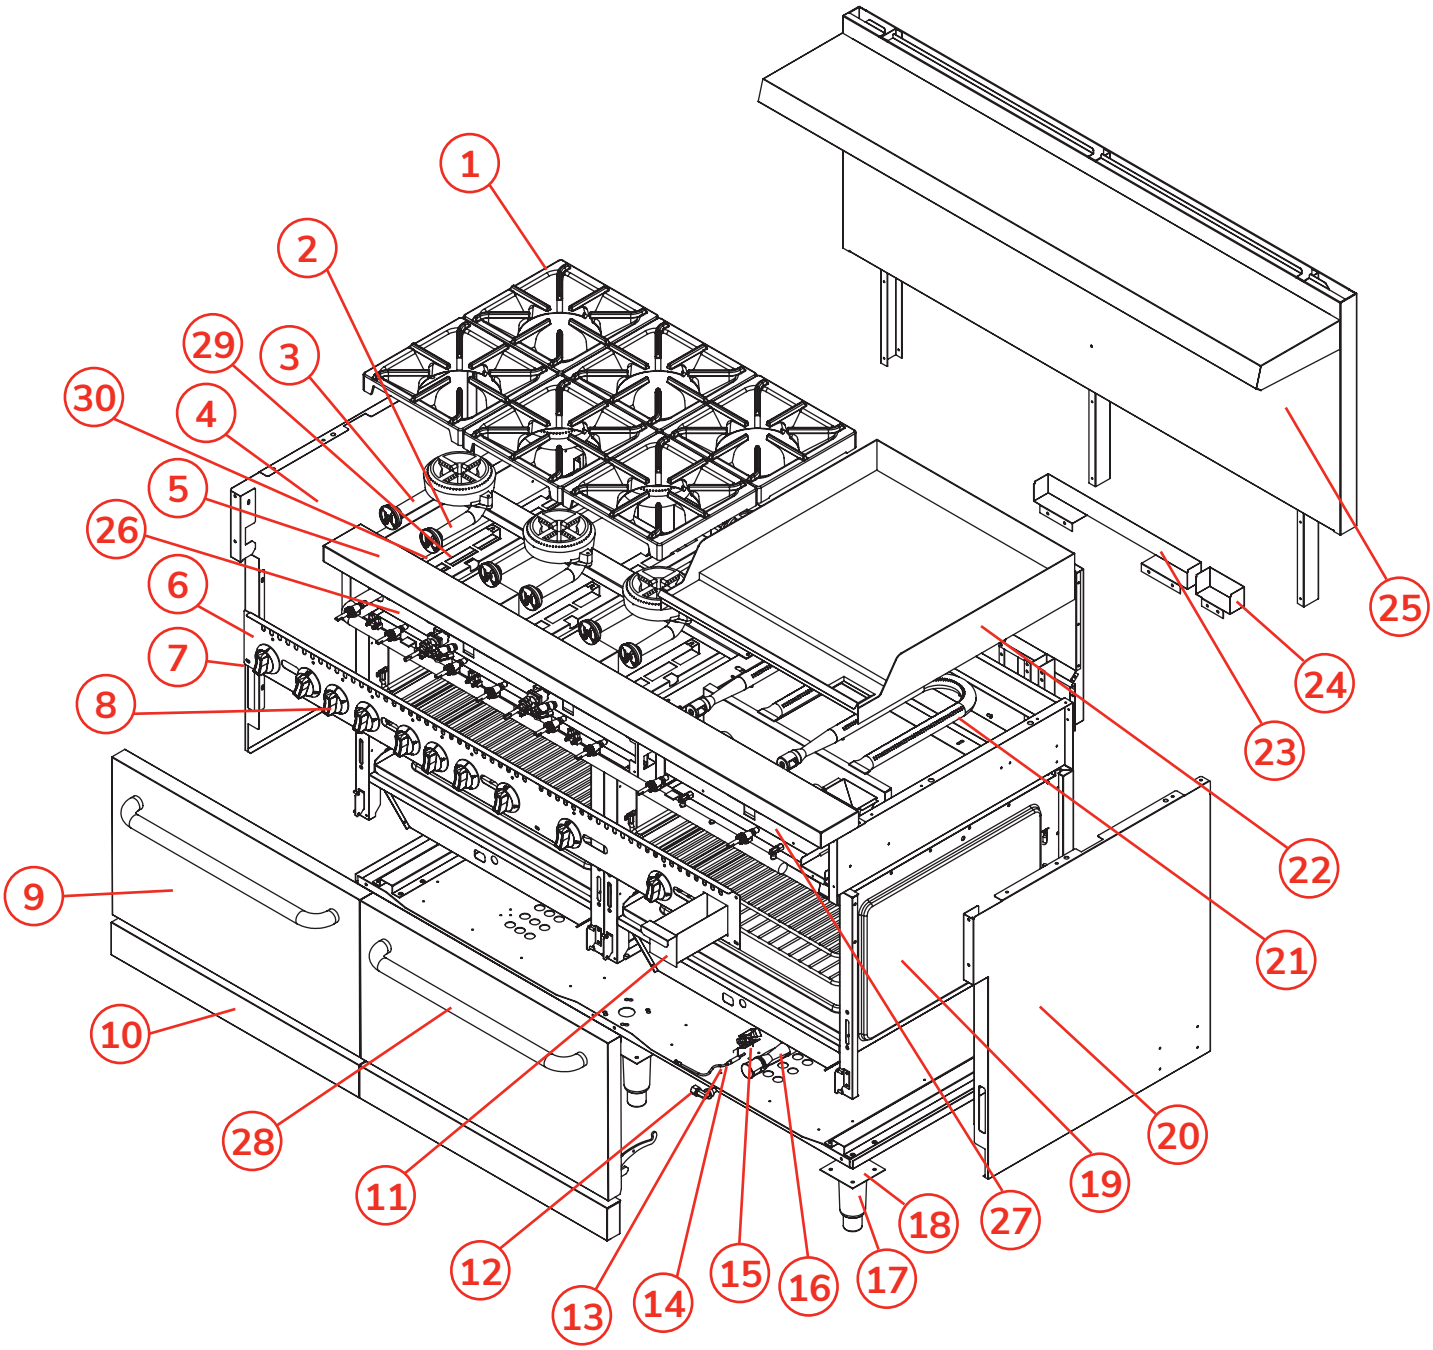

351S60G24(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1	351302050051	8	Gas Stove Valve
2a	351302150198	6	#36 Stove Burner Orifice - NAT
2b	351302150190	6	#51 Burner Orifice - LP
3	-	1	Gas Inlet Pipe
4	351302220027	3	Dual Pilot Valve
5	351302220064	2	Oven Thermostat Valve
6a	351302150197	2	#44 Griddle Burner Orifice - NAT
6b	351302150193	2	#54 Griddle Burner Orifice - NAT
7	351302220028	2	Single Pilot Valve

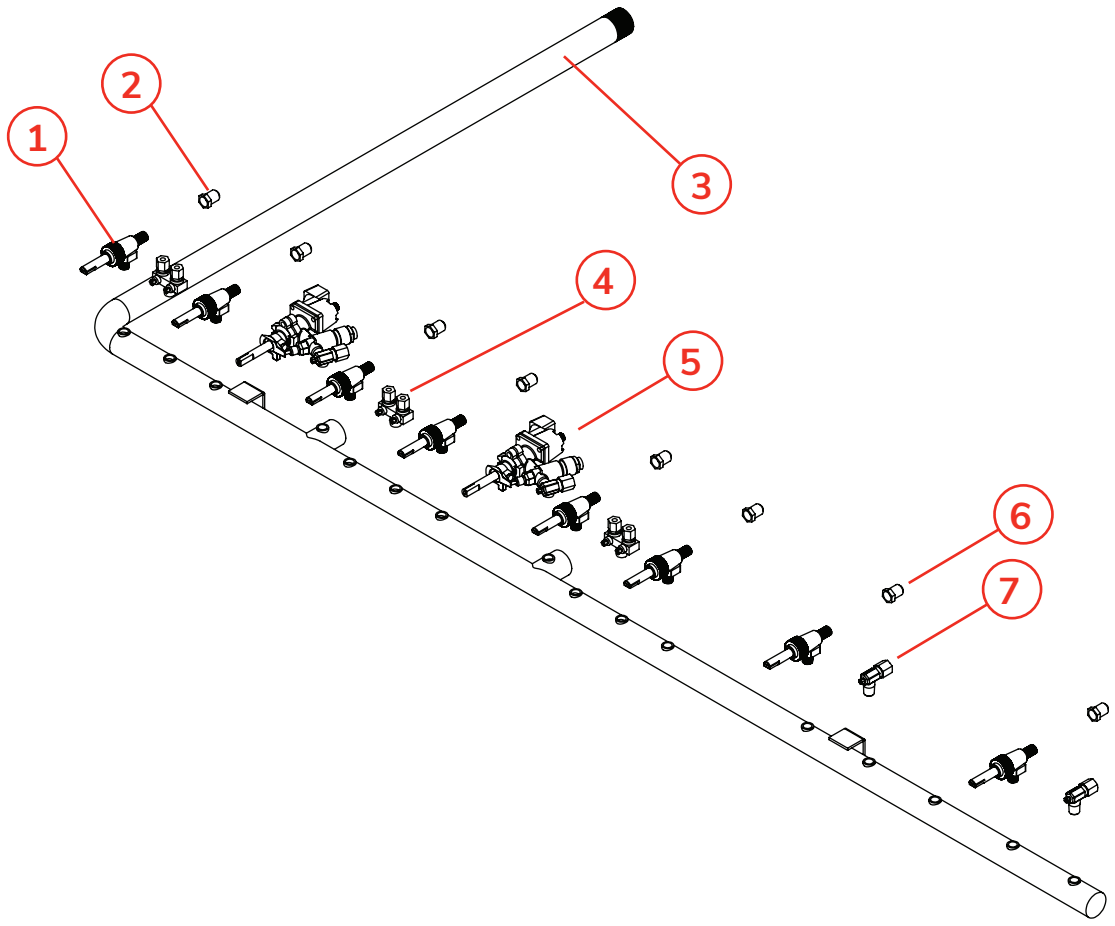

351S60G24(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110504	2	Rack Holder
9	351302110503	2	Rack 26" x 24.5"
10	-	1	Baseboard
11	35128051028	1	Deflector/baffle
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

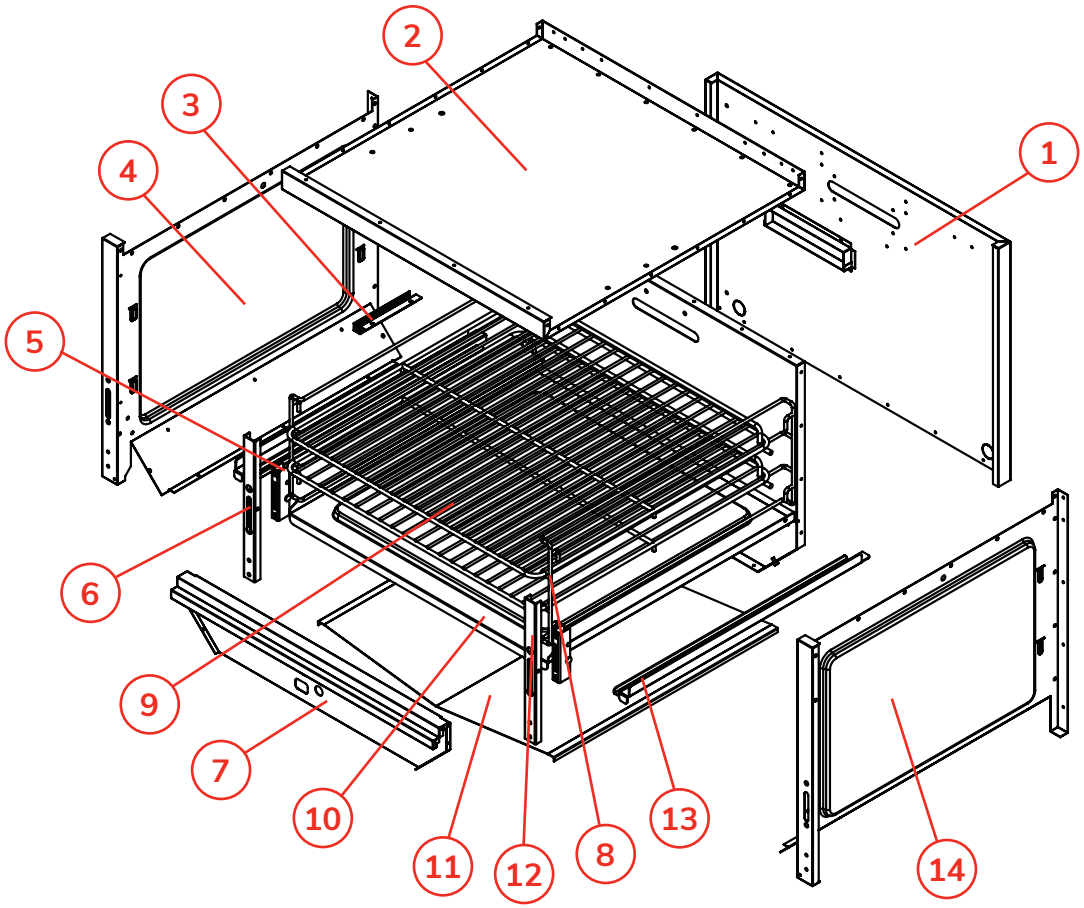


351S60G36(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	3	Back Panel Support
3	-	2	Inner Flue Assembly
4	-	3	Slide Rail
5	-	1	Griddle Plate Assembly
6	351302130387	3	Giddle Burner
7	-	1	Grease Tray
8	-	1	Right Side Panel
9	-	2	Oven Tank Assembly
10	351302090149	6	Adjustable leg with Plate
11	351302130384	2	Oven Burner
12	351302170058	2	Thermocouple
13a	35128051088	2	Oven Pilot - NAT
13b	351302130447	2	Oven Pilot - LP
14a	351302150198	2	#36 Burner Orifice - NAT
14b	351302150189	2	#50 Burner Orifice - LP
15	-	2	Orifice Elbow
16a	351302190428	2	Door Hinge - Right
16b	351302190430	2	Door Hinge - Left
17	-	2	Oven Door Assembly
18	-	2	30" Kickplate
19	351302070144	2	Door Handle
20	351301130111	2	Oven Knob
21	351202230111	7	Stove/Griddle Knob
22	-	1	Front Control Panel
23a	351228046045	2	Range Pilot Pipe (Short)
23b	351228046016	2	Range Pilot Pipe (Long)
24	351302130019	6	Stove Pilot
25	351128051028	2	Burner Assembly (short)
26	351128051027	2	Burner Assembly (long)
27	351228058007	1	Crumb Tray 19" x 26"
28	351302250132	4	Burner Grate
29	-	1	Gas Control Assembly

351S60G36(L/N)


RANGE MAIN BODY

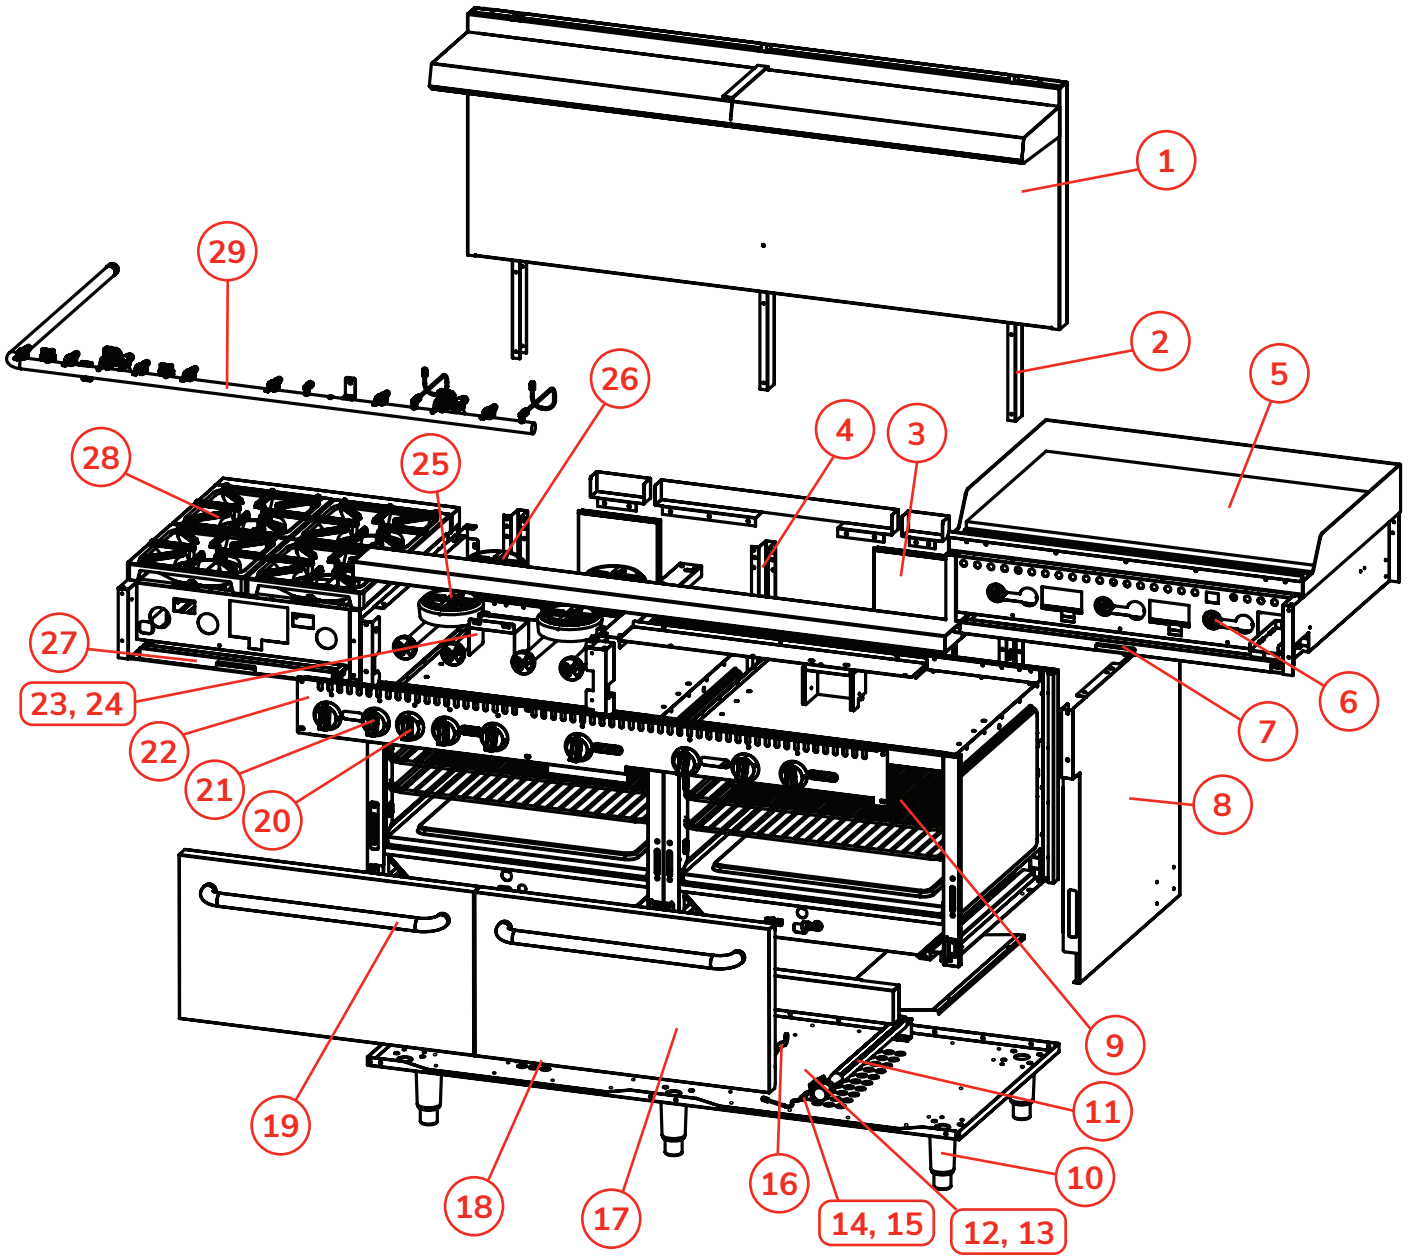

351S60G36(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150198	4	#36 Stove Burner Orifice - NAT
1b	351302150190	4	#51 Burner Orifice - LP
2	351302050051	7	Gas Stove Valve
3	351302220027	2	Dual Pilot Valve
4	351302220064	2	Oven Thermostat Valve
5a	351302150197	3	#44 Griddle Burner Orifice - NAT
5b	351302150193	3	#54 Griddle Burner Orifice - NAT
6	351302220028	3	Single Pilot Valve
7	-	1	Gas Inlet Pipe

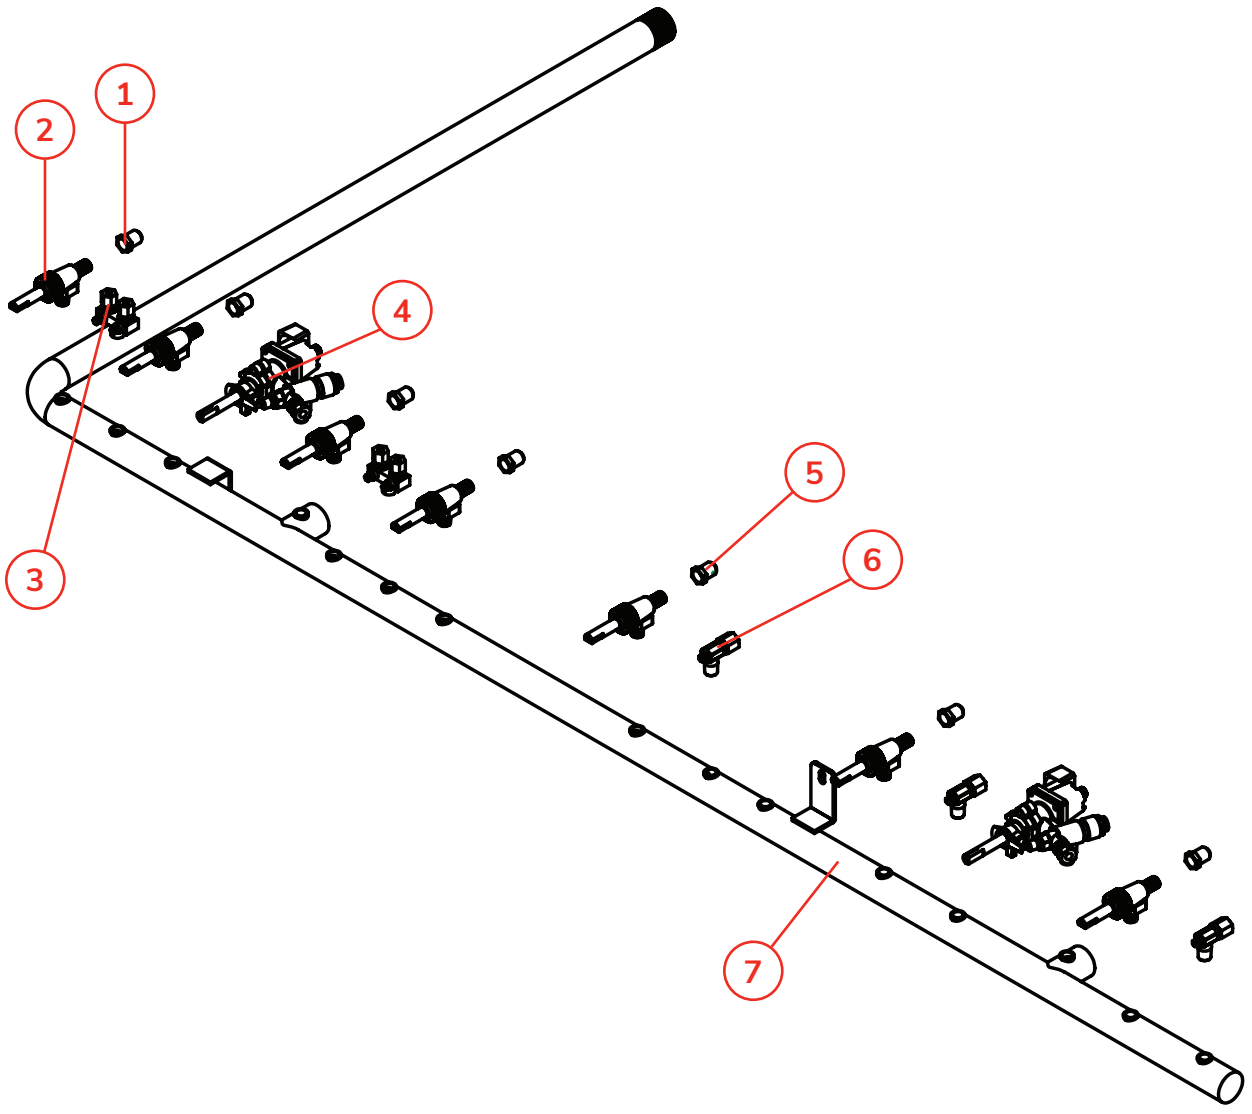

351S60G36(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110504	2	Rack Holder
9	351302110503	2	Rack 26" x 24.5"
10	-	1	Baseboard
11	35128051028	1	Deflector/baffle
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

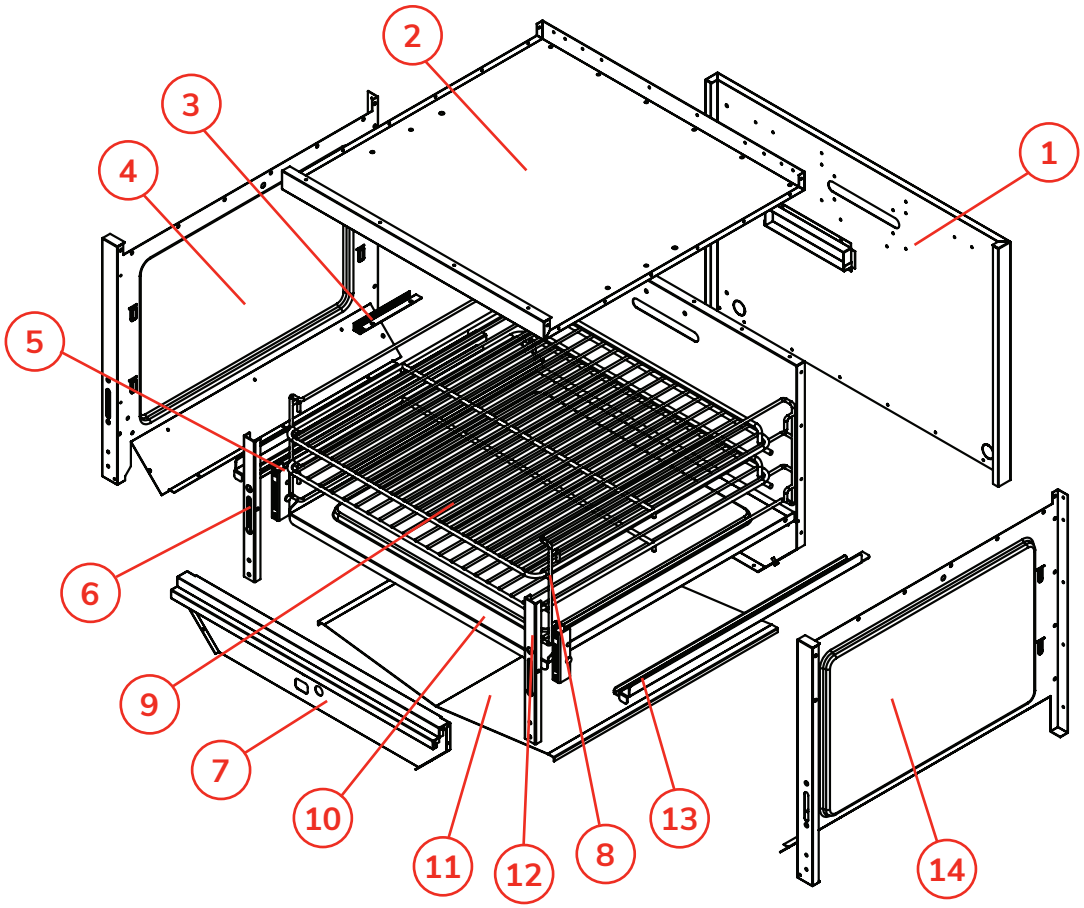


351S60G48(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	2	Back Panel Support
3	-	2	Inner Flue Assembly
4	-	2	Slide Rail
5	-	1	Griddle Plate Assembly
6	351302130387	4	Giddle Burner
7	-	1	Crumb Tray
8	-	2	Oven Tank Assembly
9	351302090149	6	Adjustable leg with Plate
10	351302130384	2	Oven Burner
11	351302170058	2	Thermocouple
12a	35128051088	2	Oven Pilot - NAT
12b	351302130447	2	Oven Pilot - LP
13a	351302150198	2	#36 Burner Orifice - NAT
13b	351302150189	2	#50 Burner Orifice - LP
14	-	2	Orifice Elbow
15a	351302190428	2	Door Hinge - Right
15b	351302190430	2	Door Hinge - Left
16	-	2	30" Kickplate
17	-	2	Oven Door Assembly
18	351302070144	2	Door Handle
19	351301130111	2	Oven Knob
20	351202230111	6	Stove/Griddle Knob
21	-	1	Front Control Panel
22	-	1	Crumb Tray
23	351302250132	2	Burner Grate
24a	351228046045	1	Range Pilot Pipe (Short)
24b	351228046016	1	Range Pilot Pipe (Long)
25	351302130019	2	Stove Pilot
26	351128051028	1	Burner Assembly (short)
27	351128051027	1	Burner Assembly (long)
28	-	1	Gas Control Assembly

351S60G48(L/N)


RANGE MAIN BODY

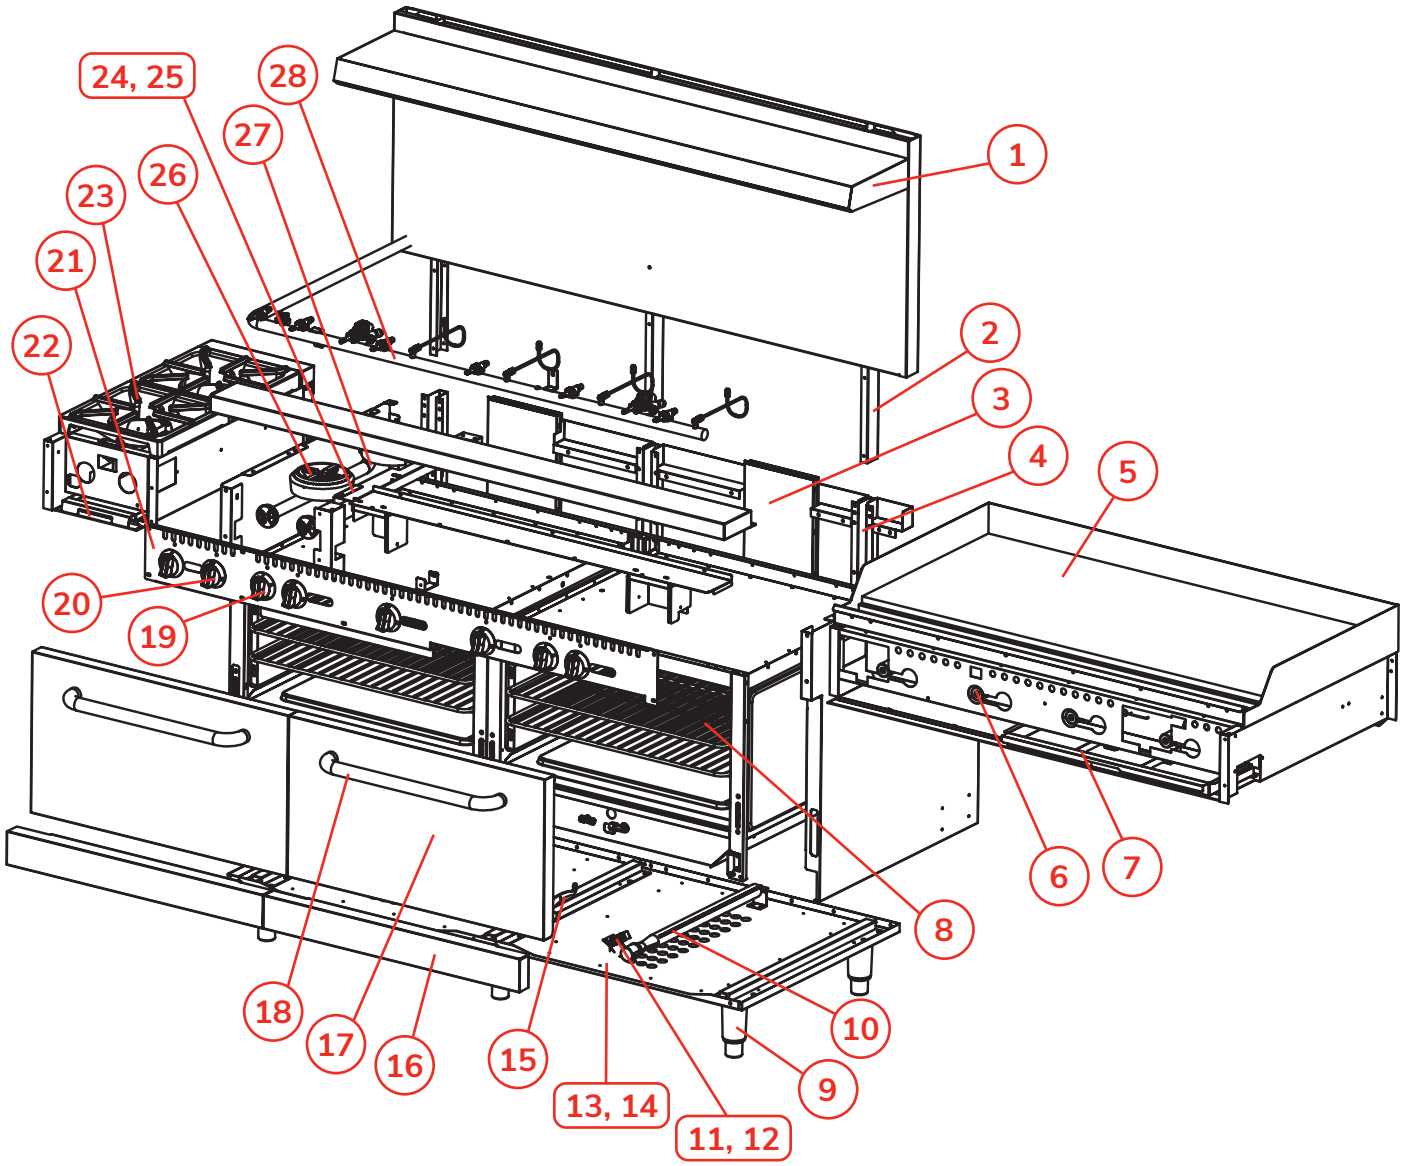

351S60G48(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150198	2	#36 Stove Burner Orifice - NAT
1b	351302150190	2	#51 Burner Orifice - LP
2	351302050051	6	Gas Stove Valve
3	351302220027	4	Dual Pilot Valve
4	351302220064	2	Oven Thermostat Valve
5a	351302150197	4	#44 Griddle Burner Orifice - NAT
5b	351302150193	4	#54 Griddle Burner Orifice - LP
6	351302220028	4	Single Pilot Valve
7	-	1	Gas Inlet Pipe

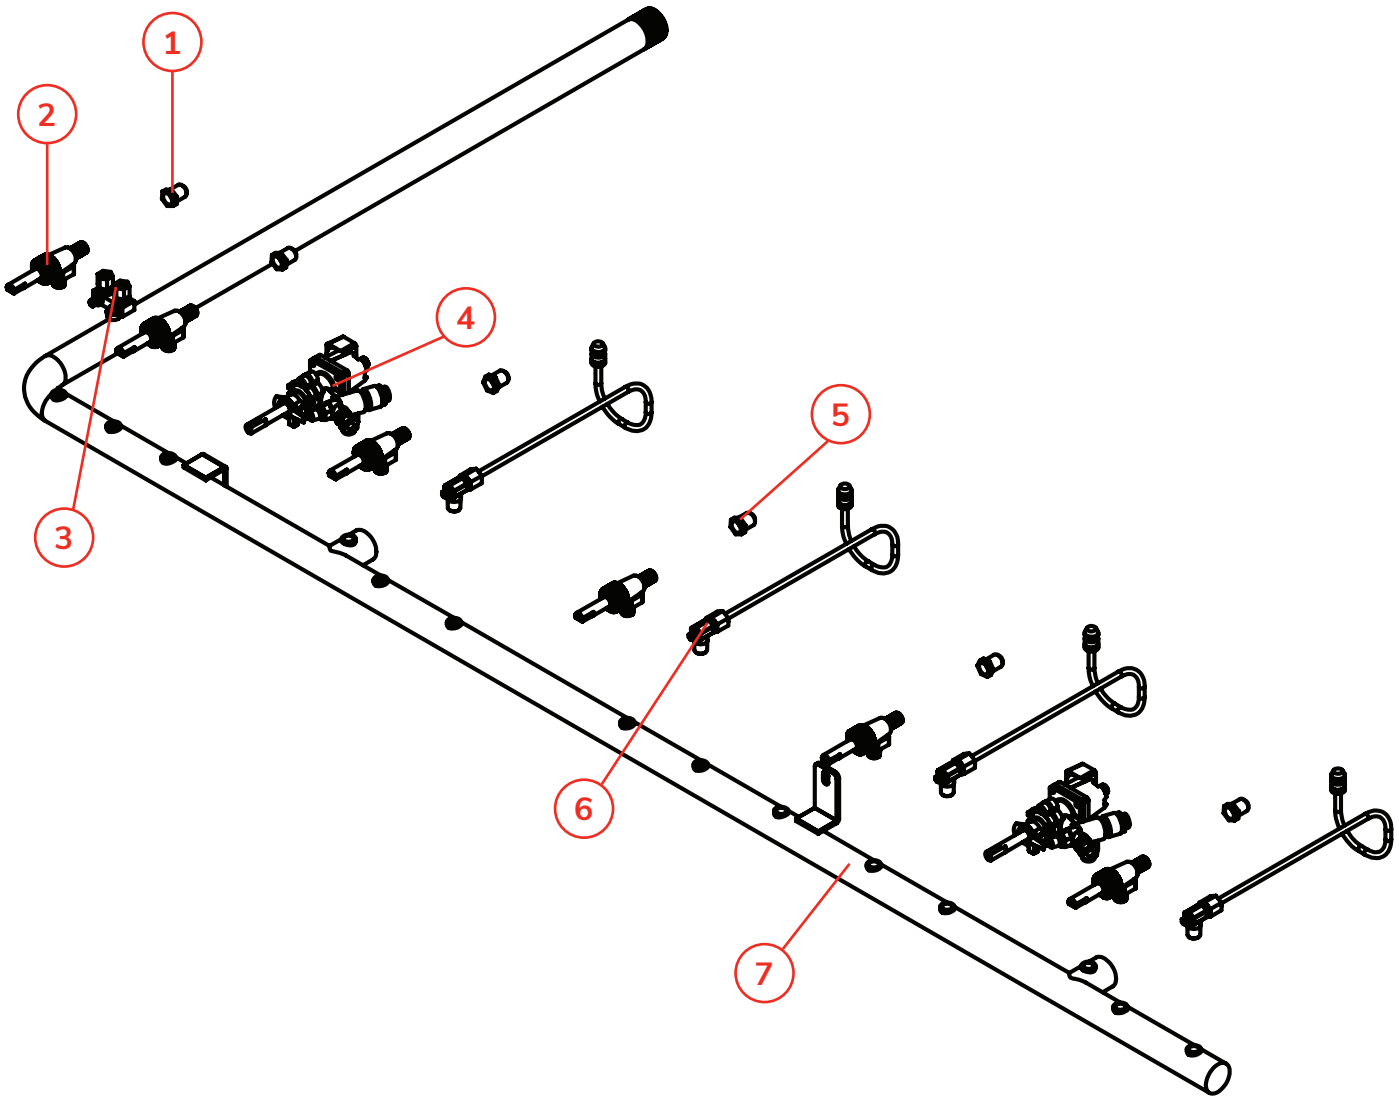

351S60G48(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110504	2	Rack Holder
9	351302110503	2	Rack 26" x 24.5"
10	-	1	Baseboard
11	35128051028	1	Deflector/baffle
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

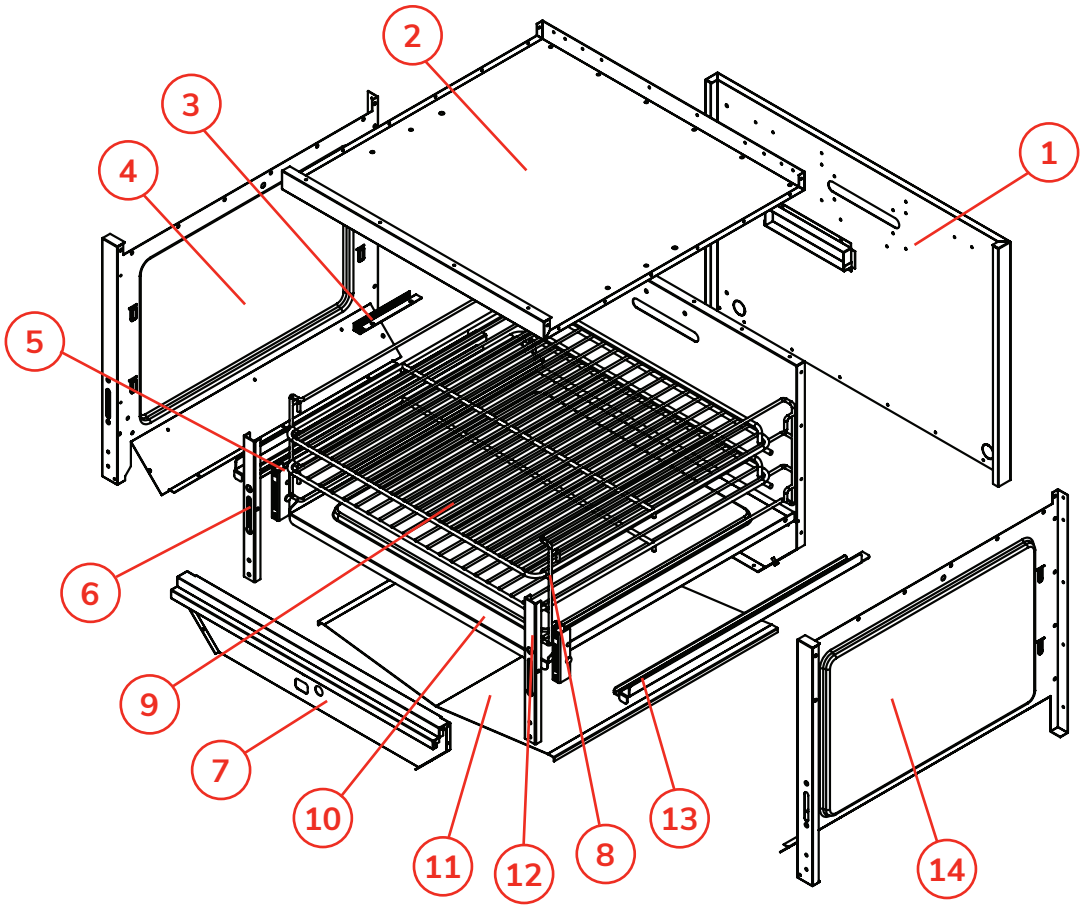


351S60GS24(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back Panel Assembly
2	35128051040	3	Back Panel Support
3	-	2	Inner Flue Assembly
4	-	3	Slide Rail
5	-	1	Griddle Plate Assembly
6	-	1	Right Side Panel
7	351302130384	3	Giddle Burner
8	351302110676	1	Broiler Rack
9	351228058007	1	Crumb Tray 19" x 26"
10	35128079008	1	Grease Tray
11	-	2	Oven Tank Assembly
12	351302090149	6	Adjustable leg with Plate
13	351302130384	2	Oven Burner
14	351302170058	2	Thermocouple
15a	35128051088	2	Oven Pilot - NAT
15b	351302130447	2	Oven Pilot - LP
16a	351302150198	2	#36 Burner Orifice - NAT
16b	351302150189	2	#50 Burner Orifice - LP
17	-	2	Orifice Elbow
18a	351302190428	2	Door Hinge - Right
18b	351302190430	2	Door Hinge - Left
19	-	2	30" Kickplate
20	-	2	Oven Door Assembly
21	351302070144	2	Door Handle
22	351301130111	2	Oven Knob
23	351202230111	9	Stove/Griddle Knob
24	-	1	Front Control Panel
25	351228051012	1	Crumb Tray 31" x 32"
26	-	1	Left Side Panel
27	-	1	Gas Control Assembly
28a	351228046045	3	Range Pilot Pipe (Short)
28b	351228046016	3	Range Pilot Pipe (Long)
29	351302130019	6	Stove Pilot
30	351128051028	3	Burner Assembly (short)
31	351128051027	3	Burner Assembly (long)
32	351302250132	6	Burner Grate

351S60GS24(L/N)


RANGE MAIN BODY

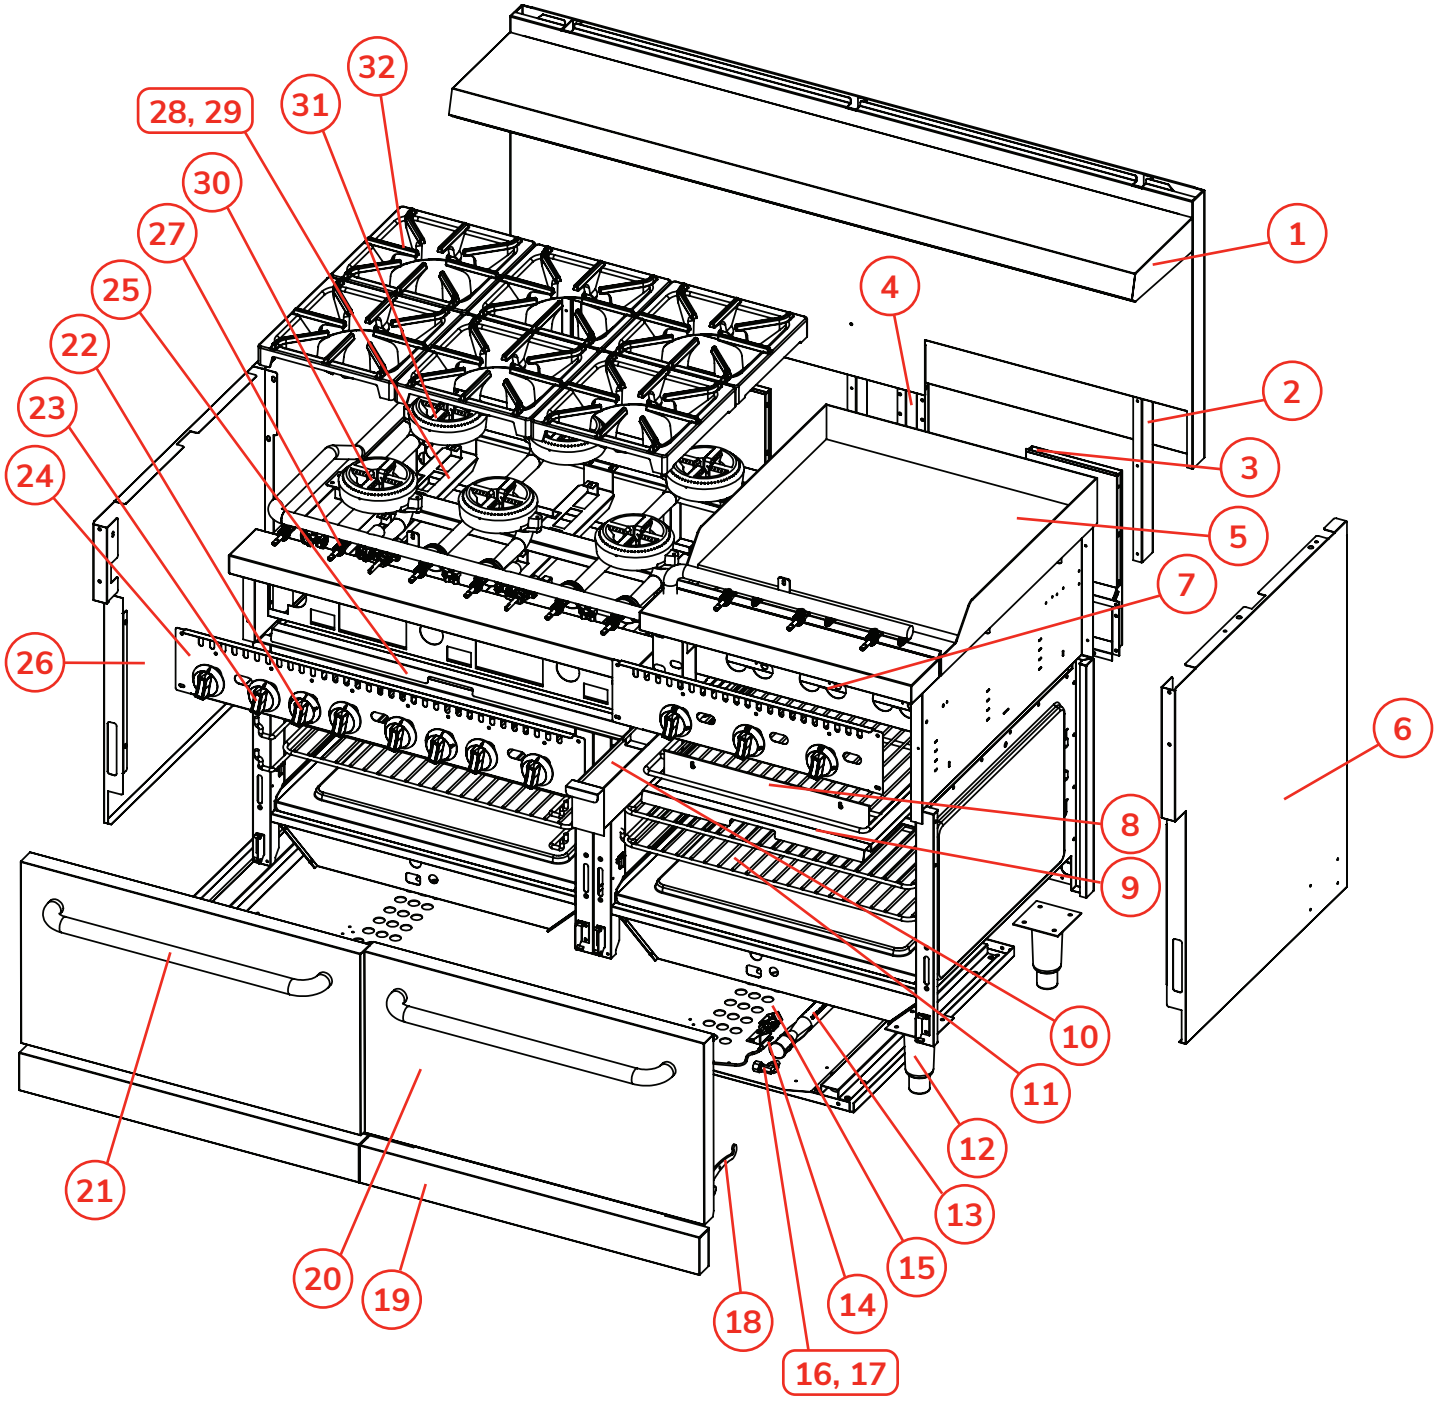

351S60GS24(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1	-	1	Gas Inlet Pipe
2a	351302150198	6	#36 Stove Burner Orifice - NAT
2b	351302150190	6	#51 Burner Orifice - LP
3	351302050051	9	Gas Stove Valve
4	351302220027	3	Dual Pilot Valve
5	351302220064	2	Oven Thermostat Valve
6	351302220028	3	Single Pilot Valve
7a	351302150190	3	#51 Griddle Burner Orifice - NAT
7b	351302150195	3	#59 Griddle Burner Orifice - LP

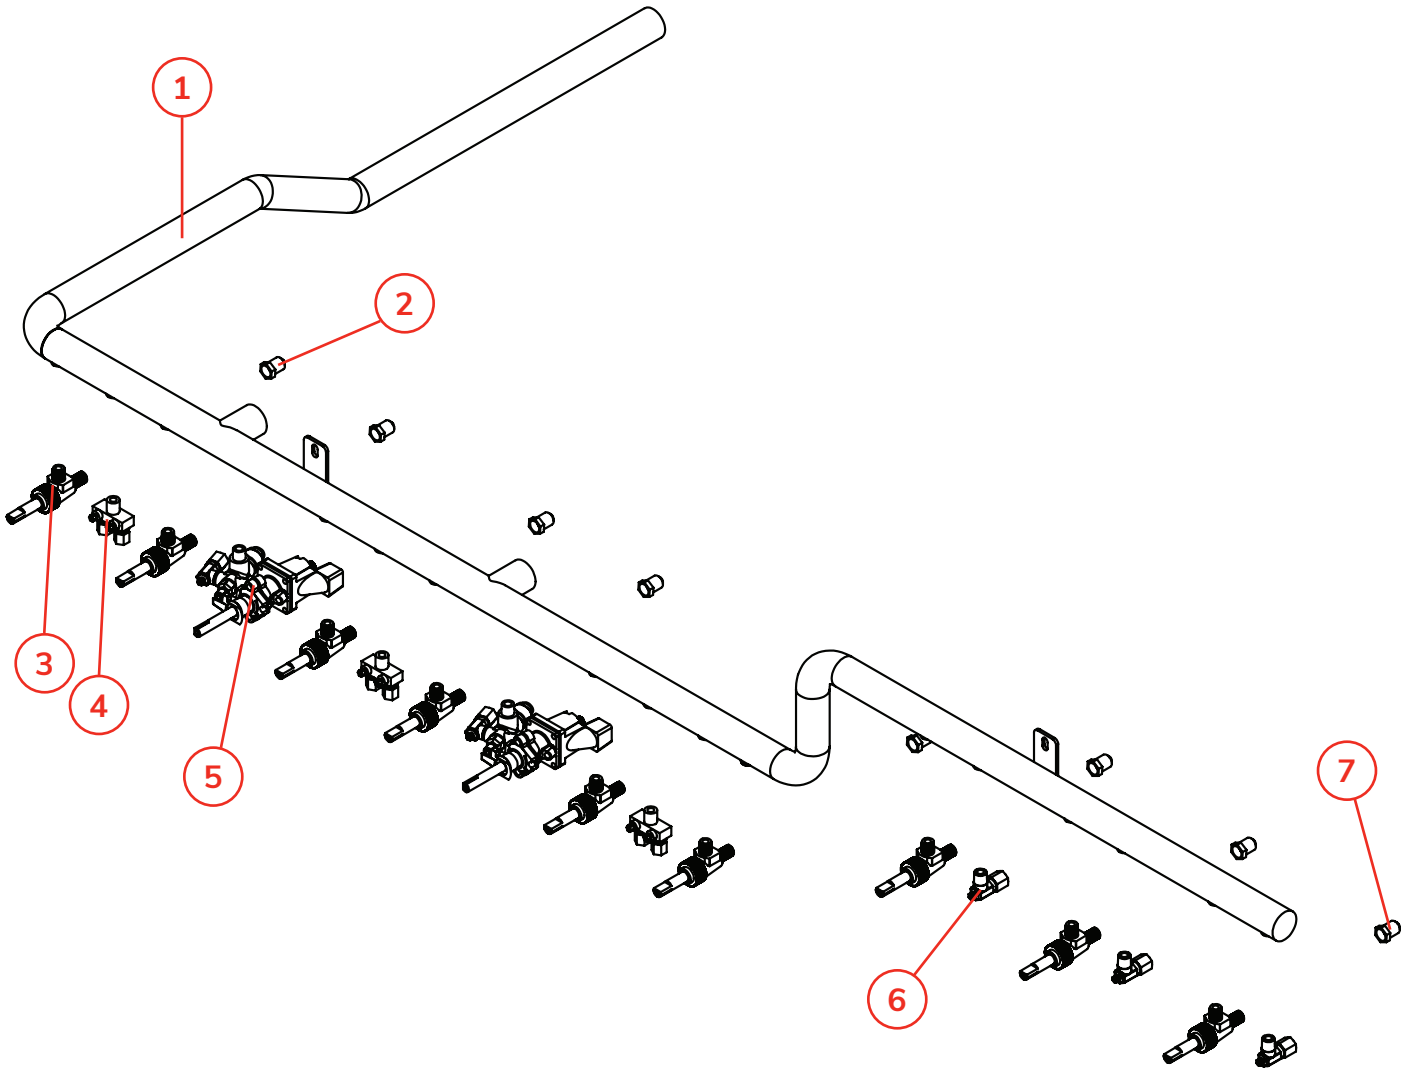

351S60GS24(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110504	2	Rack Holder
9	351302110503	2	Rack 26" x 24.5"
10	-	1	Baseboard
11	35128051028	1	Deflector/baffle
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

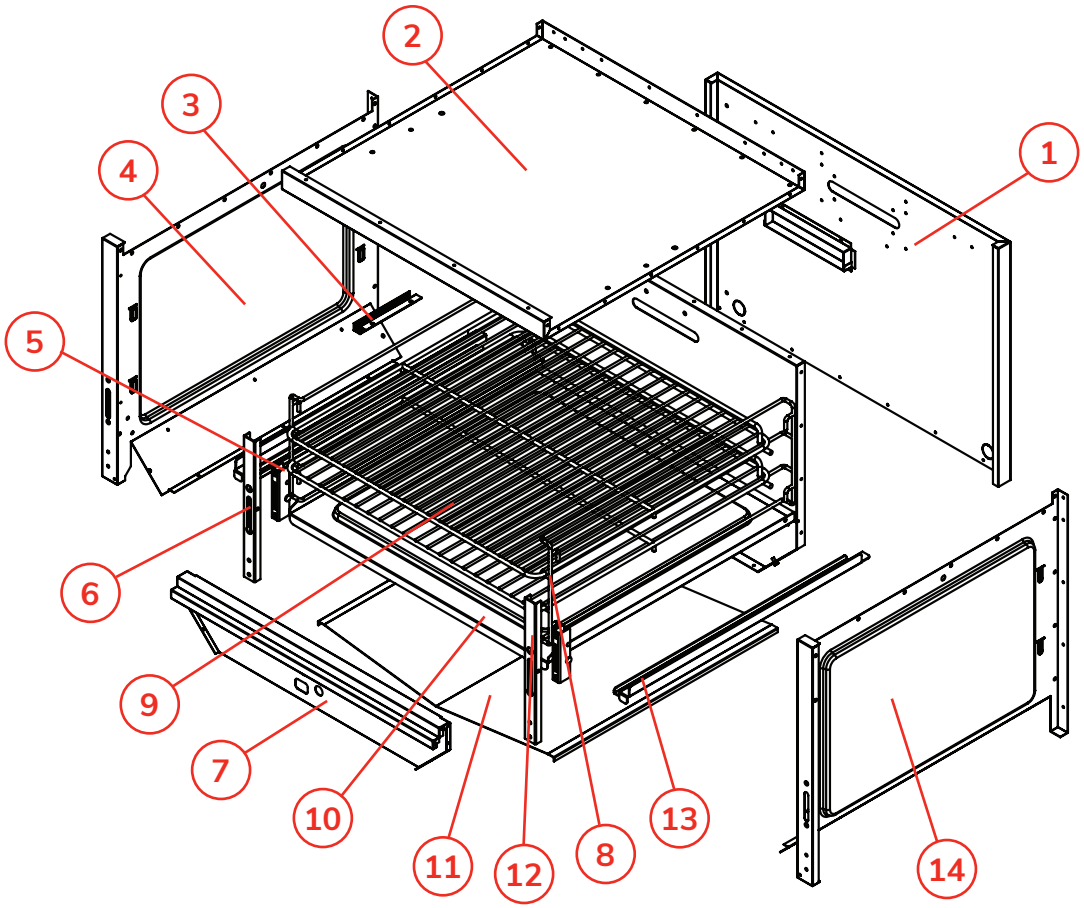


351S36SU(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back panel Assembly
2	35128051040	2	Back Panel Support
3	-	1	Inner Flue Assembly
4	-	2	Slide Rail
5	-	1	Right Side Panel
6	-	1	Oven Tank Assembly
7	351302090149	4	Adjustable leg with Plate
8a	351302190428	1	Door Hinge - Right
8b	351302190430	1	Door Hinge - Left
9	351302130384	1	Oven Burner
10	351302170058	1	Thermocouple
11a	351302130447	1	Oven Pilot - LP
11b	35128051088	1	Oven Pilot - NAT
12a	351302150198	1	#36 Burner Orifice - NAT
12b	351302150189	1	#50 Burner Orifice - LP
13	-	1	Orifice Elbow
14	-	1	32" Kick Plate
15	-	1	Oven Door Assembly
16	351302070144	1	Door Handle
17	351228051012	1	Crumb Tray 31" x 32"
18	-	1	Left Side Panel
19	351301130111	1	Oven Knob
20	351202230111	6	Stove Knob
21	-	1	Front Control Panel
22	351302050051	6	Gas Stove Valve
23a	351228046045	3	Range Pilot Pipe (Short)
23b	-	3	Range Pilot Pipe (Long)
24	351302130019	6	Stove Pilot
25	351128051028	3	Burner Assembly (short)
26	-	3	Burner Assembly (long)
27	351302250132	6	Burner Grate
28b	351228046016	3	Range Pilot Pipe (Long)
29	351302130019	6	Stove Pilot
30	351128051028	3	Burner Assembly (short)
31	351128051027	3	Burner Assembly (long)
32	351302250132	6	Burner Grate

351S36SU(L/N)


RANGE MAIN BODY

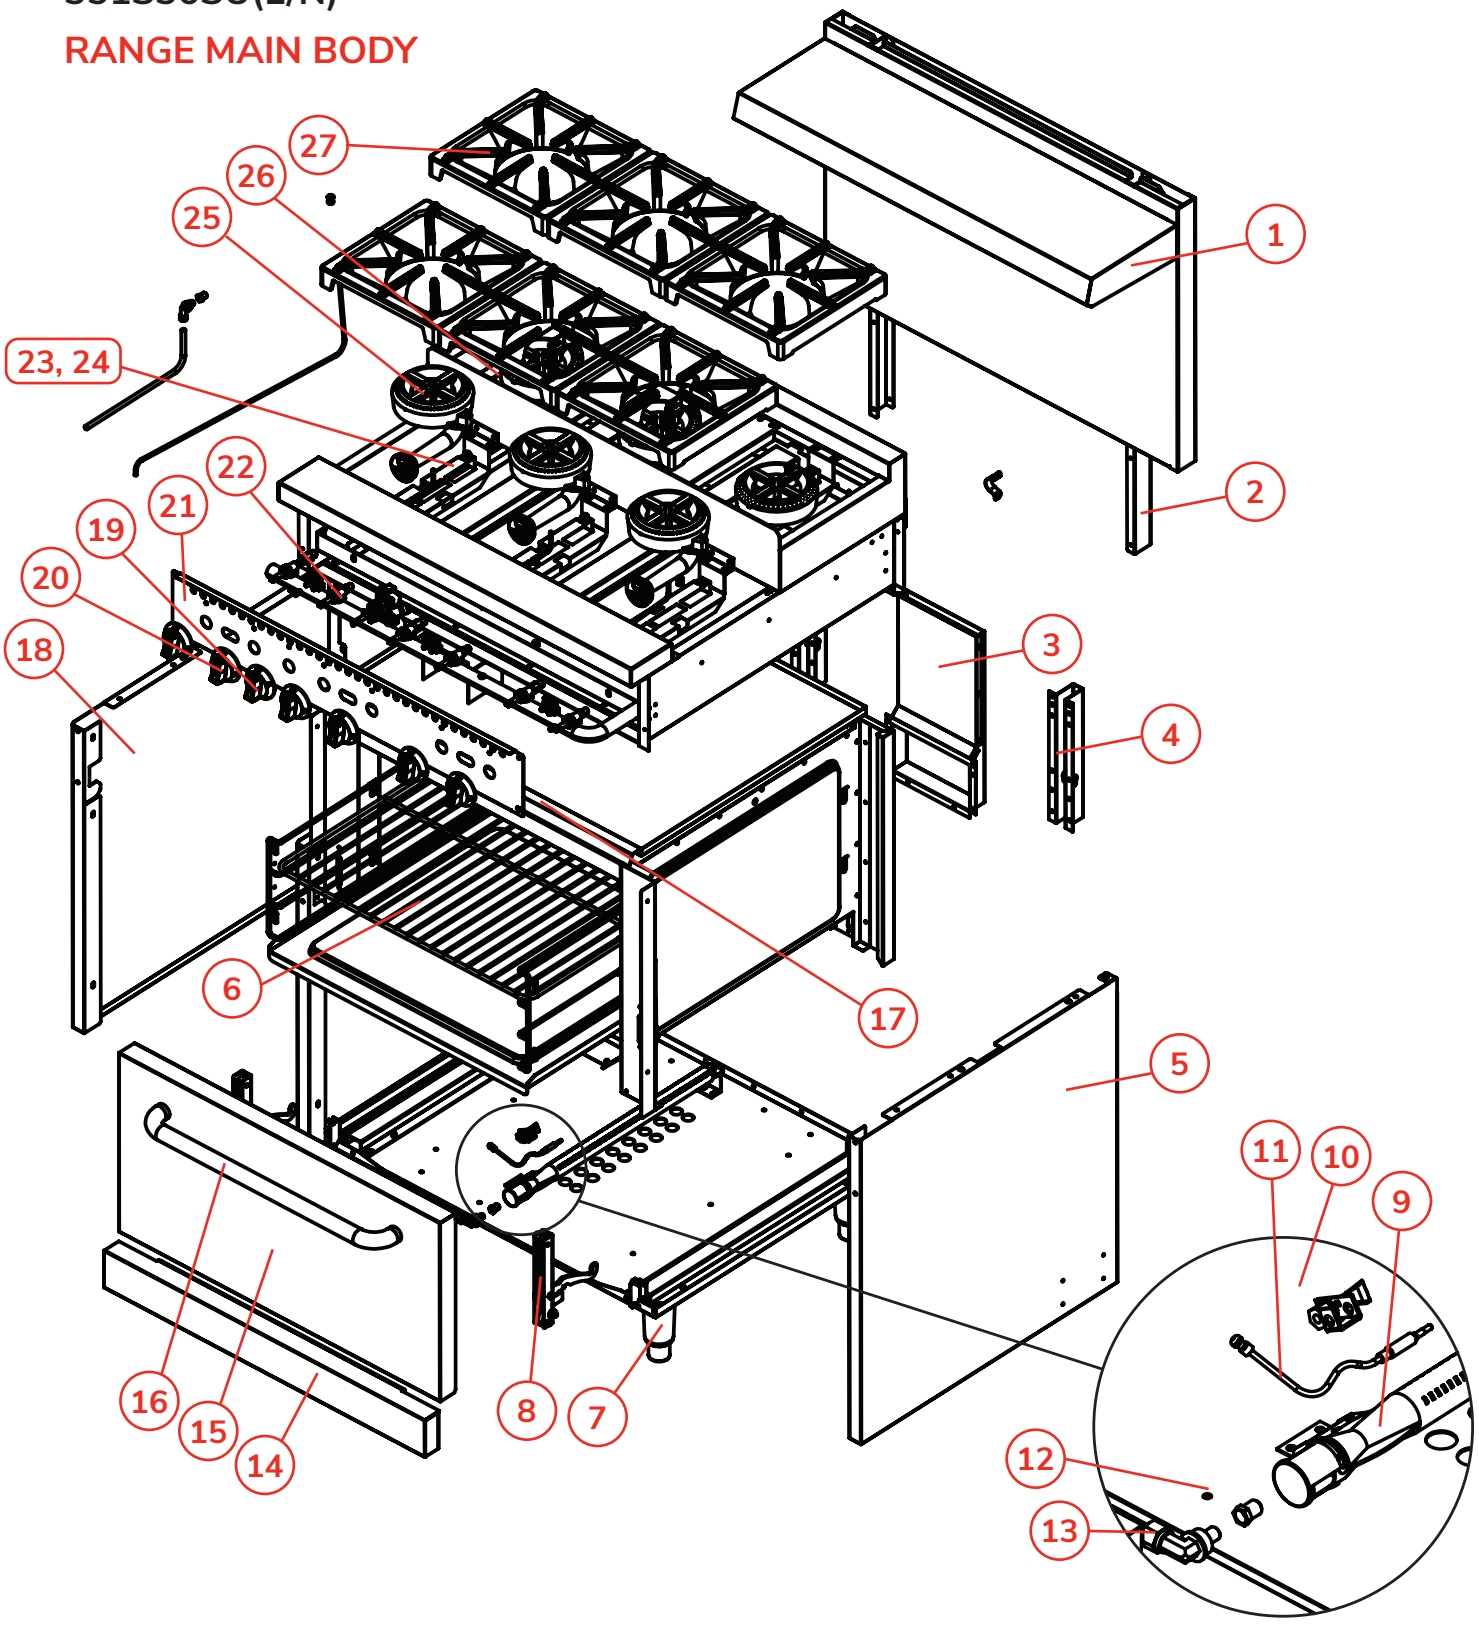

351S36SU(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1a	351302150198	6	#36 Burner Orifice - NAT
1b	351302150190	6	#51 Burner Orifice - LP
2	351302050051	6	Gas Stove Valve
3	351302220027	3	Dual Pilot Valve
4	351302220064	1	Oven Thermostat Valve
5	-	1	Screw
6	-	1	Gas Inlet Pipe

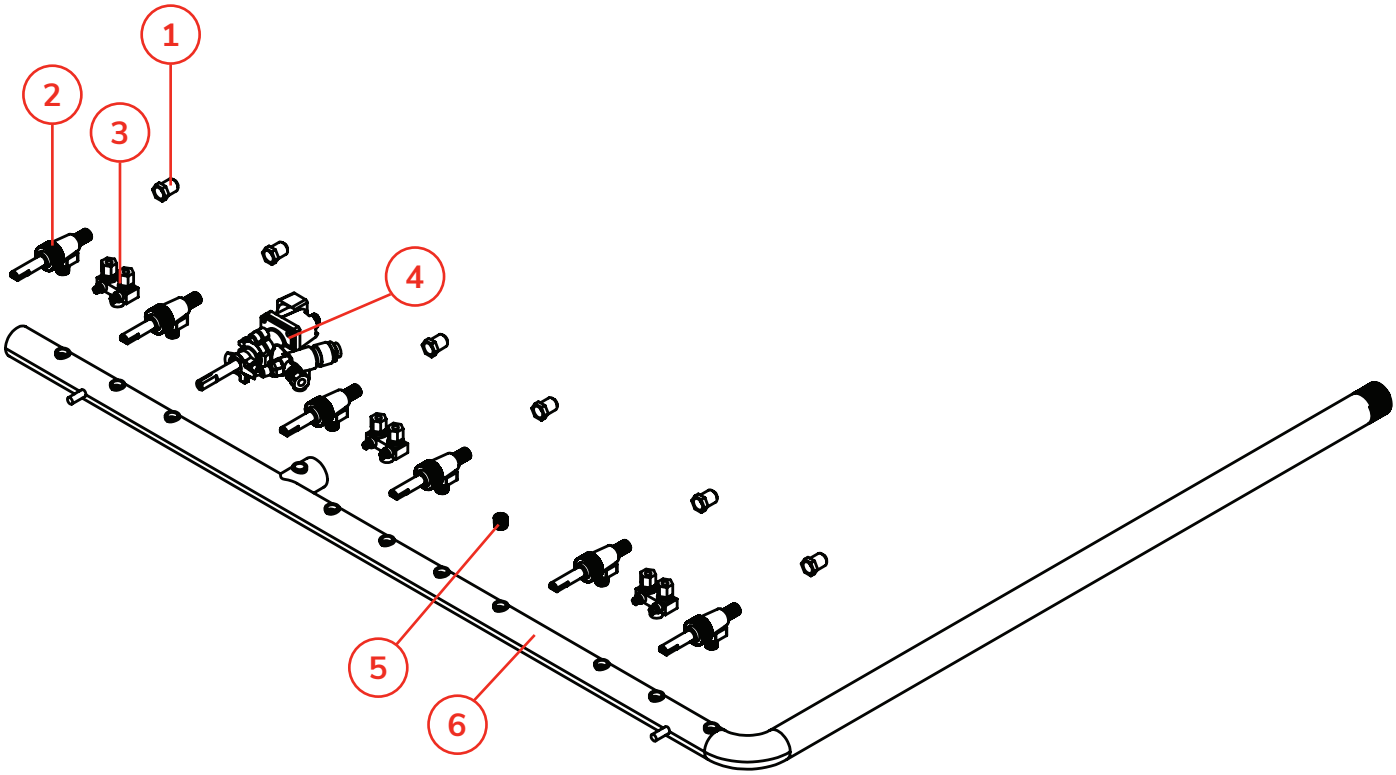

351S36SU(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	-	1	Rear Shrouding Assembly
2	-	1	Oven Tank Top Plate
3	-	1	Temp Probe Cover
4	-	1	Oven Tank Left Plate
5	-	1	Oven Tank Bottom Left Limit Plate
6	-	2	Oven Tank Side Reinforcement Plate
7	-	1	Oven Tank Lower Front Plate
8	351302110503	2	Rack 26" x 24.5"
9	-	1	Baseboard
10	35128051028	1	Deflector/baffle
11	351302110504	2	Rack Holder
12	351302190429	2	Door hinge - seat
13	-	1	Oven Tank Bottom Right Limit Plate
14	-	1	Oven Tank Right Plate

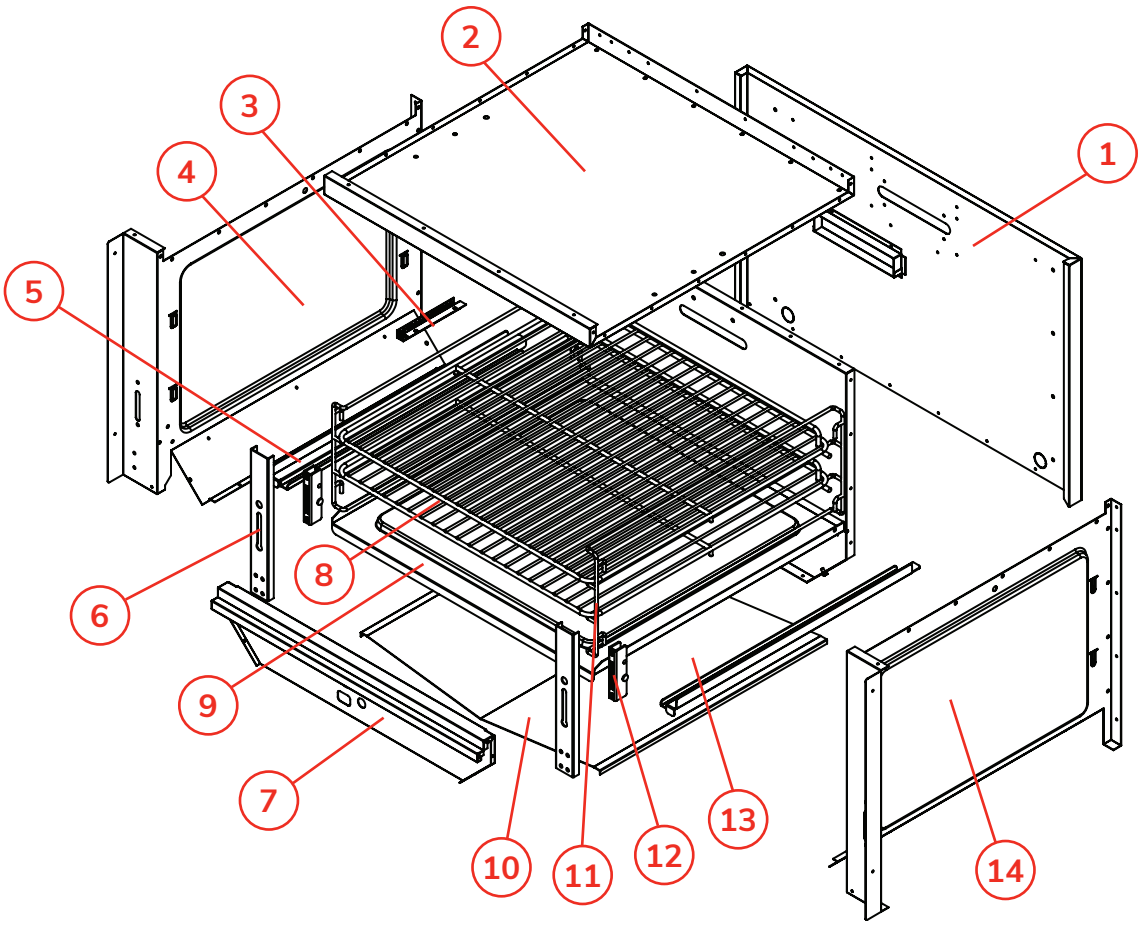


351C36(L/N)

RANGE MAIN BODY

Key	Item Number	Qty	Description
1	-	1	Back panel Assembly
2	35128051040	2	Back Panel Support
3	-	1	Inner Flue Assembly
4	-	2	Slide Rail
5		1	Motor Assembly
6	-	1	Right Side Panel
7	-	1	Oven Tank Assembly
8	351302090149	4	Adjustable leg with Plate
9	351302130387	1	Oven Burner
10	351302170065	1	Thermocouple
11a	351302130447	1	Oven Pilot - LP
11b	35128051088	1	Oven Pilot - NAT
12a	351302150342	1	#35 Burner Orifice - NAT
12b	351302150189	1	#50 Burner Orifice - LP
13	-	1	Orifice Elbow
14a	351080175	1	Door Switch
14b	35128092036	1	Door Switch Bracket
14b	35128092037	1	Door Switch Touch Plate
15	-	1	Kick Plate
16	35128092006	1	Oven Door Assembly
17	351302070144	1	Door Handle
18	351302220135	1	Oven Pilot Valve
19	-	1	Left Side Panel
20	35128092016	1	Motor Support Plate

351C36(L/N)


RANGE MAIN BODY

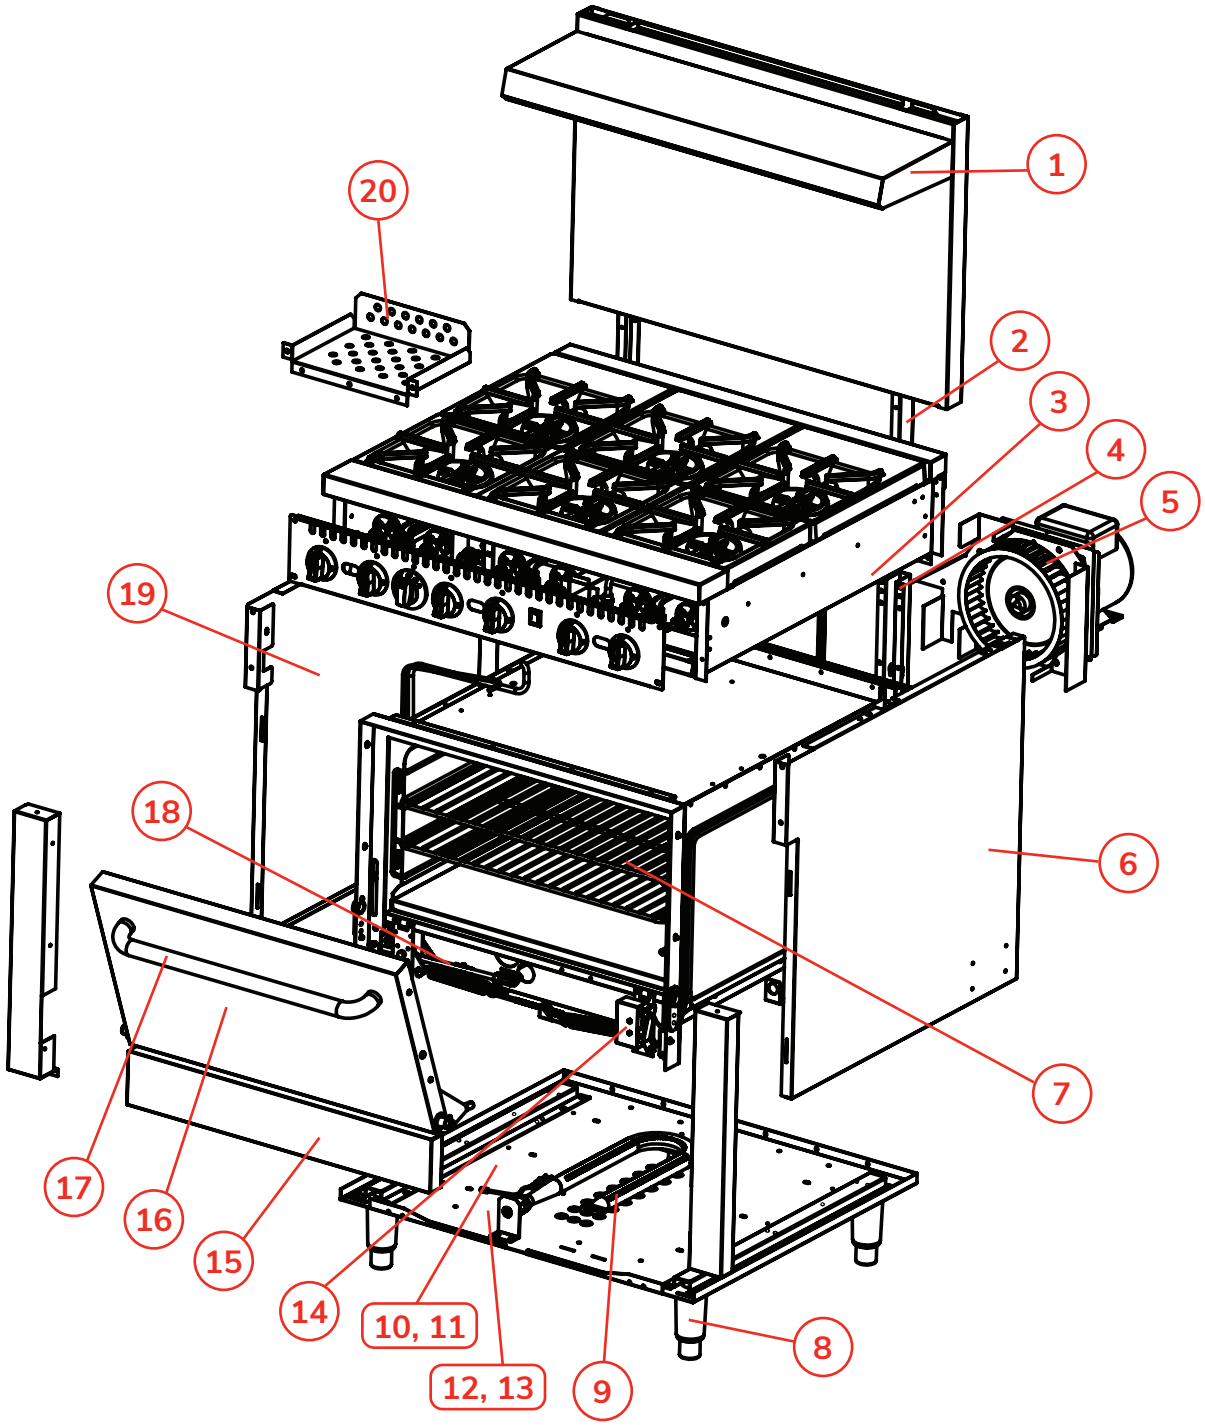

351C36(L/N)

GAS CONTROL ASSEMBLY


Key	Item Number	Qty	Description
1	351302250181	3	Rear Burner Grate
2	351302250132	3	Front Burner Grate
3	351128051027	3	Burner Assembly (long)
4	351128051028	3	Burner Assembly (short)
5	351228046045	3	Range Pilot Pipe (Short)
6	351228046016	3	Range Pilot Pipe (Long)
7	351302130019	6	Stove Pilot
8	35128092005	1	Crumb Tray
9	351301080174	1	Oven Switch
10	351301110555	1	Oven Knob
11	351202230111	6	Stove Knob
12	-	1	Front Control Panel
13a	351302150198	6	#36 Burner Orifice - NAT
13b	351302150190	6	#51 Burner Orifice - LP
14	351302050051	6	Gas Stove Valve
15	351302220027	3	Dual Pilot Valve
16	351302220132	1	Oven Thermostat Valve
17	351302202348	1	Gas Valve Switch Socket
18	-	1	Gas Inlet Pipe

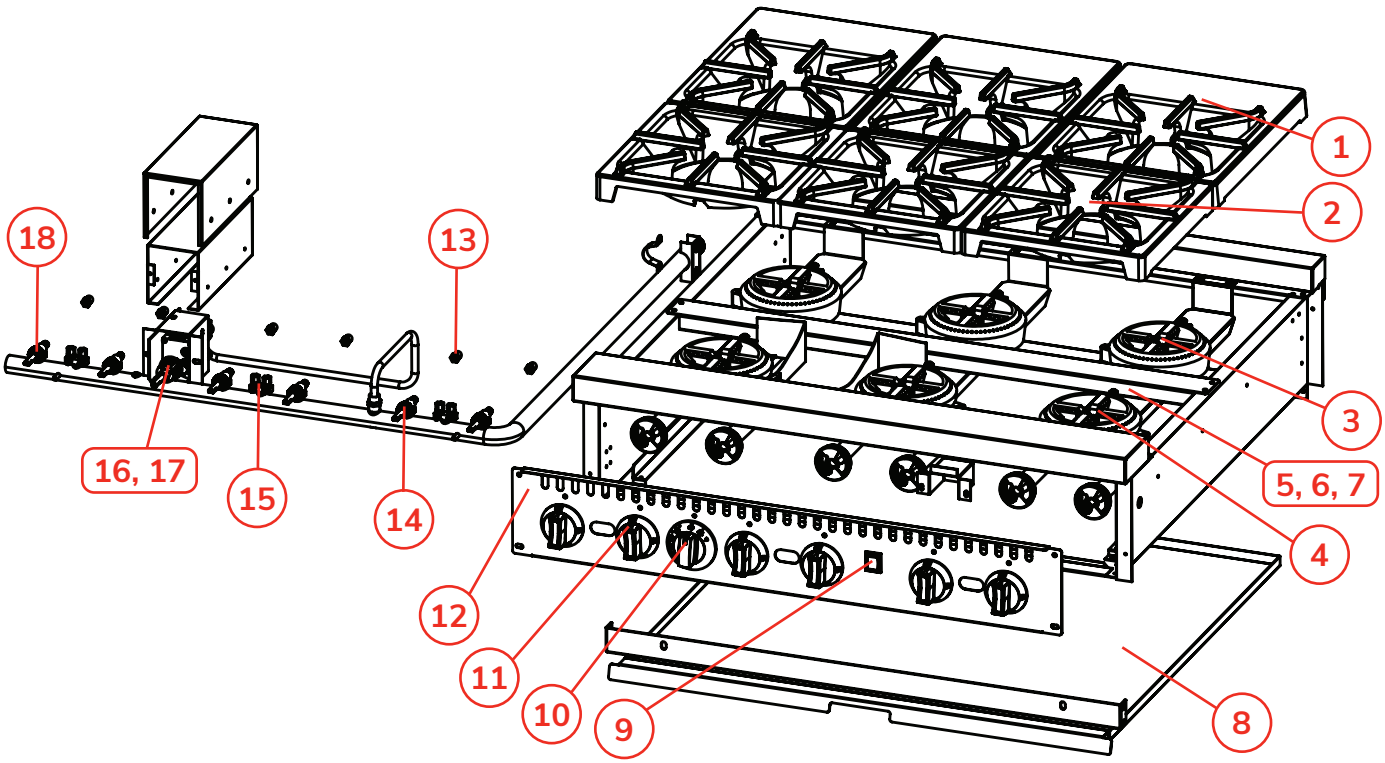

351C36(L/N)

OVEN TANK ASSEMBLY

Key	Item Number	Qty	Description
1	351314490021	1	Temp Probe Cover
2	-	1	Fan cover
3	351302190429	2	Door hinge - seat
4	351302110504	2	Rack Holder
5	351302110503	2	Rack 26" x 24.5"

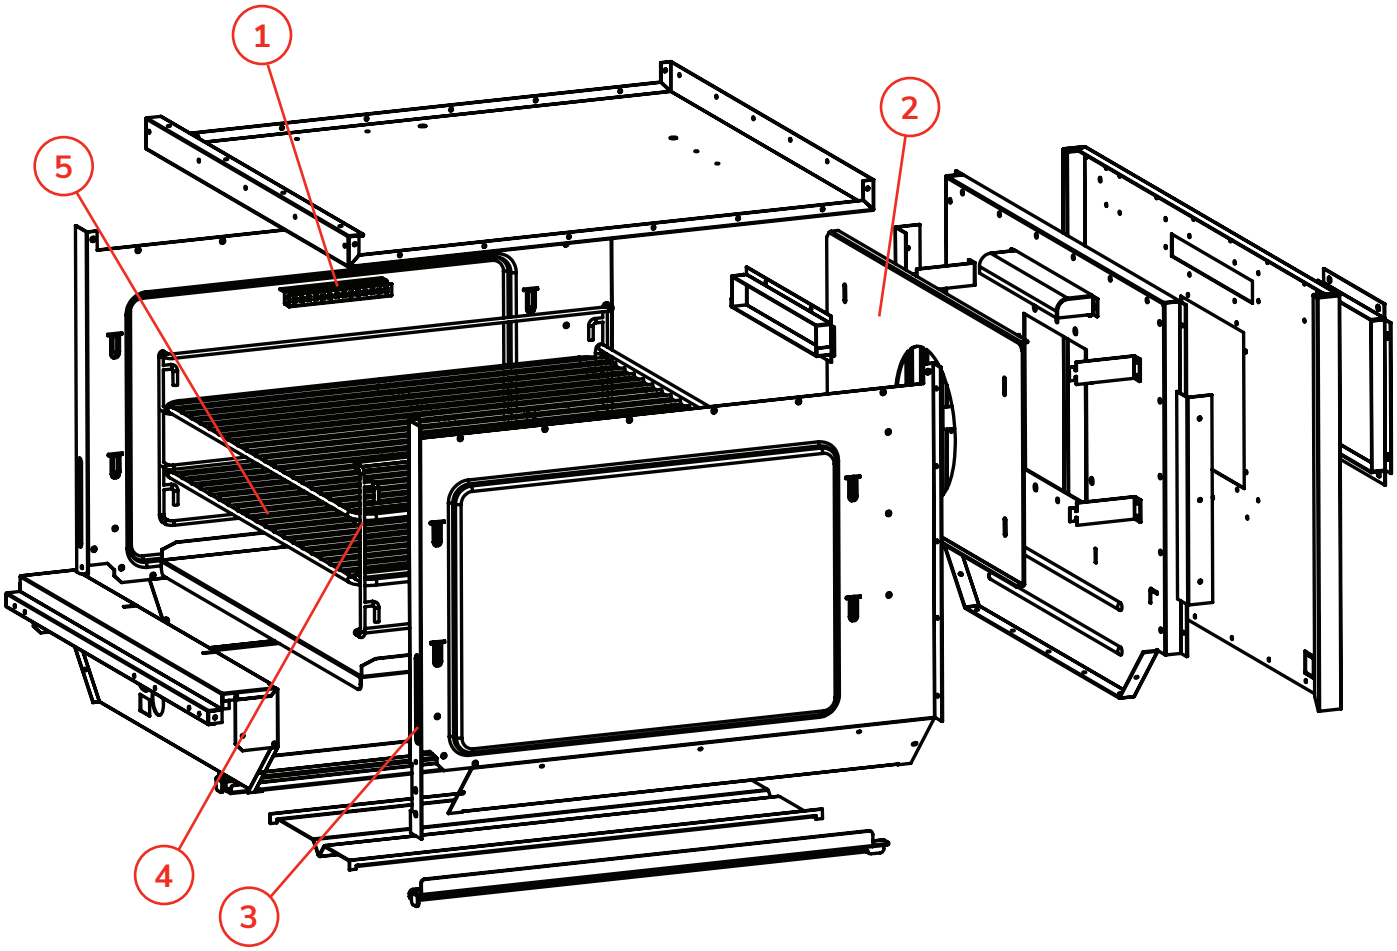

Wiring Diagram

