


HOW TO FIT GENIEGRIPS® CUSHIONS



STEP 1:

Locate Magnets

Ensure Cushions are correct way up, with magnets facing forktyne shaft.

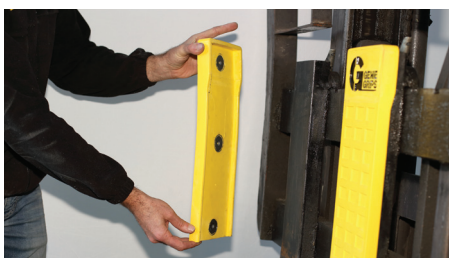

STEP 2:

Position Cushion


Position the Cushions over the forktyne so it meets the top of shaft.



STEP 3:

Push Firmly

Push Cushions firmly against the forktyne shaft to ensure strong contact is made with magnets.

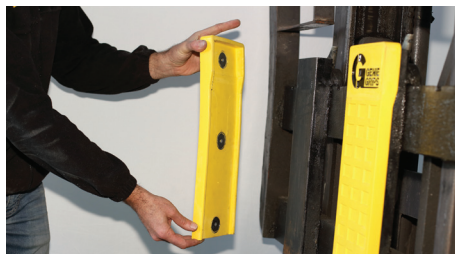

STEP 4:

To Remove

Reverse steps 1-3 to remove GenieGrips® Cushions.



STEP 5:

Storage

Store Cushions away neatly on forklift to ensure GenieGrips® are easily accessible at all times.



ALWAYS:

- Ensure forklift truck is only operated by licensed/trained personnel and in accordance with manufacturer's safe operating procedures.

HELPFUL HINT:

"Ensure GenieGrips® Cushions magnets are kept clean and free of contamination (eg grease, oil, paint, etc)"