


EX-CELL KAISER 11240 Melrose Avenue Franklin Park, IL 60131 Phone: (847) 451-0451 www.ex-cell.com

Liner BagInstallation Instructions

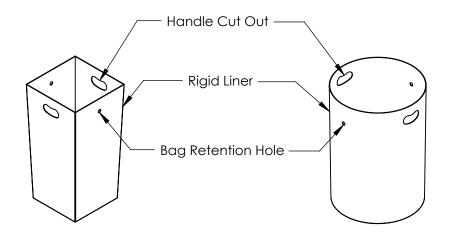

Notes:

- 1. Rigid liners may vary by shape & size.
- 2. Liner bag provided by others.

Step 1

Using appropriately sized liner bag, open and and insert into the rigid liner.



Twist both sides of liner bag to tighten against outside of rigid liner.

Step 3

Push the twisted ends of liner bag into the retention holes on each side of rigid liner.







Liner Bag - Installation Rev. 0