



www.micromatic.com

Toll Free: 1 (866) 327-4159

Easy Party Pump Cleaning Procedure

- 1. Remove cleaning bottle cap. Mix cleaning chemical with water per manufacturer's instructions.
- 2. Screw cap back on to bottle and engage party pump as if tapping a keg.
- 3. Pressurize cleaning bottle with party pump and release cleaning solution by squeezing faucet, allowing approximately 1 liter to flow out.
- **4.** Pull pressure relief valve to release bottle pressure before removing bottle cap. Remove cleaning bottle cap. Pour fresh water into cleaning bottle. Screw bottle cap back on and engage party pump.
- **5.** Pressurize cleaning bottle with party pump and release fresh water by squeezing faucet, allowing approximately 1 liter to flow out.








M5-801147

MM-B68

FT101L O-Ring Lubricant

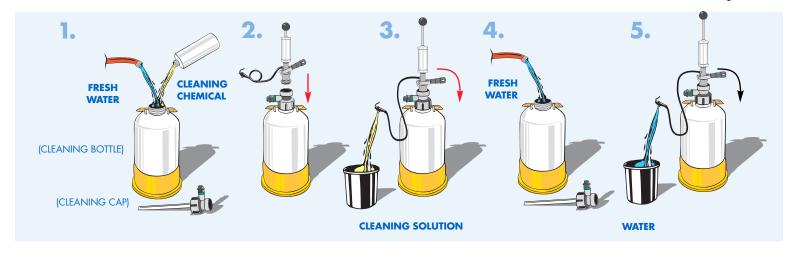

Party Pump Styles

There are a variety of hand pumps used in the industry today. Pumps are usually plastic or metal and are available with a short barrel or long.



3" Plastic Pump With Plastic Piston



8" Plastic Pump With Plastic Piston



8" Plastic Pump With Stainless Steel Piston





4" & 8" Chrome Plated Pump With Stainless Steel Piston

Knob

Hand Pump Servicing


Hand pumps occasionally need to disassembled and serviced. You must check the O-ring to make sure that it is properly lubricated and sealing to the barrel. Always use FT101L Oring lubricant (food grade).

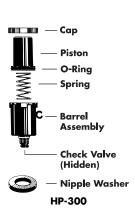

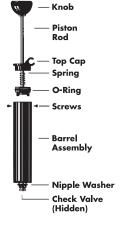



HP-100

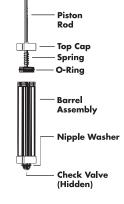

HP-700 & HP-900



Toll Free: 1 (866) 327-4159

