

ASSEMBLY GUIDE



TABLE OPEN BASE

TECHNICAL SPECIFICATIONS

Item Number	522ETOB2430, 522ETOB2436, 522ETOB2448, 522ETOB2460, 522ETOB2472, 522ETOB2496, 522ETOB3030, 522ETOB3036, 522ETOB3048, 522ETOB3060, 522ETOB3072, 522ETOB3096
Shelf Material	Stainless Steel

WARNING: Risk of personal injury. Stainless steel edges are sharp and can cause cuts. Use gloves and handle with care.

INSTALLATION

1

Place the tabletop upside down on a surface that won't scratch it.

2

Insert the legs into the tabletop gussets. You may need to loosen the set screw if one struggles to go in. See Figure 1.

3

Partially tighten the set screws—full tightening will come later.

4

On each of the legs, mark the height where you'll be installing your braces. It should be at least 6 inches off the ground for food safety.

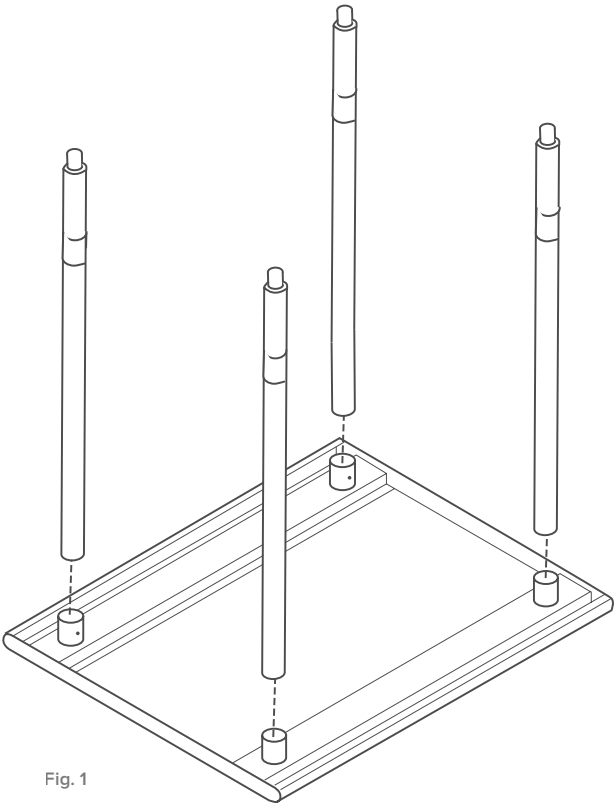


Fig. 1

5

Once marked, slide the cross braces onto the legs and fully tighten all the set screws. See Figure 2.

6

Adjust the feet as needed to meet your height requirements or to compensate for uneven flooring.

7

Flip the table over and peel off the protective film. See Figure 3.

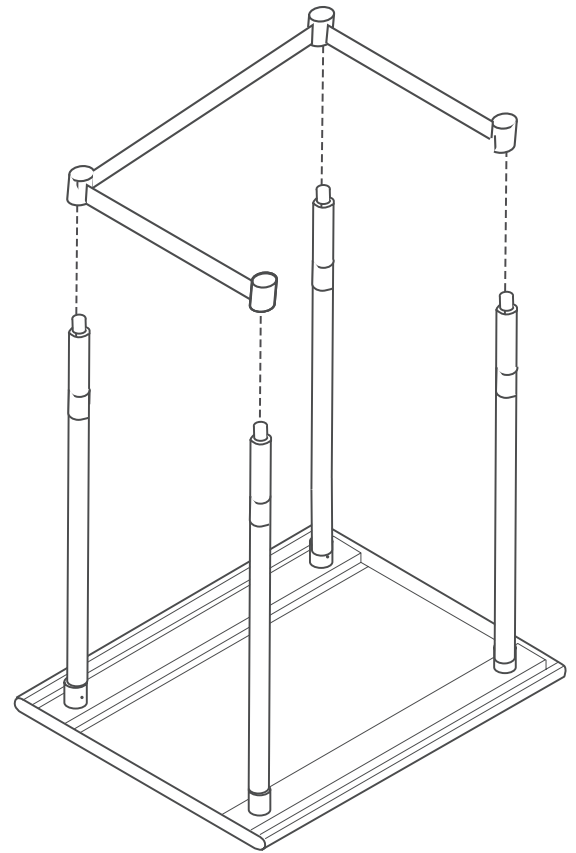


Fig .2

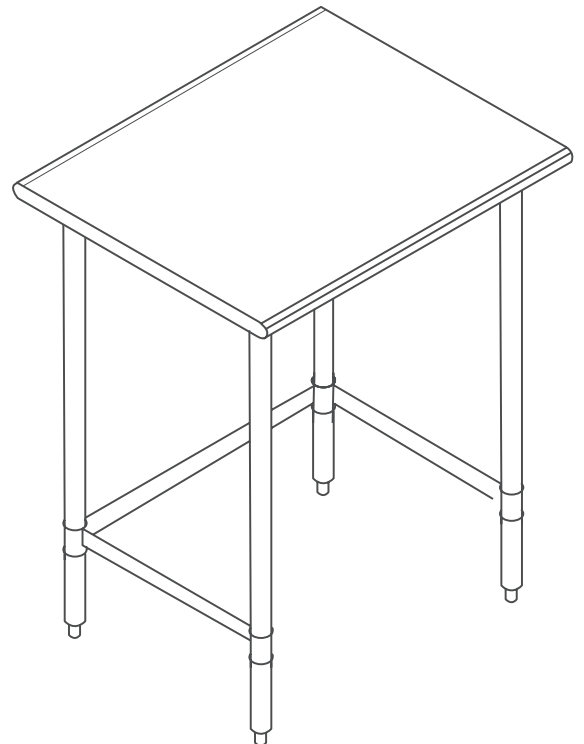


Fig .3