


Turning the Machine On/Off

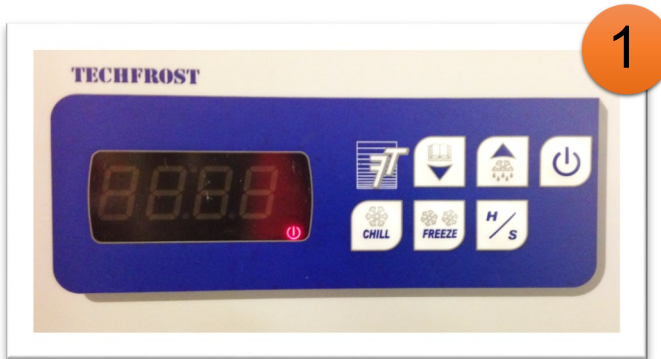


- Machine is "Off"; Red symbol is lit.



- Push and HOLD power, ON/OFF key
- The red power light disappears and the screen displays the temperature.

 ON/OFF AND
START/STOP

Starting the Chilling/Freezing Process

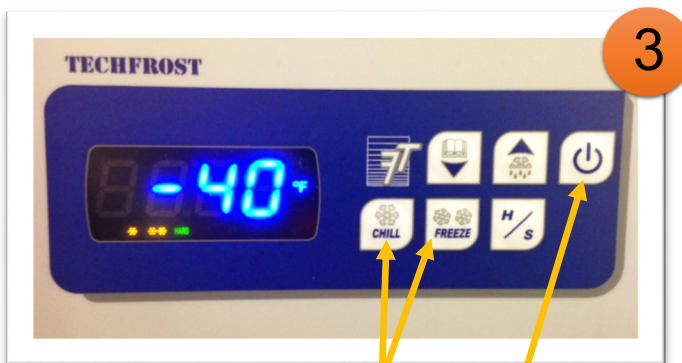

- Select "CHILL" or "FREEZE"
- Push and release the "ON/OFF" Key



- When "START" is selected, indicator shows 240 minutes and the freezing process begins.
- (To see the cabinet temperature, push "FREEZE" again when it is in operation. It will show temperature and momentarily return to the time display).

Chill: 34°F
Freeze: -40°F