

G Series VH Grinder

Fast, Precision Grinders with Visual Hoppers

GVH-1, GVH-2 & GVH-3



INSTALLATION & OPERATING GUIDE

To ensure you have the latest revision of the Operating Manual, or to view the Illustrated Parts Catalog, Programming Manual, or Service Manual, please visit the Bunn-O-Matic website, at www.bunn.com. For Technical Service, contact Bunn-O-Matic Corporation at 1-800-286-6070.

Bunn-O-Matic Corporation

Post Office Box 3227, Springfield, Illinois 62708-3227 Phone (217) 529-6601 | Fax (217) 529-6644

BUNN-O-MATIC COMMERCIAL PRODUCT WARRANTY

Bunn-O-Matic Corp. ("BUNN") warrants equipment manufactured by it as follows:

- 1) Airpots, thermal carafes, decanters, GPR servers, iced tea/coffee dispensers, MCR/MCP/MCA single cup brewers, thermal servers and ThermoFresh® servers (mechanical and digital) 1 year parts and 1 year labor.
- 2) All other equipment 2 years parts and 1 year labor plus added warranties as specified below:
 - a) Electronic circuit and/or control boards parts and labor for 3 years.
 - b) Compressors on refrigeration equipment 5 years parts and 1 year labor.
 - c) Grinding burrs on coffee grinding equipment to grind coffee to meet original factory screen sieve analysis parts and labor for 4 years or 40,000 pounds of coffee, whichever comes first.

These warranty periods run from the date of installation BUNN warrants that the equipment manufactured by it will be commercially free of defects in material and workmanship existing at the time of manufacture and appearing within the applicable warranty period. This warranty does not apply to any equipment, component or part that was not manufactured by BUNN or that, in BUNN's judgment, has been affected by misuse, neglect, alteration, improper installation or operation, improper maintenance or repair, non periodic cleaning and descaling, equipment failures related to poor water quality, damage or casualty. In addition, the warranty does not apply to replacement of items subject to normal use including but not limited to user replaceable parts such as seals and gaskets. This warranty is conditioned on the Buyer 1) giving BUNN prompt notice of any claim to be made under this warranty by telephone at (217) 529-6601 or by writing to Post Office Box 3227, Springfield, Illinois 62708-3227; 2) if requested by BUNN, shipping the defective equipment prepaid to an authorized BUNN service location; and 3) receiving prior authorization from BUNN that the defective equipment is under warranty.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTY, WRITTEN OR ORAL, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The agents, dealers or employees of BUNN are not authorized to make modifications to this warranty or to make additional warranties that are binding on BUNN. Accordingly, statements by such individuals, whether oral or written, do not constitute warranties and should not be relied upon.

If BUNN determines in its sole discretion that the equipment does not conform to the warranty, BUNN, at its exclusive option while the equipment is under warranty, shall either 1) provide at no charge replacement parts and/or labor (during the applicable parts and labor warranty periods specified above) to repair the defective components, provided that this repair is done by a BUNN Authorized Service Representative; or 2) shall replace the equipment or refund the purchase price for the equipment.

THE BUYER'S REMEDY AGAINST BUNN FOR THE BREACH OF ANY OBLIGATION ARISING OUT OF THE SALE OF THIS EQUIPMENT, WHETHER DERIVED FROM WARRANTY OR OTHERWISE, SHALL BE LIMITED, AT BUNN'S SOLE OPTION AS SPECIFIED HEREIN, TO REPAIR, REPLACEMENT OR REFUND.

In no event shall BUNN be liable for any other damage or loss, including, but not limited to, lost profits, lost sales, loss of use of equipment, claims of Buyer's customers, cost of capital, cost of down time, cost of substitute equipment, facilities or services, or any other special, incidental or consequential damages.

392, A Partner You Can Count On, Air Infusion, AutoPOD, AXIOM, BrewLOGIC, BrewMETER, Brew Better Not Bitter, BrewWISE, BrewWIZARD, BUNN Espress, BUNN Family Gourmet, BUNN Gourmet, BUNN Pour-O-Matic, BUNN, BUNN with the stylized red line, BUNNlink, Bunn-OMatic, Bunn-O-Matic, BUNNserve, BUNNSERVE with the stylized wrench design, Cool Froth, DBC, Dr. Brew stylized Dr. design, Dual, Easy Pour, EasyClear, EasyGard, Flavor-Gard, Gourmet Ice, Gourmet Juice, High Intensity, iMIX, Infusion Series, Intellisteam, My Café, Phase Brew, PowerLogic, Quality Beverage Equipment Worldwide, Respect Earth, Respect Earth with the stylized leaf and coffee cherry design, Safety-Fresh, savemycoffee.com, Scale-Pro, Silver Series, Single, Smart Funnel, Smart Hopper, SmartWAVE, Soft Heat, SplashGard, The Mark of Quality in Beverage Equipment Worldwide, ThermoFresh, Titan, trifecta, TRIFECTA (stylized logo), Velocity Brew, Air Brew, Beverage Bar Creator, Beverage Profit Calculator, Brew better, not bitter., Build-A-Drink, BUNNSource, Coffee At Its Best, Cyclonic Heating System, Daypart, Digital Brewer Control, Element, Milk Texturing Fusion, Nothing Brews Like a BUNN, Picture Prompted Cleaning, Pouring Profits, Signature Series, Sure Tamp, Tea At Its Best, The Horizontal Red Line, Ultra are either trademarks or registered trademarks of Bunn-O-Matic Corporation. The commercial trifecta® brewer housing configuration is a trademark of Bunn-O-Matic Corporation.

CONTENTS


Warranty	2
User Notices	4
North American Requirements	5
CE Requirements	5
Electrical Requirements	6
Operating Controls	6
Initial Setup	7
Burr Adjustment	8
Coffee Grinding	8
Weekly Cleaning	9
6 Month Cleaning	9
Wiring Schematic	9
Decal Installation Instructions	10 - 1


CAUTION


Working safely around electrical components and hot water is an important factor to consider when performing these tasks. Please pay attention to safety decals on the equipment and refer to the Installation & Operating Guide to avoid possible injury.

USER NOTICES

Carefully read and follow all notices on the grinder and in this manual. They were written for your protection. All notices on the grinder are to be kept in good condition. Replace any unreadable or damaged labels.

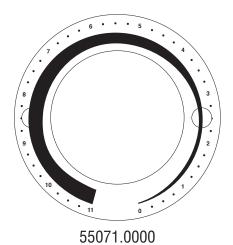

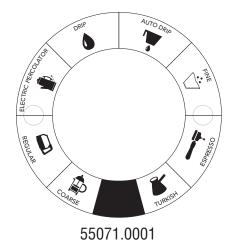

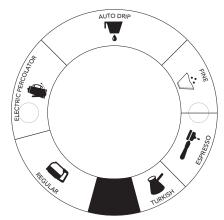


55071.0002 (Turkish)

WARNING

To reduce the risk of electric shock, do not remove or open cover. No user-serviceable parts inside. Authorized service personnel only. Disconnect power before servicing.

37881.0000

00824.0002



55072.0000

A WARNING

- Use only on a properly protected circuit capable of the rated load.
- ◆ Electrically ground the chassis.
- ◆ Follow national/local electrical codes.
- Do not use near combustibles.

An extension cord, when used, must be shorter than 20 feet if 16-gauge 3-conductor wire, or shorter than 10 feet if 18-gauge 3-conductor wire.

FAILURE TO COMPLY RISKS EQUIPMENT DAMAGE, FIRE, OR SHOCK HAZARD

READ THE ENTIRE OPERATING MANUAL INCLUDING THE LIMIT OF WARRANTY AND LIABILITY BEFORE BUYING OR USING THIS PRODUCT

20545.0000F 03/15 © 1990 Bunn-O-Matic Corporation

20545.0000

WARNING

PERSONAL INJURY HAZARD
ROTATING PARTS
Close Lid Before Grinding.
Keep Fingers and Foreign Objects
out of Hopper and Chute Opening.

Do Not Pour Ground Coffee Back Into Grinder

11076.0000



55405.0000

◆BAG CLAMP

CLEANING ►

LEVER

55073.0000

- 1. Select desired grind
- Lift lid and pour coffee beans into hopper
- Place your bag on tray under chute or into BAG CLAMP
- 4. Press START
- To remove residual coffee from chute as dispensing slows, move CLEANING LEVER up/down several times
- Remove your bag or container, grinder will automatically stop

55074.0000

NORTH AMERICAN REQUIREMENTS

- This appliance must be installed in locations where it can be overseen by trained personnel.
- For proper operation, this appliance must be installed where the temperature is between 41°F to 95°F (5°C to 35°C).
- Appliance shall not be tilted more than 10° for safe operation.
- An electrician must provide electrical service as specified in conformance with all local and national codes.
- This appliance must not be cleaned by pressure washer.
- This appliance can be used by persons aged from 18 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Keep the appliance and its cord out of reach of children aged less than 18 years.
- Appliances can be used by persons 18 years and above with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children under the age of 18 years should be supervised to ensure they do not play with the appliance.
- If the power cord is ever damaged, it must be replaced by the manufacturer or authorized service personnel with a special cord available from the manufacturer or its authorized service personnel in order to avoid a hazard.
- Machine must not be immersed for cleaning.
- Cleaning and user maintenance shall not be made by children unless they are older than 18 years and supervised.
- This appliance is intended for commercial use in applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotel and motel lobbies and other similar types of environments;
- Access to the service areas permitted by Authorized Service personnel only.

CE REQUIREMENTS

- This appliance must be installed in locations where it can be overseen by trained personnel.
- For proper operation, this appliance must be installed where the temperature is between 5°C to 35°C.
- Appliance shall not be tilted more than 10° for safe operation.
- An electrician must provide electrical service as specified in conformance with all local and national codes.
- This appliance must not be cleaned by water jet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory
 or mental capabilities, or lack of experience and knowledge, unless they have been given instructions
 concerning use of this appliance by a person responsible for its safety.
- Children should be supervised to ensure they do not play with the appliance.
- If the power cord is ever damaged, it must be replaced by the manufacturer or authorized service
 personnel with a special cord available from the manufacturer or its authorized service personnel in
 order to avoid a hazard.
- Machine must not be immersed for cleaning.
- Machine rated IPX1.

ELECTRICAL REQUIREMENTS

CAUTION - The grinder must be disconnected from the power source until specified in **Initial Set-Up**. Refer to Data Plate on the Grinder, and local/national electrical codes to determine circuit requirements.

100V & 120V Models



220-240V CE Models



220-240V CE Models



NOTE: This electrical service consists of 2 current carrying conductors (L1 and Neutral) and a separate conductor for chassis ground.

OPERATING CONTROLS

Grind Selector

Allows the user to vary the grind for each coffee. Each setting will provide precisely the same grind every time it is selected.

Off/On/Start Switch

STOP/OFF - (upper position) Switching to this position stops the operation of the grinder.

ON - (center, resting position) The switch will return to this position after a grind cycle has begun and will remain in this position after grinding has ceased.

START - (lower, momentary position) Pressing the switch initiates grinding only when a bag or other container is in place behind the chute or if using the optional trifecta kit; the brew cup is in place.

Bag/Brew Cup Switch

Prevents the grinder from operating unless the back of a bag is in place behind the dispense chute or the optional trifecta brew cup is not in place. *Do not attempt to bypass this safety device.*

Cleaning Lever

Allows the operator to clean out any coffee residue left from the previous grind.


Bag Clamp


Allows the operator to clamp the coffee bag in place and not have to hold it during the grind operation.

INITIAL SET-UP

CAUTION - Unplug the grinder throughout the initial set-up.

- 1. Open the top lid. Clear all foreign objects and shipping materials from the hopper compartment.
- 2. Remove the black safety plug (located in the entrance to the grind chamber), before installing the hopper. Here are the steps:

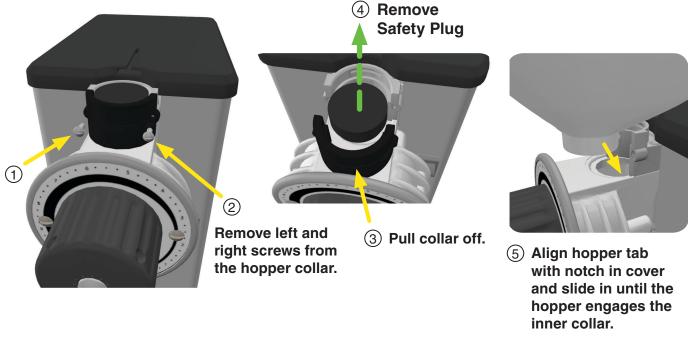

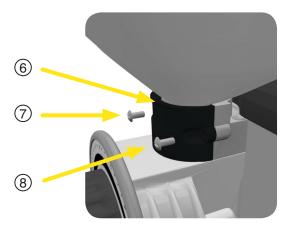

Replace the outer hopper collar, then the two screws.



The hopper is now in ready.

3. The grinder can now be plugged-in and put into service, or if it needs calibrated, follow the *BURR ADJUSTMENT* steps on the next page.

BURR ADJUSTMENT

- 1. Place an empty bag in place on the screen, with the back of the bag behind the dispense chute. If you have the optional trifecta kit, place the brew cup into holder.
- 2. Start the grinder to clear the grind chamber. Leave grinder "ON".
- 3. Turn the Grind Selector knob to the "0" (or "TURKISH" if using the icon based decal) position.
- 4. Using a small flat blade screwdriver, loosen the two set screws on the left side of the grind selector knob.
- 5. Hold the knob in the "0" (or "TURKISH" if using the icon based decal) position with one hand.
- 6. Using a large flat blade screwdriver, slowly turn the adjusting screw in the center of the grind selector knob to the right (clockwise) until a metallic whine can be heard due to the rubbing of the grinding burrs.
- 7. While holding the knob in the "0" (or "TURKISH" if using the icon based decal) position, back off the screw to the left (counterclockwise) just until the metallic whine ceases.
- 8. Turn-off the grinder.
- Push the knob against the dial plate and tighten both set screws on the left side of the grind selector knob.
- 10. Turn the grinder on and listen again for the metallic whine with the grind selector knob in the "0" (or "TURKISH" if using the icon based decal) position. If the metallic whine is heard, repeat steps 7 through 10 until the sound ceases.
- 11. If no metallic whine is heard, the grinding burrs are adjusted properly. On trifecta models, you should hear a slight chirp of the burrs contacting if you rotate the knob fully clockwise past the "1" position.

COFFEE GRINDING

- 1. Load the desired weight or volume of beans into the bean hopper.
- 2. Turn the selector knob to align the arrow with the desired grind size.
- 3. Press down on the lever to open the bag clamp bracket.
- 4. Locate bag between the rear of the chute and the clamp bracket, then release the lever. (The grinder will not operate unless the bag sensor is activated)
- 5. Press the start switch.
- 6. Flip the cleaning lever a few times as dispensing slows.
- 7. Remove the bag or brew cup when ground coffee is no longer dispensed from the chute. The grinder will stop automatically as the bag or brew cup is removed.

NOTE - The start switch will have to be pressed again to continue the cycle if the bag or brew cup is removed while grinding.

WEEKLY CLEANING


Clean all exterior surfaces using a damp cloth rinsed in any mild, nonabrasive, liquid detergent. Care should be taken not to scratch the grinder with any abrasive material.

6 MONTH CLEANING

1. Empty all beans from hopper(s). Plug in the grinder, place an empty bag behind the dispense chute or trifecta brew cup. Press and release the "START" switch. Run a few cycles until all coffee in the grind chamber is dispensed and disconnect the grinder from the power source. Remove the bag or brew cup.

WARNING - Prior to cleaning the grind chamber, unplug the grinder.

- 2. Remove the two screws and remove the dial plate and selector knob assembly.
- 3. Slide the burr auger rotor/spring assembly off the motor shaft and disassemble for cleaning.
- 4. Remove the two screws securing the stationary burr to the grind chamber. Inspect and clean/replace burrs if necessary.
- 5. Remove the four screws at the top of the chute and remove the chute. Use a stiff non-metallic bristle brush to remove any debris around the flapper.
- 6. Wash all parts in a mild solution of detergent with hot water and a stiff non-metallic bristle brush. Rinse all parts thoroughly and allow them to air dry before reinstalling.
- 7. Carefully clean the grind chamber, dial plate assembly, and chute opening with a dry stiff non-metallic bristle brush. Wipe with a clean cloth that has been soaking in a mild solution of detergent and hot water.
- 8. Reinstall the chute onto the burr housing. Reinstall the stationary burr to the grind chamber.
- 9. Reinstall the spring and outer burr onto the auger rotor. Align the slot in the motor shaft with the rotor and reinstall shear plate. Reinstall rotor cup and grind selector dial plate to the burr housing. Refer to the "BURR ADJUSTMENT" section to adjust burrs.

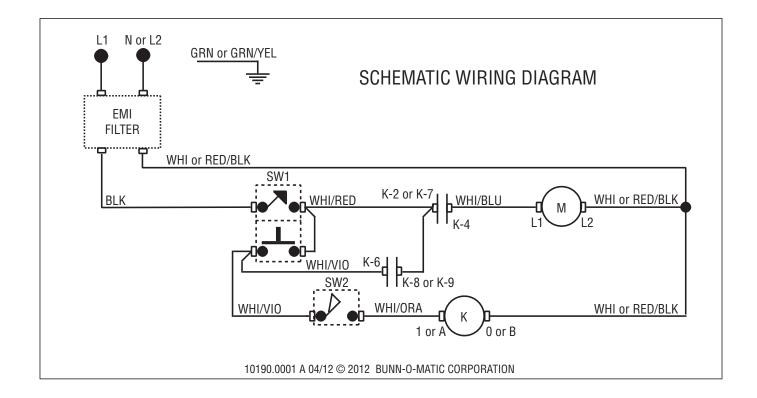

DECAL INSTALLATION INSTRUCTIONS

If preferred, the numbered dial decal can be replaced with the symbols dial decal included with the grinder. Here are the steps to exchange them:




1) Turn knob clockwise till indicator points to zero.




(2) Remove left screw on knob.




(3) Remove right screw on knob.

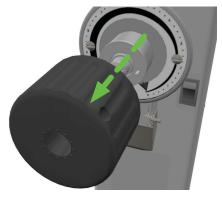

(4) Remove the knob.

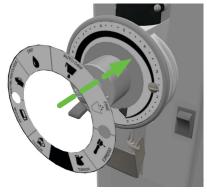

(5) Pull the tab to remove the adhesive strip on the back of the symbols decal. Place the decal directly over the numbers decal.

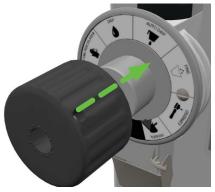


(6) If the decal is placed in the correct location (the screws should both show through the decal), then press to adhere. Now, replace knob.



(7) Replace right screw on knob. (8) Replace left screw on knob.



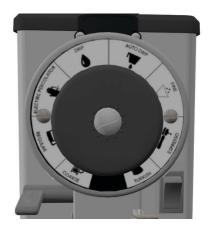

The decal is ready.

NOTE: If needed, follow the *BURR ADJUSTMENT* instructions on page 7.

DECAL INSTALLATION INSTRUCTIONS (Continued)

A "Grinding Instructions" decal is supplied.

This decal is required when installed in a protected location such as under a canopy, marquee, shelter or similar structure.

Here is the location for this decal:



A "Flavored Coffees ONLY" decal is supplied for use if preferred. Here is the location suggested for this decal:




REPLACING THE STANDARD CHUTE WITH THE OPTIONAL TRIFECTA® KIT

The standard chute can be switched out with the optional trifecta kit to be used with the trifecta single serve brewer. This kit has a holder for the trifecta cup (shown below).



1 Remove four screws from below the number dial.

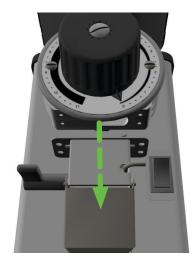

(2) Remove the chute.



③ Replace with the trifecta chute.



(4) Replace the four screws from below the number dial.

