

Hot Food Holding Cabinet Deluxe or Simple Control





300-S 500-S 750-S 1000-S 1200-S 1000-UP 1200-UP

- Installation
- Operation
- Maintenance

W164 N9221 Water Street • P.O. Box 450 Menomonee Falls, Wisconsin 53052-0450 U.S.A.

PHONE: 262.251.3800 • 800.558.8744 U.S.A. / CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY www.alto-shaam.com









Table of Contents

Warranty and Service Information
Delivery
Transportation Damage and Claims 5
Unpacking 6
Safety Procedures
Installation
Dimensions
Electrical Connection
Operation
General Holding Guidelines
Cleaning and Preventative Maintenance
Food Safety
Troubleshooting
Service
Wiring Diagrams
Limited Warranty



Warranty and Service Information

PROTECT YOUR ORIGINAL MANUFACTURER'S WARRANTY, REGISTER ONLINE:

www.alto-shaam.com Support > Warranty Registration

Register to ensure prompt resolution of warranty claims

Please register your Alto-Shaam equipment to ensure prompt service in the event of a warranty claim. You'll automatically be entered into a monthly drawing to win an additional year extended warranty!

Registering your equipment will allow you to receive notifications about software updates and additional product information.

NOTE: Your personal information will not be shared with any other company.

ALTO-SHAAM 24/7 EMERGENCY REPAIR SERVICE

Call 800-558-8744 to reach our twentyfour hour emergency service call center for immediate access to local authorized service agencies outside standard business hours. The emergency service access is provided exclusively for Alto-Shaam equipment and is available throughout the United States through Alto-Shaam's toll free number. Emergency service access is available seven days a week, including holidays.







This Alto-Shaam appliance has been thoroughly tested and inspected to ensure only the highest quality appliance is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. See Transportation Damage and Claims section located in this manual.

This appliance, including unattached items and accessories, may be delivered in one or more packages. Ensure all standard items and options have been received with each appliance as ordered. Save all the information packed with the appliance. Register the appliance online at www.alto-shaam.com/en/support/ warranty-registration to ensure prompt service in the event of a warranty parts and labor claim.

This manual must be read and understood by all people using or installing the appliance. Contact the Alto-Shaam Tech Team Service Department if you have any questions concerning installation, operation, or maintenance.

1-800-558-8744; servicedept@alto-shaam.com

	The	serial	number	is re	quired	for	all	inquiries	•
--	-----	--------	--------	-------	--------	-----	-----	-----------	---

Always include both model and serial number(s) in any correspondence regarding the appliance.

Model:		
Serial number:		
urchased from:		
Date installed:	Voltage: _	

↑ CAUTION



Appliance and accessories may be heavy. To prevent serious injury, always use a sufficient number of trained and experienced workers when moving or leveling appliance and handling accessories.

Environmental Conditions

Operational Environmental Conditions

Pur

- Before use, appliance must acclimate to room temperature in the environment it is placed -24 hours is recommended.
- Ambient temperature range of 60°F to 110°F (16°C to 43°C).
- Relative humidity of less than 95% non-condensation.
- Atmospheric pressure range of 50kPa to 106kPa.



Transportation Damage and Claims



All Alto-Shaam equipment is sold Free on Board (F.O.B.) shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, do not put the appliance into service until the damage has been inspected by an authorized Alto-Shaam service provider.

Shipping damages are a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

- 1. Make an immediate inspection while the appliance is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the appliance is moved to a storage area.
- 2. Do not sign a delivery receipt or a freight bill until a proper count has been made and inspection of all appliances are received.

- 3. Note all damage to packages directly on the carrier's delivery receipt.
- 4. Make certain the driver signs the delivery receipt. If the driver refuses to sign, make a notation of this refusal on the receipt.
- 5. If the driver refuses to allow inspection, write the following on the delivery receipt: **Driver refuses to allow inspection of containers for visible damage.**
- Contact the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation to the carrier's office with the time, date, and the person called.
- 7. Save any packages and packing material for further inspection by the carrier.
- 8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

Alto-Shaam will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. Alto-Shaam cannot, however, file any damage claims, assume the responsibility of any claims, or accept deductions in payment for such claims.

Record the model and serial number of the apphance for easy
reference. Always refer to both model and serial number in
any contact with Alto-Shaam regarding this appliance.
Model:

Record the model and serial number of the appliance for easy

Model:	
Serial Number:	
Date Installed:	
Voltage:	

24 - 7 Your Service Hotline 1-800-558-8744

Alto-Shaam has established a twenty-four hour emergency service call center to offer immediate customer access to a local authorized service agency outside of standard business hours. The emergency service access is provided exclusively for Alto-Shaam equipment and is available throughout the United States through the use of Alto-Shaam's toll-free number. Emergency service access is available seven days a week including holidays.



Unpacking

• Carefully remove the appliance from the carton or crate.

NOTE: Do not discard the carton and other packaging material until you have inspected the appliance for hidden damage and tested it for proper operation.

Do not discard this manual. This manual is considered to be part of the appliance and is to be provided to the owner or manager of the business or to the person responsible for training operators. Additional manuals are available from the manufacturer.

- Read all instructions in this manual carefully before installing this
 appliance, using the appliance or performing routine maintenance.
 Following procedures other than those indicated in this guide to use and
 clean the appliance is considered inappropriate and may cause damage,
 injury or fatal accidents, in addition to voiding the warranty and relieving
 Alto-Shaam of all liability.
- Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.





Safety Procedures

- The appliance is intended to cook, hold or process foods for the purpose of human consumption. No other use for this appliance is authorized and is therefore considered dangerous. The appliance must not be used to cook food containing flammable materials (such as food with alcohol). Substances with a low flash point can ignite spontaneously and cause a fire.
- The appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users. Alto-Shaam recommends regular staff training to avoid the risk of accident or damage to the appliance. Operators must also receive regular safety instructions.
- · Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified and trained technicians.
- This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.



NOTICE: For equipment delivered for use in any location regulated by the following directive: 2012/95/EC WEEE

> **Do not** dispose of electrical or electronic equipment with other municipal waste.

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. The following signal words and symbols may be used throughout this manual.

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

A CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE: Indicates information considered important, but not hazard-related (e.g., messages relating to property damage).



Indicates that referral to operating instructions is a mandatory action. If not followed the operator could suffer personal injury.



Indicates that referral to operating instructions is recommended to understand operation of equipment.



Safety Procedures

- To prevent serious injury, death or property damage, the appliance should be inspected and serviced at least every twelve (12) months by an authorized service partner or trained technician.
- Only allow an authorized service partner or trained technician to service or to repair the appliance. Installation or repairs that are not performed by an authorized service partner or trained technician, or the use of non-factory authorized parts will void the warranty and relieve Alto-Shaam of all liability.
- When working on this appliance, observe precautions in the literature, on tags, on labels attached to or shipped with the appliance and other safety precautions that may apply.
- If the appliance is installed on casters, freedom of movement of the appliance must be restricted so that utility connections (including gas, water, and electricity) cannot be damaged when the appliance is moved. If the appliance is moved, ensure that all utility connections are properly disconnected. If the appliance is returned to its original position, ensure that retention devices and utility connections are properly connected.
- Only use the appliance when it is stationary. Mobile appliance racks, mobile plate racks, transport trolleys, and appliances on casters can tip over when being moved over an uneven floor or threshold and cause serious injury.
- Always apply caster brakes on mobile appliances or accessories when these are not being moved. These items could move or roll on uneven floors and cause property damage or serious injury.
- Be extremely careful when moving appliances because the food trays may contain hot fluids that may spill, causing serious injury.
- **Always** open the appliance door very slowly. Escaping hot vapors or steam can cause serious injury or death.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



⚠ WARNING

Improper installation, alteration, adjustment, service, cleaning, or maintenance could result in property damage, severe injury, or death.

Read and understand the installation, operating and maintenance instructions thoroughly before installing, servicing, or operating this equipment.

A CAUTION



To prevent **personal injury** or **property damage**:


Always use hand protection when operating this appliance to avoid burns. Metal parts of this equipment become extremely hot when in operation.

ACAUTION



Appliance and accessories may be heavy. To prevent serious injury, **always** use a sufficient number of trained and experienced workers when moving or leveling appliance and handling accessories.

The Alto-Shaam Hot Food Holding Cabinet must be installed in a location that will permit the oven to function for its intended purpose and to allow adequate clearance for ventilation, proper cleaning, and maintenance access.

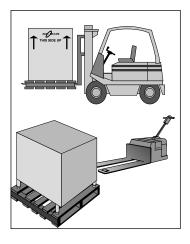

- 1. The appliance must be installed on a stable and level surface free of vibration and suitably strong enough to support the combined weights of the appliance plus the maximum product load weight.
- 2. **Do not** install this appliance in any area where it may be affected by any adverse conditions such as steam, grease, dripping water, high temperatures, or any other adverse conditions.
- 3. This appliance must be kept free and clear of any combustible materials.
- 4. This appliance must be kept free and clear of any obstructions blocking access for maintenance or service.

MARNING



To prevent personal injury, death or property damage:

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

Emissions testing conducted by Underwriters Laboratories, Inc.® was found to be in compliance with the applicable requirements of NFPA96: 2004 Edition, Par. 4.1.1.2. U.L emissions sampling of grease laden vapor resulted in a total of 0.55 milligrams per cubic meter with no visible smoke and is considered representative of all oven models in the line. Based on these results, hood installation and/or outside venting should not be a requirement in most areas. Verify local codes for locations where more restrictive codes are applicable.

Minimum Clearance Requirements					
Rear 3" (76mm)					
Тор	2" (51mm)				
Left side , Right side	1" (25mm)				

NOTICE


If the appliance has been unplugged for an extended period of time, the Real Time Clock may require recharging. Turn main breaker to the unit off for 10 seconds and then restore power. For more information, see Error Code E-60 in the Troubleshooting section of this manual.

Installation




Universal Pan Slides

Shown with universal pan slides. Two (2) slides needed per pan.

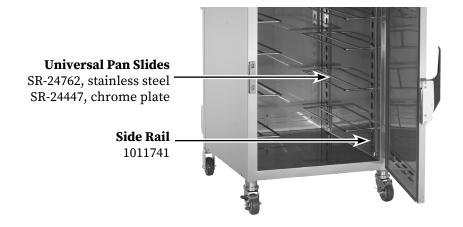

Side Racks and Shelves (optional)

As an alternative to universal pan slides, this appliance can be ordered as a "side rack" model which is equipped with two (2) side racks and three (3) chrome plated wire shelves. It will accommodate full and half size US hotel and European gastronorm pans on the side racks or shelves, or sheet pans on shelves.

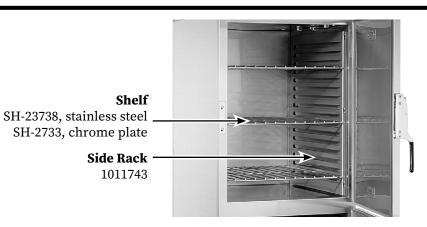

Before Initial Use

Thoroughly clean the appliance. See the Cleaning and Preventative Maintenance section of this manual for cleaning instructions.



Stacking Instructions

1) If the two appliances were shipped together from the factory, the top appliance will have the casters already removed. A stacking kit will be included with the shipment.


If casters need to be removed, lay the appliance on its back, and using a rubber or non-marring hammer, tap on the top and underside of the caster, alternating sides, until the caster slides out.

2) While appliance is laid on its back, insert one stacking post in each of the four corners of the upper appliance. Secure the stacking posts using one screw and two flat washers that are included with the stacking kit.

Use template 68696 to locate set screw hole. Drill with #30 Bit and Tap 8-32.

NOTE: The flange on the stacking posts must face the outside of the appliance.

3) Remove the four top mounting screws from the lower appliance. Place the upper appliance, which has the stacking posts installed, on top of the bottom appliance. Center the top appliance from front to back. Re-install the four screws through the flange of the four stacking posts.

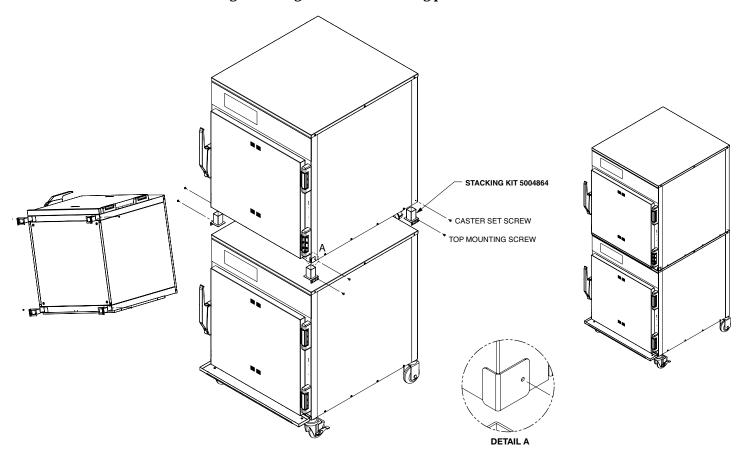

Stacking	Stacking Configurations					
Model	Can be stacked with:					
300-S	300-S or 300-TH/III					
	No stacking hardware needed. Align dimples at top and bottom of appliances. It is recommended that the legs be removed from the top appliance before stacking.					
500-S	500-S, 500-TH-II or 500-TH/III					
750-S	750-S, 750-TH-II, 750-TH/III, 767-SK, 767-SK/III					
1000-S	1000-S, 1000-TH/III, 1000-SK/II, 1000-SK/III					
1200-S	1200-S					


Installation



A number of adjustments are associated with initial installation and start-up. It is important that these adjustments be conducted by a qualified service technician. Installation and start-up adjustments are the responsibility of the dealer or user. These adjustments include but are not limited to thermostat calibration, door adjustment, leveling, electrical hook-up and installation of optional casters or legs.

Leveling

Place the appliance on a stable, non-combustible



Level the appliance from side-to-side and front-to-back with the use of a spirit level.

to the probability of frequent oven repositioning.

NOTE: Failure to properly level this appliance may result in spills from a semi-liquid product.

WARNING



ELECTRIC SHOCK HAZARD.

To prevent SERIOUS INJURY or DEATH, your appliance must be secured to building structure to prevent unintended movement.

Restraint Requirements for Mobile Equipment


Any appliance that is not furnished with a power supply cord but includes a set of casters must be installed with a tether. Adequate means must be provided to limit the movement of this appliance without depending on or transmitting stress to the electrical conduit. The following requirements apply:

- 1. Casters must be a maximum height of 6" (152mm).
- 2. Two of the casters must be the locking type.
- 3. Mobile appliances or appliances on mobile stands must be installed with the a flexible connector secured to the building structure.


A mounting connector for a restraining device is located on the upper back flange of the appliance. A flexible connector is not supplied by nor is it available from the factory.



How to Install the Drip Tray

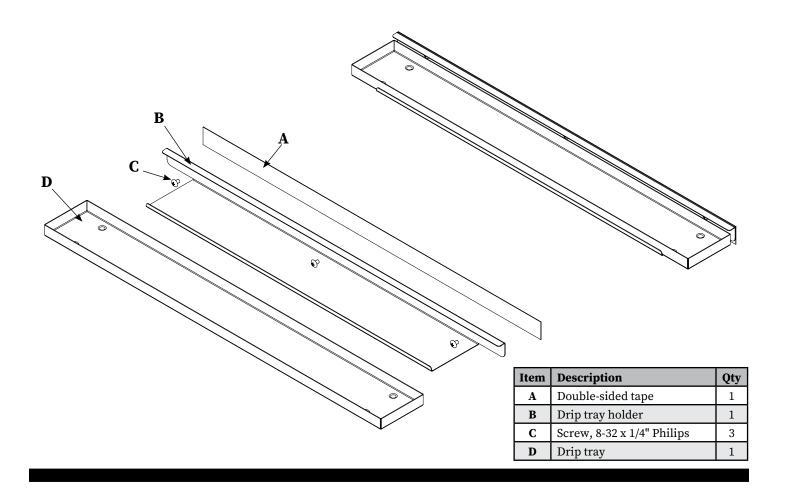

- 1. Poke holes through the double-sided tape ${\bf A}$ which is attached to the back of the drip tray holder ${\bf B}$.
- 2. Remove the backing on the double-sided tape A.
- 3. Put the screws **C** through the holes and attach the drip tray holder **B** to the front of the appliance.
- 4. Optional apply a line of food-grade silicone caulk along the top edge of the drip tray holder **B** to seal.
- 5. Place the drip tray **D** in the drip tray holder **B**.

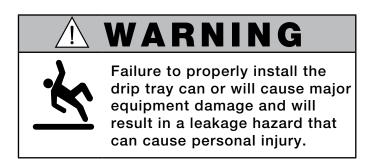

Installation





Options and Accessories

Model >	300-S	500-S	750-S	1000-S	1200-S	1000-UP	1200-UP
Description	Part Number						
Bumper, Full Perimeter		5011161	5010371	5009767	5012932	5009767	5012932
Carving Holder, Prime Rib	HL-2635	HL-2635	HL-2635				
Carving Holder, Steamship (Cafeteria) Round		4459	4459				
Caster Package 2-1/2" (64mm) 3-1/2" (89mm) 5" (127mm)		Standard 5008017 5004862	Standard 5008017 5004862	5008022 Standard 5004862	—— 5008017 Standard	 5008017 Standard	 5008017 Standard
Door Assembly, Window			5013129	5012806	5012822	5012806	5012822
Door Lock with Key		LK-22567	LK-22567	LK-22567	LK-22567	LK-22567	LK-22567
Drip Pan with Drain without Drain	—— PN-2122	14813 11898	14831 1014684	5005616 11906	5014448 ——	5005616 11906	5014448 ——
Drip Tray, Door		5010736	5010391	5009716			
Deluxe Control (factory installed)		Available	Available	Available	Available	Available	Available
Exterior Color Options Stainless Steel Burgundy Custom Color		Standard Available Available					
Handle Kit, Push/Pull (set of four)	STANDARD	55662	55662	55662	55662	55662	55662
Legs, 6" (152mm), Flanged		5011149	5011149	5011149	5011149	5011149	5011149
Pan Grid, Wire 18" x 26" (457mm x 660mm)			PN-2115	PN-2115	PN-2115	PN-2115	PN-2115
Probe, Internal Product Temp. (Deluxe only)		PR-36065	PR-36065	PR-36065	PR-36065	PR-36065	PR-36065
Security Panel with Key Lock		5013939	5013936	5013934	5013936	5013934	5013936
Shelf Chrome Wire	SH-2107	SH-2107	SH-2105		SH-2733		SH-2733
Chrome Wire, Pass-Through			SH-2327				
Stainless Steel Wire		SH-2326	SH-2324	SH-2325	SH-23738	SH-2325	SH-23738
Stainless Steel, Rib Rack			SH-2743				
Stainless Steel, Pass-Through				SH-2346		SH-2346	
Side Rack Kit (factory installed)					Available		Available
Stacking Hardware S-Series over S-Series		5004864	5004864	5004864	5004864		
CTX4-10 over S-Series			5019679	5019679			
Universal Angle Pan Slides Chrome Stainless Steel			 		SR-24447 SR-24762		SR-24447 SR-24762
Water Reservoir, Pan				1775	1775	1775	1775
Water Reservoir, Pan Cover				1774	1774	1774	1774




Model 300-S

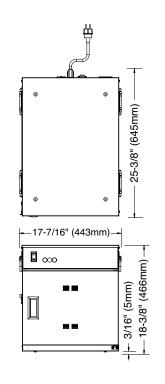

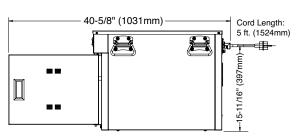

Model 500-S

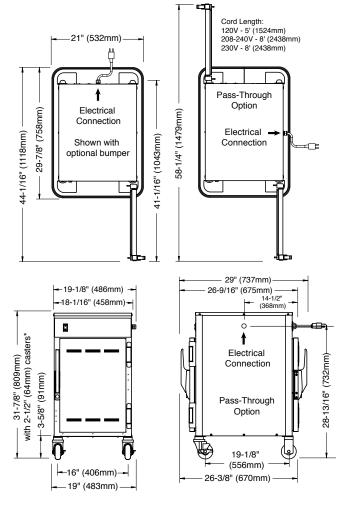

*33-3/8" (848mm) - with optional 3-1/2" (89mm) casters *35-1/4" (894mm) - with optional 5" (127mm) casters *33-3/4" (857mm) - with optional 6" (152mm) legs

300-S						
Weight						
Net	65 lb (2	9 kg)				
Ship	125 lb (57 kg)				
Capacity						
	36 lbs (16 kg) maximum					
7	Volume maximum: 22.5 quarts (28,5 liters)					
Full-size par	ns:	Gastronorm 1/1:				
Three (3)	20" x 12" x 2-1/2"	530mm x 325mm x 65mm				
Two (2)	20" x 12" x 4"	530mm x 325mm x 100mm				
	On wire s	shelves only				
Half-size pa	ns:					

 $265mm \times 325mm \times 65mm$

265mm x 325mm x 100mm

Six (6) 10" x 12" x 2-1/2"

Four (4)


10" x 12" x 4"

ım
nm
ım

Dimensions




Model 750-S

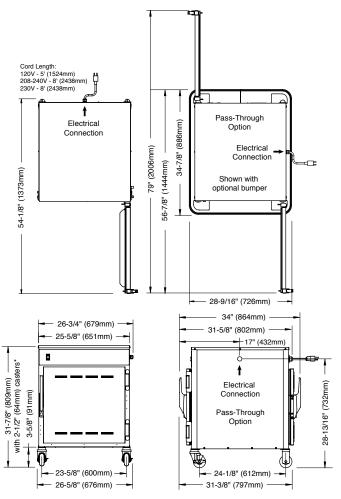

*33-3/8" (848mm) - with optional 3-1/2" (89mm) casters *35-1/4" (894mm) - with optional 5" (127mm) casters *33-3/4" (857mm) - with optional 6" (152mm) legs

Model 1000-S

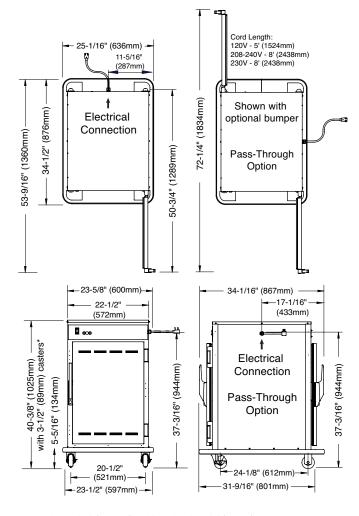

*38-11/16" (982mm) - with optional 2-1/2" (64mm) casters

*42-1/16" (1068mm) - with optional 5" (127mm) casters

*40-3/4" (1034mm) - with optional 6" (152mm) legs


750-S			
Weight			
Net	157 lb (69	9kg)	
Ship	228 lb (103l	κg) est.	
Capacity			
	120 lbs (54 kg	g) maximum	
7	olume maximum:	100 quarts (95 liters)	
Full-size pan	s:	Gastronorm 1/1:	
Ten (10)	20" x 12" x 2-1/2"	530mm x 325mm x 65mm	
Six (6)	20" x 12" x 4"	530mm x 325mm x 100mm	
Four (4)	20" x 12" x 6"	530mm x 325mm x 150mm	
Full-size she	et pans (on wire sh	elves only):	
Up to Six (6)	18" x 26" x 1" – with additional shelves		

1000-S					
Weight					
Net	175 lb (79	kg) est.			
Ship	223 lb (101	lkg) est.			
Capacity					
120 lbs (54kg) maximum					
	Volume maximum	: 60 quarts (76 liters)			
Full-size p	ans:	Gastronorm 1/1:			
Four (4)	20" x 12" x 2-1/2"	530mm x 325mm x 65mm			
On optional wire shelves only					
Full-size s	heet pans:				
Eight (8)	18" x 26" x 1"				

16




Model 1000-UP

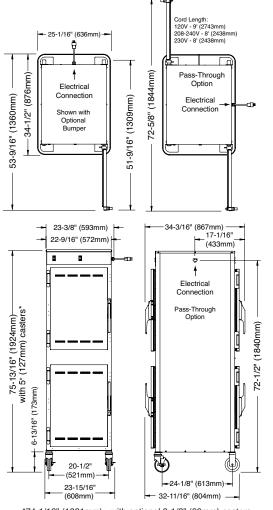

*74-1/16" (1881mm) - with optional 3-1/2" (89mm) casters *75-5/8" (1921mm) - with optional 6" (152mm) legs

Model 1200-S

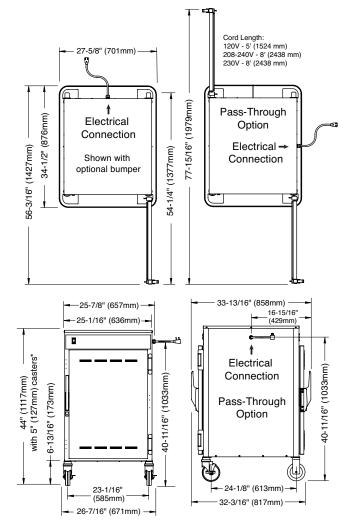

*45-11/16" (1161mm) - with optional 3-1/2" (89mm) casters *43-7/8" (1113mm) - with optional 6" (152mm) legs


1000-UP		
Weight		
Net	282 lb	(128kg)
Ship	360 lb (1	63kg) est.
Capacity	(per compartment)	
	120 lbs (54k	g) maximum
	Volume maximur	n: 60 qts (76 liters)
Full-size p	ans:	Gastronorm 1/1:
Four (4)	20" x 12" x 2-1/2"	530mm x 325mm x 65mm
	On optional w	ire shelves only
Full-size sl	neet pans:	
Eight (8)	18" x 26" x 1"	

1200-S		
Weight		
Net	179 lb (81kg) est.	
Ship	224 lb (102kg) est.	
Capacity		
	See next page	

Dimensions



Model 1200-UP

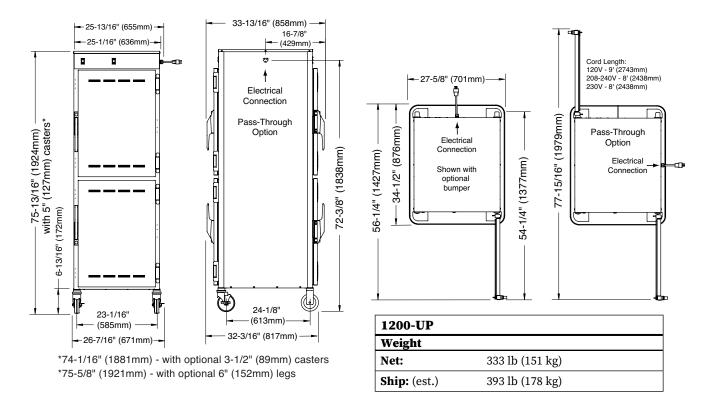

Capacity - 1200-S, 1200-UP (per compa	artment)	
192 lbs	s (87kg) maximum • Volume maximum: 120 g	quarts (152 liters)
Pan slides (2 per set) - 1-3/4" (44mm) c	enters	
Pan Size	Four (4) sets of pan slides provided	Maximum capacity with additional pan slides
Full size: 20" x 12" x 2-1/2" GN1/1: 530mm x 325mm x 65mm	Eight (8) pans - 2 per set of slides	Sixteen (16) pans - with 4 additional sets of pan slides
Full size: 20" x 12" x 4" GN1/1: 530mm x 325mm x 100mm	Eight (8) pans - 2 per set of slides	No additional capacity
Full size: 20" x 12" x 6" 530mm x 325mm x 150mm	Eight (8) pans - 2 per set of slides	No additional capacity
Full size sheet pans: 18" x 26" x 1"	Four (4) pans - 1 per set of slides	Sixteen (16) pans - with 12 additional sets of pan slides
Side Racks and Shelves		
Pan Size	Three (3) shelves provided	Maximum capacity with additional shelves
Full size: 20" x 12" x 2-1/2" GN1/1: 530mm x 325mm x 65mm	Sixteen (16) pans - 2 per side rack	No additional capacity
Full size: 20" x 12" x 4" GN1/1: 530mm x 325mm x 100mm	Eight (8) pans - 2 per side rack	No additional capacity
Full size: 20" x 12" x 6" GN1/1: 530mm x 325mm x 150mm	Eight (8) pans - 2 per side rack	No additional capacity
Full size sheet pans: 18" x 26" x 1"	Three (3) pans - 1 per shelf	Eight (8) pans with 5 additional shelves

Electrical Connection



This section is provided for the assistance of qualified and trained service technicians only and is not intended for use by untrained or unauthorized service personnel. Failure to observe this precaution may void the warranty.

A CAUTION



Power source must match voltage identified on appliance rating tag. The rating tag provides essential technical information required for any appliance installation, maintenance or repairs. Do not remove, damage or modify the rating tag.

NOTE: A rating tag is permanently mounted on the appliance. Ensure power source matches the voltage identified on the tag.

Plug appliance into a properly grounded receptacle **only**, positioning the appliance so the power supply cord is easily accessible in case of an emergency.

Arcing will occur when connecting or disconnecting the appliance unless the controller is OFF.

Hard wired models:

Hard wired models must be equipped with a country certified external allpole disconnection switch with sufficient contact separation.

If a power cord is used for the connection of the product an oil resistant cord like H05RN or H07RN or equivalent must be used.

NOTICE: Where local codes and CE regulatory requirements apply, appliances must be connected to an electrical circuit that is protected by an external GFCI outlet.

WARNING



To prevent serious injury, death, or property damage:

All electrical connections must be made by a qualified and trained service technician in accordance with applicable electrical codes.



This appliance must be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.



CE-approved appliances include an equipotential-bonding terminal marked with the symbol shown on the left. Provisions for earthing are to be made in accordance with IEC:2010 60335-1 section 27 or local codes.






Electrical S	рести	auons	(Wire diag	grams			of the appliance	·			
			_		i i		***		1		
v	Ph	Hz	A	kW	Nema 5-15P 15A-125V Plug	Nema 5-20P 20A-125V Plug	Nema 6-15P 15A-250V Plug	CEE 7/7 Plug Rated 250V	CH2-16P Plug Rated 250V	BS1363 Plug Rated 250V	AS/NZS 3112 Plug Rated 250V
300-S					'	'	,			'	•
120V	1	60	6.7	.80	✓						
230V	1	50/60	3.9	.80				✓	✓	✓	
500-S					•	•	•			•	•
120V	1	60	8.4	1.0	✓						
208V 240V	1	60	3.7 4.2	.76 1.0			✓				
230V	1	50/60	4.1	.95				✓	✓	✓	✓
750-S							ļ.	l.			,
120V	1	60	9.0	1.1	✓						
208V 240V	1	60	3.9 4.5	.81 1.1			✓				
230V	1	50/60	4.3	1.0				✓	✓	✓	✓
1000-S											•
120V	1	60	8.0	.96	✓						
208V 240V	1	60	3.5 4.0	.72 .96			✓				
230V	1	50/60	3.9	.88				✓	✓	✓	✓
1200-S											
120V	1	60	8.0	.96	✓						
208V (1000W) 240V (1000W)	1	60	3.5 4.0	.72 .96			√				
208V (2000W) 240V (2000W)	1	60	6.9 8.0	1.4 1.9]	No cord or plug	5		
230V (1000W)	1	50/60	3.9	.88				✓	✓	✓	✓
230V (2000W)	1	50/60	7.7	1.8				✓	✓	✓	✓
1000-UP											
120V	1	60	16.0	1.9		√					
208V 240V	1	60	7.0 8.0	1.4 1.9			✓				
230V	1	50/60	7.7	1.8				√	√	✓	√
1200-UP											
120V	1	60	16.0	1.9		√					
208V (2000W) 240V (2000W)	1	60	7.0 8.0	1.4			√				
208V (4000W) 240V (4000W)	1	60	14.0 16.0	2.9		1]	No cord or plug	<u> </u>	I	1
230V (2000W)	1	50/60	7.7	1.8				✓	✓	✓	✓
230V (4000W)	1	50/60	15.4	3.5				√	√	✓	√

Other plugs are available. Contact factory for more information.

Cord Length: 120V - 6 ft. (1.8m) 208-240V - 9 ft. (2.7m) 230V - 8ft. (2.5m)



Simple Control

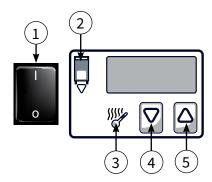

- 1. Preheat the holding cabinet at 200°F (93°C) for 30 minutes before loading hot food.
 - a) Press the ON/OFF switch ① to the ON (I) position. To reduce preheat time, rotate the vents inside the door to close them.
 - b) Press the up arrow button ⑤ or the down arrow button ④ until the controller shows 200°F (93°C).
 - Press and release the button to change the holding temperature by one degree.
 - Press and hold the button to change the holding temperature by ten degrees.

The heat indicator ② illuminates and preheat starts.

- 2. Wait thirty (30) minutes.
- 3. Place hot food in the holding cabinet.

WARNING

Only food which has been heated to an internal temperature of 140°F to 160°F (60°C to 71°C) should be placed in the holding cabinet.

Select at least one food item in every pan and insert a food thermometer into the center to check internal temperature. Heat any food items which are below the minimum temperature before placing them in the holding cabinet.

- 5. Close the holding cabinet door securely.
- 6. Press the down arrow button 4 until the controller shows 160°F (71°C).
 - a) Press and release the button to change the holding temperature by one degree.
 - b) Press and hold the button to change the holding temperature by ten degrees.

How to Display Set-Point or Actual Holding Temperature

NOTE: The factory default is the set-point holding temperature.

Press and hold the temperature display button ③ and the up arrow button ⑤ simultaneously, for five (5) seconds.

The controller shows "ACT" for Actual compartment temperature, or "SET" for the Set-point holding temperature, and then the selected temperature.

NOTE: Press the temperature display button ③ at any time to temporarily display the alternate temperature.

How to Change Controller from Fahrenheit to Celsius

NOTE: The factory default is Fahrenheit.

Press and hold the temperature display button ③ and the down arrow button ④ simultaneously, for five (5) seconds.

The controller shows °C for Celsius or °F for Fahrenheit, then the temperature at the selected setting.

NOTE: The last selected setting is retained by the control board if there is a power failure.


SureTemp™ Heat Recovery

The patented SureTemp™ heat recovery system in this appliance will immediately compensate for any loss of heat when the door is opened. In order to maintain a more consistent compartment temperature, the control will automatically apply heat to the appliance's interior while the door is open and for a short time after the door is closed. If the door remains open for more than three minutes, the control will sound three rapid beeps every ten seconds until the door is closed.

Operation



Deluxe Control

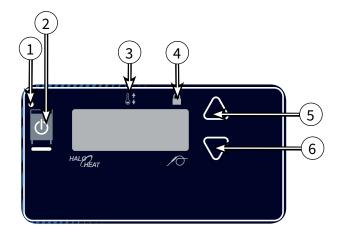

- 1. Preheat the holding cabinet at 200°F (93°C) for 30 minutes before loading hot food.
 - a) Press the ON/OFF button ②. The ON/OFF status indicator ① will illuminate.

To reduce preheat time, rotate the vents inside the door to close them.

- b) Press the up arrow button ⑤ or the down arrow button ⑥ until the controller shows 200°F (93°C).
 - Press and release the button to change the holding temperature by one degree.
 - Press and hold the button to change the holding temperature by ten degrees.

The heat indicator ③ illuminates and preheat starts.

- 2. Wait thirty (30) minutes.
- 3. Place hot food in the holding cabinet.

WARNING

Only food which has been heated to an internal temperature of 140°F to 160°F (60°C to 71°C) should be placed in the holding cabinet.

Select at least one food item in every pan and insert a food thermometer into the center to check internal temperature. Heat any food items which are below the minimum temperature before placing them in the holding cabinet.

5. Close the holding cabinet door securely.

- 6. Press the down arrow button (6) until the controller shows 160°F (71°C).
 - Press and release the button to change the holding temperature by one degree.
 - Press and hold the button to change the holding temperature by ten degrees.

How to Display Set-Point and Actual Holding Temperature

To display the actual compartment temperature, press the up arrow button ⑤. The actual compartment temperature will display for a short time and then the controller will return to the set-point holding temperature.

How to Change Controller from Fahrenheit to Celsius

NOTE: The factory default is Fahrenheit.

With the controller OFF, press and hold the up arrow button (5) until the controller shows °C.

Press either arrow button to change from °C to °F.

NOTE: The last selected setting is retained by the control board if there is a power failure.

How to Enable/Disable the Beeper

NOTE: The factory default is ON.

With the controller OFF, press and hold the down arrow button ⑥. The controller will display "OFF".

Press either arrow button to turn the Beeper on.

How to Lock the Controller


The controller lock prohibits the set temperature from being changed.

Press and hold the ON/OFF button ② and the up arrow button ⑤ simultaneously. The lock status indicator ⑤ will illuminate.

To unlock the controller, press and hold the ON/OFF button ② and the down arrow button ⑥ simultaneously. The lock status indicator ⑤ will go out.



Deluxe Control Shelf Timers (option)

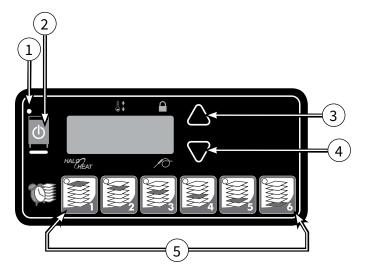

The shelf timers monitor food safety by using a first item in, first item out product management system. Holding times can be set for the products in each of the shelf positions. Products must be cooked to HACCP recommended internal temperature before being held in the holding cabinet.

How to Set the Shelf Timers

- 1. Press and hold the ON/OFF button ② until the controller and power indicator ① go out.
- 2. Press and hold the shelf timer button (5) until the controller shows the countdown time.
- 3. Press the up arrow button ③ or down arrow button ④ to set the desired holding time.
 - The holding time will display as HH:MM.
- 4. Repeat steps 2 and 3 for each shelf to be timed.

How to Use the Shelf Timers

- 1. Press and hold the ON/OFF button ② until the controller and power indicator ① illuminate.
- 2. Press the desired shelf timer button (5).

The shelf timer button ⑤ will illuminate and the count down will begin. The controller will display as HH:MM when the remaining time is more than 60 minutes. It will display as MM:SS when the remaining time is less than 60 minutes.

When the shelf time has expired, the shelf timer button (5) will flash quickly. Press the button to acknowledge expired timer.

The timer with the shortest amount of time remaining will flash slowly.

To cancel a shelf timer, press and hold the shelf timer button (5) for two (2) seconds.

Operation



How to Proof Dough

With the addition of a pan of water, this holding cabinet can be used for proofing dough. A water reservoir pan (#1775) and pan cover (#1774) is available as an accessory from Alto-Shaam.

- 1. Remove dough from retarder or refrigerator and allow covered dough to come to room temperature.
- 2. Set holding temperature to 95°F (35°C).
- 3. Pour approximately 2 quarts (c. 2 liters) of 140°F to 180°F (60°C to 82°C) water into the optional water reservoir pan and place the pan on the bottom surface of the compartment.
- 4. Preheat holding cabinet for 45 to 60 minutes.
- 5. Remove covering and place dough in preheated holding cabinet.
- 6. Allow dough to remain in the holding cabinet until it nearly doubles in size.
- 7. Remove dough from the holding cabinet and bake according to product manufacturer's directions. Brush with egg wash if desired.

NOTE: The above proofing procedure is a suggested guideline only. Due to variation from product to product, including quality and product weight, close adherence the product manufacturer's instructions is strongly recommended.



General Holding Guidelines

Chefs, cooks and other specialized food service personnel employ varied methods of cooking. Proper holding temperatures for a specific food product must be based on the moisture content of the product, product density, volume, and proper serving temperatures. Safe holding temperatures must also be correlated with palatability in determining the length of holding time for a specific product.

Halo Heat maintains the maximum amount of product moisture content without the addition of water, water vapor, or steam. Maintaining maximum natural product moisture preserves the natural flavor of the product and provides a more genuine taste. In addition to product moisture retention, the gentle properties of Halo Heat maintain a consistent temperature throughout the cabinet without the necessity of a heat distribution fan, thereby preventing further moisture loss due to evaporation or dehydration.

In an enclosed holding environment, too much moisture content is a condition which can be relieved. A product achieving extremely high temperatures in preparation must be allowed to decrease in temperature before being placed in a controlled holding atmosphere. If the product is not allowed to decrease in temperature, excessive condensation will form increasing the moisture content on the outside of the product. To preserve the safety and quality of freshly cooked foods however, a maximum of 1 to 2 minutes must be the only time period allowed for the initial heat to be released from the product.

Most Halo Heat holding equipment is provided with a thermostat control between 60° and 200°F (16° to 93°C). If the appliance is equipped with vents, close the vents for moist holding and open the vents for crisp holding.

Holding Temperature Range						
Meat	Fahrenheit	Celsius				
Beef Roast — Rare	130°F	54°C				
Beef Roast — Med/Well Done	155°F	68°C				
Beef Brisket	160°F-175°F	71°C-79°C				
Corn Beef	160°F-175°F	71°C-79°C				
Pastrami	160°F-175°F	71°C-79°C				
Prime Rib — Rare	130°F	54°C				
Steaks — Broiled/Fried	140°F-160°F	60°C-71°C				
Ribs — Beef Or Pork	160°F	71°C				
Veal	160°F-175°F	71°C-79°C				
Ham	160°F-175°F	71°C-79°C				
Pork	160°F-175°F	71°C-79°C				
Lamb	160°F-175°F	71°C-79°C				
Poultry						
Chicken — Fried/Baked	160°F-175°F	71°C-79°C				
Duck	160°F-175°F	71°C-79°C				
Turkey	160°F-175°F	71°C-79°C				
General	160°F-175°F	71°C-79°C				
Fish/Seafood						
Fish — Baked/Fried	160°F-175°F	71°C-79°C				
Lobster	160°F-175°F	71°C-79°C				
Shrimp — Fried	160°F-175°F	71°C-79°C				
Baked Goods						
Breads/Rolls	120°F-140°F	49°C-60°C				
Miscellaneous						
Casseroles	160°F-175°F	71°C-79°C				
Dough — Proofing	80°F–100°F	27°C-38°C				
Eggs — Fried	150°F-160°F	66°C-71°C				
Frozen Entrees	160°F-175°F	71°C-79°C				
Hors d'oeuvres	160°F–180°F	71°C-82°C				
Pasta	160°F–180°F	71°C-82°C				
Pizza	160°F-180°F	71°C-82°C				
Potatoes	180°F	82°C				
Plated Meals	140°F-165°F	60°C-74°C				
Sauces	140°F-200°F	60°C-93°C				
Soup	140°F-200°F	60°C-93°C				
Vegetables	160°F-175°F	71°C-79°C				

The holding temperatures listed are suggested guidelines only. All food holding should be based on internal product temperatures. Always follow local health (hygiene) regulations for all internal temperature requirements.



Cleaning and Preventative Maintenance

Protecting Stainless Steel Surfaces

It is important to guard against corrosion in the care of stainless steel

surfaces. Harsh, corrosive,
or inappropriate chemicals
can completely destroy the
protective surface layer of
stainless steel. Abrasive pads,
steel wool, or metal implements

will abrade surfaces causing damage to this protective coating and will eventually result in areas of corrosion. Even water, particularly hard water that contains high to moderate concentrations of chloride, will cause oxidation and pitting that result in rust and corrosion. In addition, many acidic foods spilled and left to remain on metal surfaces are contributing factors that will corrode surfaces.

Proper cleaning agents, materials, and methods are vital to maintaining the appearance and life of this appliance. Spilled foods should be removed and the area wiped as soon as possible but at the very least, a minimum of once per day. Always thoroughly rinse surfaces after using a cleaning agent and wipe standing water as quickly as possible after rinsing.

Cleaning Agents

Use non-abrasive cleaning products designed for use on stainless steel surfaces. Cleaning agents must be chloride-free compounds and must not contain quaternary salts. Never use hydrochloric acid (muriatic acid) on stainless steel surfaces. Failure to observe this precaution will void the warranty. Always use the proper cleaning agent at the manufacturer's recommended strength. Contact your local cleaning supplier for product recommendations.

Cleaning Materials

Cleaning can usually be accomplished with the proper cleaning agent and a soft, clean cloth. When more aggressive methods are needed, use a non-abrasive scouring pad on difficult areas and make certain to scrub with the visible grain of surface metal to avoid surface scratches. Never use wire brushes, metal scouring pads, or scrapers to remove food residue. Failure to observe this precaution will void the warranty.

NOTICE



To protect stainless steel surfaces, completely avoid the use of abrasive cleaning compounds, chloride based cleaners, or cleaners containing quaternary salts. **Never** use hydrochloric acid (muriatic acid) on stainless steel. **Never** use wire brushes, metal scouring pads or scrapers.



NWARNING



To prevent serious personal injury, death, or property damage:

The appliance must be cleaned thoroughly to avoid deposits of grease and or food residue inside the appliance that may catch fire. If fat deposits and/or food waste inside the appliance ignite, shut down the appliance immediately and keep the appliance door closed to extinguish the fire. If further extinguishing is required, disconnect the appliance from the main power and use a fire extinguisher (do not use water to extinguish a grease fire!). Failure to clean the appliance properly invalidates the warranty and relieves Alto-Shaam of all liability.



Cleaning and Preventative Maintenance

WARNING



To prevent serious personal injury, death, or property damage:

Do not steam clean, hose down or flood the interior or exterior with water or liquid solution of any kind. **Do not** use water jet to clean. Failure to observe this precaution will void the warranty.

WARNING



To prevent serious injury, death, or property damage, **always** disconnect the appliance from the power source before cleaning or servicing.

How to Clean the Holding Cabinet

- 1. Disconnect appliance from power source and let cool.
- 2. Remove and wash wire shelves, side racks/pan slides, drip tray, and drip pan with hot soapy water.
- 3. Wipe the interior of the holding cabinet with a paper towel to remove loose food debris.
- 4. Clean the interior with a damp clean cloth or sponge and any good commercial detergent.

NOTICE: Never use abrasive cleaning compounds, chloride-based cleaners, or cleaners containing quaternary salts. Never use hydrochloric acid (muriatic acid) on stainless steel.

- 5. Spray heavily soiled areas with a water soluble degreaser and let stand for 10 minutes, then remove soil with a plastic scouring pad.
- 6. Wipe the control panel, door vents, door handles, and door gaskets.
- 7. Rinse surfaces by wiping with a sponge and clean warm water.

- 8. Remove excess water with a sponge and wipe dry with a clean cloth or air dry. Leave door(s) open until interior is completely dry.
- 9. Wipe the interior with a sanitizing solution that is approved for use on stainless steel food contact surfaces.
- 10. Replace the side racks/pan slides, drip tray, drip pan and shelves.

NOTE: Shelves must be installed with the curved end up and toward the back of the compartment.

- 11. Spray a clean cloth with a cleaning solution approved for stainless steel and wipe the exterior of the cabinet.
- 12. Clean door glass with glass cleaner or distilled vinegar. Always follow appropriate state or local health (hygiene) regulations regarding all applicable cleaning and sanitation requirements for equipment.



Cleaning and Preventative Maintenance

Pre	ventative Maintenance Checklist
Dail	y
	Perform daily cavity cleaning as stated in the cleaning section of this manual
	Clean out front drip tray as recommended in the cleaning section of this manual
Mon	nthly
	Inspect door gasket
	Inspect door window gasket
	Inspect cavity door vent slides for proper operation
	Inspect side racks, shelves and shelf supports to ensure nothing is damaged or in need of replacement
	Calibrate removable product probe
	Clean out cooling fan intake and exhaust vents
	Visually inspect the smoke element (Cook & Hold smoker oven only). If any visual signs of deformation, cracks or breaks are seen, remove the oven from service and contact an Alto-Shaam authorized service technician for service.
Ever	ry 12 months (Inspection by a factory authorized technician)
	Open control area and inspect/tighten all wiring
	Inspect all electrical components
	Test elements for electrical short to ground. Replace/repair as needed.
	Visually inspect the cavity for structural integrity
	Inspect door gasket. Replace if needed.
	Visually inspect any door handles and hinges. Replace/repair as needed.
	Remove any loose handle and hinge screws. Loctite and then properly secure the screws.
	Inspect smoke element and smoke element wiring (Cook & Hold smoker oven only)
	Inspect and test product probe and product probe receptacle (where applicable)
	Inspect and test control and control functions
	Inspect temperature control knobs. Replace if needed.
	Inspect casters. Repair/replace as needed.
	Inspect perimeter bumper. Repair/replace as needed.
	Inspect power cord. Tighten cord connection inside the appliance control area
	Replace cooling fans (where applicable)
	Perform cavity temperature calibration per manufacturer's recommended calibration procedures
	Check site voltage
	Set voltage switch (where applicable)
	Test/Replace independent indicator lights (where applicable)
	Confirm proper current draw of heating elements



Food flavor and aroma are usually so closely related that it is difficult, if not impossible, to separate them. There is also an important, inseparable relationship between cleanliness and food flavor. Cleanliness, operating efficiency, and appearance of equipment contribute considerably to savory, appetizing foods.

Most food imparts its own particular aroma and many foods also absorb existing odors. Unfortunately, during this absorption there is not a distinction between **good** and **bad** odors. The majority of objectionable flavors and odors troubling food service operations are caused by bacteria growth. Sourness, rancidity, mustiness, stale or other undesireable flavors are usually the result of germ activity.

The easiest way to ensure full, natural food flavor is through comprehensive cleanliness. This means good control of both visible soil (dirt) and invisible soil (germs). A thorough approach to sanitation will provide essential cleanliness. It will ensure an attractive appearance of equipment, along with maximum efficiency and utility. More importantly, a good sanitation program provides one of the key elements in the prevention of food-borne illnesses.

A comprehensive sanitation program should focus on the training of staff in basic sanitation procedures. This includes personal hygiene, proper handling of raw foods, cooking to a safe internal product temperature, and the routine monitoring of internal food temperatures from the time the food is received through the time the food is served.

A controlled holding environment for prepared foods is just one of the important factors involved in the prevention of food-borne illnesses. Temperature monitoring and control during receiving, storage, preparation, and the service of foods are of equal importance.

The most accurate method of measuring safe temperatures of both hot and cold foods is by internal product temperature. A thermometer is an effective tool for this purpose, and should be routinely used on all products that require holding at a specific temperature.

Internal Food Product Temperatures						
Hot Foods						
Danger Zone	40°F to 140°F	4°C to 60°C				
Critical Zone	70°F to 120°F	21°C to 49°C				
Safe Zone	140°F to 165°F	60°C to 74°C				
Cold Foods						
Danger Zone	Above 40°F	Above 4°C				
Safe Zone	36°F to 40°F	2°C to 4°C				
	Frozen Foods					
Danger Zone	Above 32°F	Above 0°C				
Critical Zone	0°F to 32°F	-18°C to 0°C				
Safe Zone	-18°C or Below					

Hazard Analysis (at) Critical Control Points (HACCP), is a quality control program of operating procedures to assure food integrity, quality, and safety. Taking steps necessary to augment food safety practices is both cost effective and relatively simple. Additional HACCP information is available by contacting:

Center for Food Safety and Applied Nutrition Food and Drug Administration Phone: 1-888-SAFEFOOD www.foodsafety.gov

Troubleshooting



Thermostat Accuracy

To verify that the compartment temperature matches the temperature displayed on the controller:

- Ensure the appliance voltage matches the power source.
- 2. With the exception of the wire shelves, completely empty the holding cabinet.
- 3. Ensure the air temperature sensor, located inside the holding compartment is completely clean.
- 4. Suspend a quality thermometer from the center of the holding compartment.
- 5. Close cabinet door and set the holding temperature anywhere between 60°F and 200°F (16°C to 93°C).
- 6. Allow the temperature to stabilize for a minimum of one hour.

Do not open the cabinet door(s) during the temperature stabilization period.

 Compare the temperature displayed on the controller with the reading on the thermometer.
 If the reading on the thermometer does not match the temperature on the controller, the air sensor may be faulty.

How to verify sensor integrity

Place the sensor in ice water. Test with an ohmmeter set to the ohm scale.

Air sensor	1000 ohms ± 20
Air sensor (Deluxe control)	100 ohms ± 2

If the reading is more or less than above parameters, replace sensor.



Always verify that the circuit breaker is turned to the On position and your appliance is receiving power **before** calling your authorized Alto-Shaam Service Agent.

NOTICE

This section is provided for the assistance of qualified and trained service technicians only and is not intended for use by untrained or unauthorized service personnel. Do not attempt to repair or service the oven beyond this point. Contact Alto-Shaam for the nearest authorized service agent. Repairs made by any other service agents without prior authorization by Alto-Shaam will void the warranty.

MARNING



To prevent serious injury, death, or property damage, **always** disconnect the appliance from the power source before cleaning or servicing.




Troubleshooting

Code	Description	Possible Causes				
E-10	Cavity air sensor shorted	Cavity air sensor reading < 5°F (-15°C). Verify sensor integrity.				
E-10	Cavity air sensor open	Cavity air sensor reading > 517°F (269°C). Verify sensor integrity.				
E-11	Product probe is shorted					
E-20	Oven will cook in time only	Product probe reading < 5°F (-15°C). Verify sensor integrity.				
E-21	Product probe is open Oven will cook in time only	Product Probe reading > 517°F (269°C). Verify sensor integrity.				
E-30	Under temperature	Unit has been more than 25°F (14°C) below set point for longer than 90 minutes.				
E-31	Over temperature	Unit has been more than 60°F (33°C) above the maximum set-point for longer than 3 minutes. Holding Cabinets with this error code are more than 145°F (81°C) above the maximum set-point.				
E-32	Safety switch open (Aux hi-limit switch)	Contact factory.				
E-38	Internal software error	Contact factory.				
E-39	Sensor error	Contact factory.				
E-50	Temp. measurement error	Contact factory.				
E-51	Temp. measurement error	Contact factory.				
E-60	Real time clock error	Data set to factory default. Ensure that date and time are correct if applicable.				
E-61	Real time clock error	Contact factory.				
E-64	Clock is not oscillating	Contact factory.				
E-70	Configuration connector error (DIP switch)	Refer to wiring diagram for the particular model and ensure dip switches on the				
E-78	Voltage low	Voltage below 90 VAC on a 125 VAC unit, or below 190 VAC on a 208-240 VAC unit. Correct voltage.				
E-79	Voltage high	Voltage over 135 VAC on a 125 VAC unit, or over 250 VAC on a 208-240 VAC unit. Correct voltage.				
E-80	EEPROM Error	Ensure that all temperatures and times are properly set. Contact factory if problem persists.				
E-81	EEPROM Error	Contact factory.				
E-82	EEPROM Error	Contact factory.				
E-83	EEPROM Error	Contact factory.				
E-85	EEPROM Error	All timers, if previously on, are now off. Possible bad EEPROM.				
E-86	EEPROM Error	Stored HACCP memory corrupted. HACCP Address reset to 1. Possible bad EEPROM. Contact factory if problem persists.				
E-87	EEPROM Error	Stored offsets corrupted. Offsets reset to 0. Control may need a recalibration. Possible bad EEPROM. Contact factory if problem persists.				
E-88	EEPROM Error	All timer set-points are reset to 1 minute. Timers, if previously on, are now off. Possible bad EEPROM.				
E-90	Button stuck	A button has been held down for > 60 seconds. Adjust control. Error will reset when the problem has been resolved.				
E-91	Input failure	Contact factory.				
E-dS	Datakey error	Datakey digital signature incompatible. Cycle power, and install compatible Datakey if error persists.				
E-dT	Datakey error	Datakey incompatible with control. Install compatible Datakey.				
E-dU	Datakey unplugged	Install Datakey and cycle power to control to clear error.				
dLto	Datalogger has timed out	Cycle power. Contact factory if error persists.				
dLSD	Micro SD card not plugged in	Plug in SD card and cycle power. Contact factory if error persists.				
	NOTE: If in doubt, always cycle the power to the control and contact factory if the problem persists.					



Single Compartment - 300-S

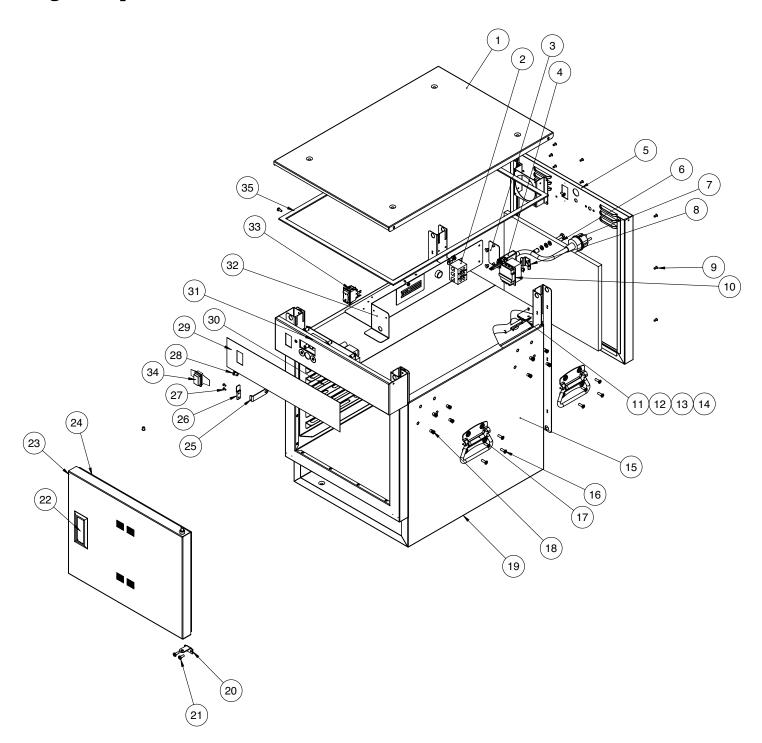

Part numbers and drawings are subject to change without notice.




Single Compartment - 300-S

Item	Description	Part No.	Qty
1	Top Cover	1012831	1
2	T-Block	BK-3019	1
3	Breaker Switch Cutout Cover	11133	1
4	Bushing, Straight, Strain Relief	BU-34898	1
5	Rear Trim	5014525	1
6	Insulation	IN-2003	1
7	Cordset 120V	CD-3232	1
	230V (CEE 7/7)	CD-3922	1
	230V (CH2-16P)	CD-36231	1
	230V (BS 1363)	CD-33925	1
8	Hi-Limit Protection Cover	1003936	1
9	Rivet, Blind, #44, S/S	RI-2100	16
10	Hi-Limit Thermostat	TT-33476	1
11	Sensor Mounting Bracket	1493	1
12	Block, Sensor	BK-29606	1
13	Screw, 6-32 x 1/2, NC Phil, Flat	SC-2254	2
14	Sensor, Oven Temperature	PR-34494	1
15	Insulation	IN-22364	1
16	Screw, M5 x 0.8 x 16mm Flat	SC-22281	16
17	Transport Handle	HD-2021	4
18	Nut, Hex Insert M5	NU-23909	16
19	Outer Casing Spot	5014538	1
20	Hinge Plate, Bottom Right Hand	1012999	1
	Left Hand*	1014661	1
21	Screw, 8-32 x 1/4" Trh Phh	SC-2459	12
22	Handle, Pull, Recessed	HD-28789	1
23	Door Assembly	5014458	1
24	Door Gasket	GS-35092	1
25	Door Latch	1013803	1
26	Door Latch Receiver	1013809	1
27	Screw, M3 x 0.5 x 6mm Pan	SC-22266	2
28	Stud, Shoulder, Short, S/S	ST-2546	1
29	Panel, Overlay	PE-35188	1
30	Side Racks	1012872	2
31	Control	CC-34970	1
32	Electric Chassis Spot	5014530	1
33	Switch, Rocker, 125-277V, 20A	SW-34769	1
34	Switch Cover (230V only)	CV-38297	1
35	Gaskets, Adhesive, .125 x .375	GS-23622	1
36*	Probe Cover	1008807	1
37*	Bushing, 3/4" Snap	BU-3008	1
38*	Nut, 6-32 Hex, S/S	NU-2361	4
39*	Screw, 10-32 x 1/4 Pan Hd Ground	SC-2190	1
40*	Screws, M4-0.7 x 6mm Phil	SC-22271	2
41*	Screw, HHCS M6 x 20, w/No Mkgs	SC-22924	1
42*	Screw, 6-32 x 1-1/4" Round Hd	SC-2365	2
43*	Screw, M6 x 1.0 x 10 Pan	SC-27078	2
44*	Shelves	SH-2107	2
45*	Spacer, Snap-In, 7/16", Control	SP-29392	6
46*	Washer, Flat	WS-22297	2
47*	Washer, Split Lock	WS-22302	2
48*	Washer, 6-32, Flat, Nylon	WS-23148	4
49*	Washer, Star Lock	WS-2467	1
50*	Foil Pad Heater, 230V	EL-29740	1
51*	Foil Pad Heater, 120V	EL-35173	1

^{*}Not shown



Single Compartment - 500-S, 750-S, 1000-S, 1200-S (1000-S Shown)

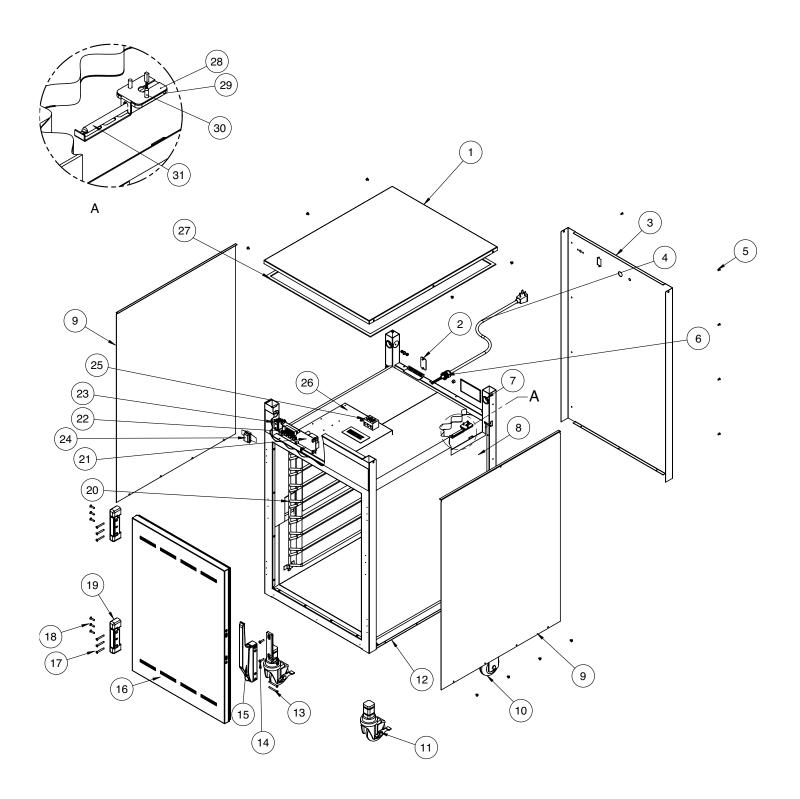

Part numbers and drawings are subject to change without notice.




Single Compartment - 500-S, 750-S, 1000-S, 1200-S

	Model >			750-S		1000-9	5	1200-S	
Item	Description	500-S Part No.	Qty	Part No.	Qty	Part No.	Qty	Part No.	Qty
1	Top Cover	1011946	1	1011872	1	1011534	1	1011653	1
2	Breaker Switch Cutout Cover	1011697	1	1011697	1	1011697	1	1011697	1
3	Rear Trim	1011944	1	1011873	1	1011618	1	1011752	1
4	Cordset 120V	CD-3232	1	CD-3232	1	CD-3232	1	CD-3232	1
	208-240V	CD-3551	1	CD-3551	11	CD-3551	1	CD-3551	1
	230V (CEE 7/7)	CD-3922	1	CD-3922	1	CD-3922	1	CD-3922	1
	230V (CH2-16P)	CD-36231	1	CD-36231	1	CD-36231	1	CD-36231	1
	230V (BS 1363)	CD-33925	1	CD-33925	1	CD-33925	1	CD-33925	1
	230V (AS/NZS 3112)	CD-38149	1	CD-38149	1	CD-38149	1	CD-38149	1
5	Rivet, Blind, #44, S/S	RI-2100	24	RI-2100	24	RI-2100	24	RI-2100	24
6	Bushing, Straight, Strain Relief	BU-3964	1	BU-3964	1	BU-3964	1	BU-3964	1
7	Bushing, 1-1/8" Snap	BU-3378	4	BU-3378	4	BU-3378	4	BU-3378	4
8	Insulation	IN-22364	1	IN-22364	1	IN-22364	1	IN-22364	1
9	Side Panel	5015081	2	5015083	2	5015088	2	5015092	2
10	Caster Package	5008022	1	5008022	1	5014422	1	5014421	1
	- Caster, 5" (127mm) Rigid							CS-24874	2
	- Caster, 3-1/2" (89mm) Rigid	CS-25674	2	CS-25674	2	CS-25674	2		
	- Caster, 2-1/2" (64mm) Rigid	CS-28178	2	CS-28178	2				
11	- Caster, 5" (127mm) Swivel with Brake							CS-24875	2
	- Caster, 3-1/2" (89mm) Swivel with Brake	CS-25675	2	CS-25675	2	CS-25675	2		
	- Caster, 2-1/2" (64mm) Swivel with Brake	CS-28179	2	CS-28179	2				
	- Shim	1012735	4	1012735	4	1012735	4	1012735	4
12	Bottom Panel	1010774	1	1010394	1	1009941	1	1011650	1
13	Screw, 10-32 x 1-3/4, NF, Phil, Flat M/S, 18-8 S/S	SC-29387	4	SC-29387	4	SC-29387	4	SC-29387	4
14	Screw, 10-32 x 3/4 Phillips Pan Hd	SC-2071	2	SC-2071	2	SC-2071	2	SC-2071	2
15	Handle, Offset Mag Latch	HD-27080	1	HD-27080	1	HD-27080	1	HD-27080	1
16	Solid Door (Standard)	5013132	1	5012938	1	5012801	1	5012663	1
	Windowed Door (Option)			5013129	1	5012806	1	5012822	1
	Door Gasket	GS-22950	1	GS-22951	1	GS-23796	1	GS-23796	1
17	Screw, 10-32 x 1-1/2, NF, Phil, Flat M/S,18-8 S/S	SC-2073	6	SC-2073	6	SC-2073	6	SC-2073	6
18	Screw, 10-32 x 3/4, NF Phil, Flat M/S, 18-8 S/S	SC-2072	6	SC-2072	6	SC-2072	6	SC-2072	6
19	Hinge, 1-3/8" Offset, Pair, Chrome	HG-22338	2	HG-22338	2	HG-22338	1	HG-22338	1
20	Side Rack	SR-28402	2	SR-28404	2	SR-2120	2		
	*Pan Slides						1	SR-24447	8
	*Pan Slide Rail						l	1011741	4
21	Front Trim, Control	5013104	1	5012940	1	5012285	1	5012731	1
22	Control	CC-34970	1	CC-34970	1	CC-34970	1	CC-34970	1
23	Switch, Rocker, 125-277V, 20A	SW-34769	1	SW-34769	1	SW-34769	1	SW-34769	1
24	Switch Cover (230V only)	CV-38297	1	CV-38297	1	CV-38297	1	CV-38297	1
25	T-Block	BK-3019	1	BK-3019	1	BK-3019	1	BK-3019	1
26	Electric Chassis	5012122	1	5012122	1	5012122	1	5012122	1
27	Gaskets, Adhesive, .125X.375 [Lin Ft]	GS-23622	1	GS-23622	1	GS-23622	1	GS-23622	1
28	Bracket, Sensor Mtg.	1493	1	1493	1	1493	1	1493	1
29	Block, Sensor	BK-29605	1	BK-29605	1	BK-29605	1	BK-29605	1
30	Screw, 6-32 x 1/2, NC Phil, Flat	SC-2254	2	SC-2254	2	SC-2254	2	SC-2254	2
31	Sensor, Oven Temperature	SN-38111	1	SN-38111	1	SN-38111	1	SN-38111	1
32*	Non-Product Probe Seal	1006871	1	1006871	1	1006871	1	1006871	1
33*	Inner Back Panel	1011938	1	1011861	1	1011529	1	1011654	1
34*	Nut, M4-0.7 Hex 18-8	NU-22286	2	NU-22286	2	NU-22286	2	NU-22286	2
35*	Nut, Hex #8-32	NU-2296	2	NU-2296	2	NU-2296	2	NU-2296	2
36*	Nut, 6-32 Hex, S/S	NU-2361	4	NU-2361	4	NU-2361	4	NU-2361	4
37*	Panel, Overlay	PE-29399	1	PE-29398	1	PE-29396	1	PE-29397	1
38*	Plug, 3/8" Hole	PG-25574	2	PG-25574	2	PG-25574	2	PG-25574	2
39*	Screw, 10-32 x 1/4 Pan Hd Ground			SC-2190	1	SC-2190	1	SC-2190	1
40*	Screws, M4-0.7 x 6mm Phil	SC-22271	2	SC-22271	2	SC-22271	2	SC-22271	2
41*	Screw, 1/4-20 x 1/2, NC Slot Rnd	SC-2332	4	SC-2332	4	SC-2332	4	SC-2332	4
42*	Screw, 6-32 x 1-1/4" Round Hd			SC-2365	2	SC-2365	2	SC-2365	2
43*	Screws, 8-32 x 1/2" Phil S/S	SC-2425	6	SC-2425	6	SC-2425	6	SC-2425	6
44*	Spacer, Snap-In, 7/16", Control	SP-29392	6	SP-29392	6	SP-29392	6	SP-29392	6
45*	Shelf, Chrome Plated	SH-2107	2	SH-2105	2		l		
46*	Tape, 1/2" Wide x 25 Mil VHB	TA-24637	9	TA-24637	9	TA-24637	9	TA-24637	18
47*	Washer, 6-32, Flat, Nylon	WS-23148	4	WS-23148	4	WS-23148	4	WS-23148	4
48*	Washer, Star Lock	WS-2467	1	WS-2467	1	WS-2467	1	WS-2467	1



Double Compartment - 1000-UP, 1200-UP (1000-UP shown)

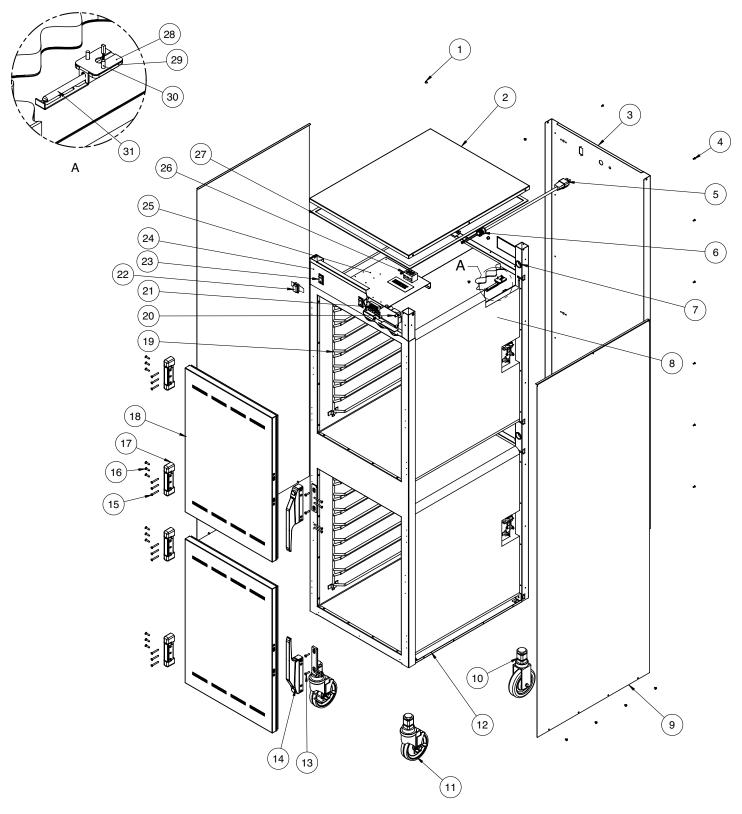

Part numbers and drawings are subject to change without notice.




Double Compartment - 1000-UP, 1200-UP

	Model >	1000-U	P	1200-U	P
Item	Description	Part No.	Qty	Part No.	Qty
1	Screw, 8-32 x 1/4" Phil	SC-2459	30	SC-2459	32
2	Top Cover	1011534	1	1011653	1
3	Rear Trim	1011532	1	1011652	1
4	Rivet, Blind, #44, S/S	RI-2100	44	RI-2100	44
5	Cordset 120V	CD-33824	1	CD-33824	1
	208-240V	CD-3551	1	CD-3551	1
	230V (CEE 7/7)	CD-3922	1	CD-3922	1
	230V (CH2-16P)	CD-36231	1	CD-36231	1
	230V (BS 1363)	CD-33925	1	CD-33925	1
	230V (AS/NZS 3112)	CD-38149	1	CD-38149	1
6	Bushing, Straight, Strain Relief	BU-3964	1	BU-3964	1
7	Bushing, 1-1/8" Snap	BU-3378	8	BU-3378	8
8	Insulation	IN-22364	1	IN-22364	1
9	Side Panel	5015105	2	5015105	2
10	Caster, 5" (127mm) Rigid	CS-24874	2	CS-24874	2
	Caster, 5" (127mm) Swivel With Brake				2
11	, , , , , , , , , , , , , , , , , , ,	CS-24875	2	CS-24875	
12	Bottom Panel	1009941	1	1011650	1
13	Screw, 10-32 x 3/4 Phillips Pan Hd	SC-2071	4	SC-2071	4
14	Handle, Offset Mag Latch	HD-27080	2	HD-27080	2
15	Screw, 10-32 x 1-1/2, NF, Phil, Flat M/S,18-8 S/S	SC-2073	12	SC-2073	12
16	Screw, 10-32 x 3/4, NF Phil, Flat M/S, #18-8 S/S	SC-2072	12	SC-2072	12
17	Hinge, 1-3/8 Offset, Pair, Chrome	HG-22338	2	HG-22338	2
18	Solid Door (Standard)	5012801	2	5012663	2
	Windowed Door (Option)	5012806	1	5012822	1
	Door Gasket	GS-23796	1	GS-23796	1
19	Side Rack	SR-2120	4		
20	Front Trim, Control	5012113	1	5012345	1
21	Control	CC-34970	2	CC-34970	2
22	Switch Cover (230V only)	CV-38297	1	CV-38297	1
23	Switch, Rocker, 125-277V, 20A	SW-34769	2	SW-34769	2
24	Panel, Overlay	PE-29394	1	PE-29395	1
25	Electric Chassis	5012122	1	5012122	1
26	T-Block	BK-3019	1	BK-3019	1
27	Gaskets, Adhesive, .125 x .375 [Linear Ft]	GS-23622	1	GS-23622	1
28		1493	2		2
	Bracket, Sensor Mounting			1493	
29	Block, Sensor	BK-29605	2	BK-29605	2
30	Screw, 6-32 x 1/2, NC Phil, Flat	SC-2254	2	SC-2254	2
31	Sensor, Oven Temperature	SN-38111	2	SN-38111	2
32	Non-Product Probe Seal	1006871	2	1006871	2
33*	Inner Back Panel	1011529	2	1011654	2
34*	Breaker Switch Cutout Cover	1011697	1	1011397	1
35*	Nut, M4-0.7 Hex 18-8	NU-22286	4	NU-22286	4
36*	Nut, Hex #8-32	NU-2296	2	NU-2296	2
37*	Nut, 6-32 Hex, S/S	NU-2361	8	NU-2361	8
38*	Plug, 3/8" Hole	PG-25574	3	PG-25574	3
39*	Screw, 10-32 x 1/4 Pan Hd Ground	SC-2190	1	SC-2190	1
40*	Screws, M4-0.7 x 6mm Phil	SC-22271	4	SC-22271	4
41*	Screw, 1/4-20 x 1/2, Nc Slot Rnd	SC-2332	4	SC-2332	4
42*	Screw, 6-32 x 1-1/4" Round Hd	SC-2365	2	SC-2365	2
43*	Screw, 10-32 x 1-3/4, NF, Phil, Flat M/S,18-8 S/S	SC-29387	8	SC-29387	8
44*	Spacer, Snap-In, 7/16", Control	SP-29392	12	SP-29392	12
	*Pan Slide		14	SR-24447	16
	*Pan Slide Rail				
1 E*				1011741	8
45*	Tape, 1/2" Wide x 25 Mil VHB	TA-24637	2		
46*	Washer, 6-32, Flat, Nylon	WS-23148	8	WS-23148	8
47*	Washer, Star Lock	WS-2467	1	WS-2467	1

^{*}Not shown



Electronic Components - 300-S

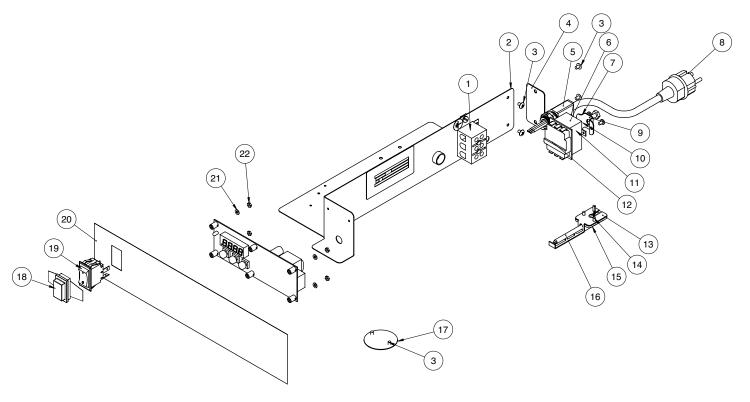

Part numbers and drawings are subject to change without notice.

Item	Description	Part No.	Qty	Item	Description	Part No.	Qty
1	T-Block	BK-3019	1	11	Washer, Split Lock	WS-22302	2
2	Electric Chassis Assembly	5015058	1	12	Nut, Threaded Insert, M6	NU-22770	1
3	Screw, 8-32 x 1/4" Phil	SC-2459	4	13	Bracket, Sensor Mtg.	1493	1
4	Switch Cover	11133	1	14	Screw, 6-32 x 3/8" Rnd Phh	SC-2254	2
5	Bushing, Strain Relief, 90°, Blk	BU-34898	1	15	Sensor Block	BK-29605	1
6	Hi-Limit Thermostat	TT-33476	1	16	Sensor, Oven Temperature	SN-38111	1
7	Hi-Limit Protection Cover	1003936	1	17	Probe Cover	1008807	1
8	Cordset 120V	CD-3232	1	18	Switch Cover (230V only)	CV-38297	1
	230V (CEE 7/7)	CD-3922	1	18	Switch, Rocker,125-277V, 20A	SW-34769	1
	230V (CH2-16P)	CD-36231	1	19	Panel, Overlay	PE-35188	1
	230V (BS 1363)	CD-33925	1	20	Washer, 6-32, Flat, Nylon	WS-23148	4
9	Screw, Hhcs, M6 x 20	SC-22924	1	21	Nut, 6-32 Hex, S/S	NU-2361	4
10	Washer, Flat	WS-22297	2	22*	Screws, M4-0.7 x 6mm Phil	SC-22271	2

^{*}Not shown

MARNING



To prevent serious injury, death, or property damage, **always** disconnect the appliance from the power source before cleaning or servicing.


A DANGER



To prevent serious injury, death, or property damage, **always** lock-out or post breaker panel until service work has been completed.



Deluxe Control Electronic Components

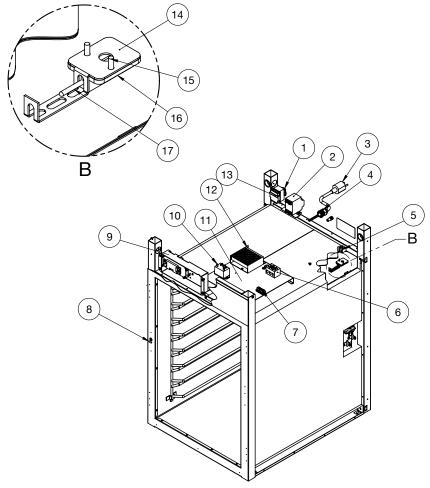

Part numbers and drawings are subject to change without notice.

Item	Description	Part No.	Qty	Item	Description	Part No.	Qty
1	Hi-Limit Protection Cover	1003936	1	7	Terminal Strip	TM-33560	1
2	Switch, Circuit Breaker	SW-34769	1	8	Reed Switch (per door)	SW-33559	1
3	Cordset 120V	CD-3232	1	9	Control without Timers	5012946	1
	208-240V	CD-3551	1	10	Relay	RL-33558	1
	230V (CEE 7/7)	CD-3922	1	11	Electric Chassis	5012122	1
	230V (CH2-16P)	CD-36231	1	12	Power Supply Board	BA-38586	1
	230V (BS 1363)	CD-33925	1	13	T-Stat, Hi-Limit	TT-33476	1
	230V (AS/NZS 3112)	CD-38149	1	14	Sensor Guard	1493	1
4	Bushing, Straight, Strain Relief	BU-3964	1	15	Screw, 6-32 x 1/2, NC Phil, Flat	SC-2254	2
5	Terminal Block, Sensor	BK-33546	1	16	Block, Sensor Mounting	BK-29605	1
6	T-Block	BK-3019	1	17	Sensor	SN-33541	1

MARNING



To prevent serious injury, death, or property damage, **always** disconnect the appliance from the power source before cleaning or servicing.

A DANGER



To prevent serious injury, death, or property damage, **always** lock-out or post breaker panel until service work has been completed.




Cable Heating Service Kits

Cable Heating Kit > (One kit required per compartment)		#4874 (500, 750, 1000)	#4881 (1200 - 4000W)	#4878 (1200 - all but 4000W)	
Part No.	Description	Qty	Qty	Qty	
CB-3045	Cable Heating Element		210 feet (6401cm)	90 feet (2591cm)	
CB-3044	Cable Heating Element	120 feet (3658cm)			
CR-3226	Ring Connector	4	12	4	
IN-3488	Insulation Corner	1 foot (30,5cm)	1 foot (30,5cm)	1 foot (30,5cm)	
BU-3105	Shoulder Bushing	4	12	4	
BU-3106	Cup Bushing	4	12	4	
ST-2439	Stud	4	12	4	
NU-2215	Hex Nut	8	24	8	
SL-3063	Insulating Sleeve	4	12	4	
TA-3540	Electrical Tape	1 roll	1 roll	1 roll	


Door Latch - 300-S Only

Description	Part No.	Qty
Door Latch Kit	5015662	1
— Door Latch Fixture (LH & RH)	67778	1
— Door Latch, Swing Arm	1013808	1
— Door Latch, Receiver	1013809	1
— Screw, M3 x 0.5 x 6mm Pan	SC-22266	2
— Stud, Shoulder, Short, S/S	ST-2546	1
֡	Door Latch Kit — Door Latch Fixture (LH & RH) — Door Latch, Swing Arm — Door Latch, Receiver — Screw, M3 x 0.5 x 6mm Pan	Door Latch Kit 5015662 — Door Latch Fixture (LH & RH) 67778 — Door Latch, Swing Arm 1013808 — Door Latch, Receiver 1013809 — Screw, M3 x 0.5 x 6mm Pan SC-22266

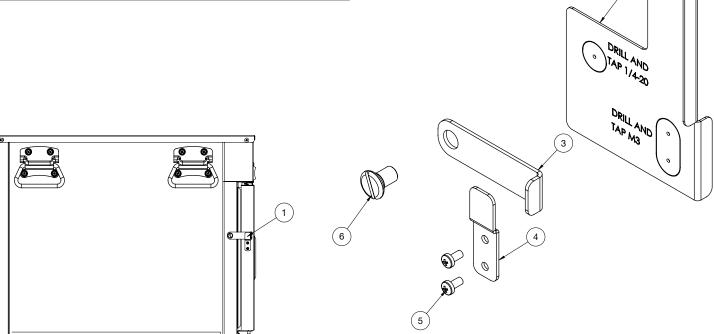


Part numbers and drawings are subject to change without notice.




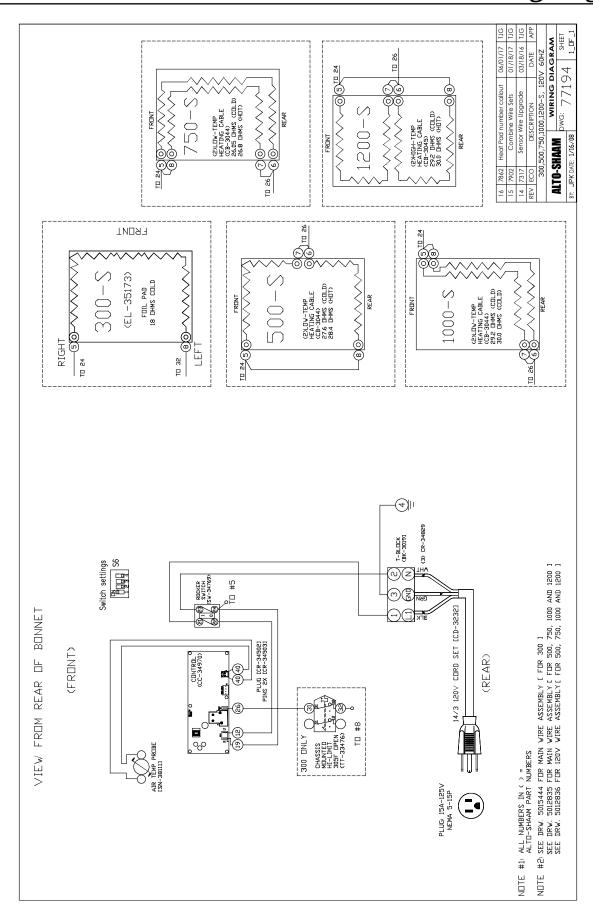



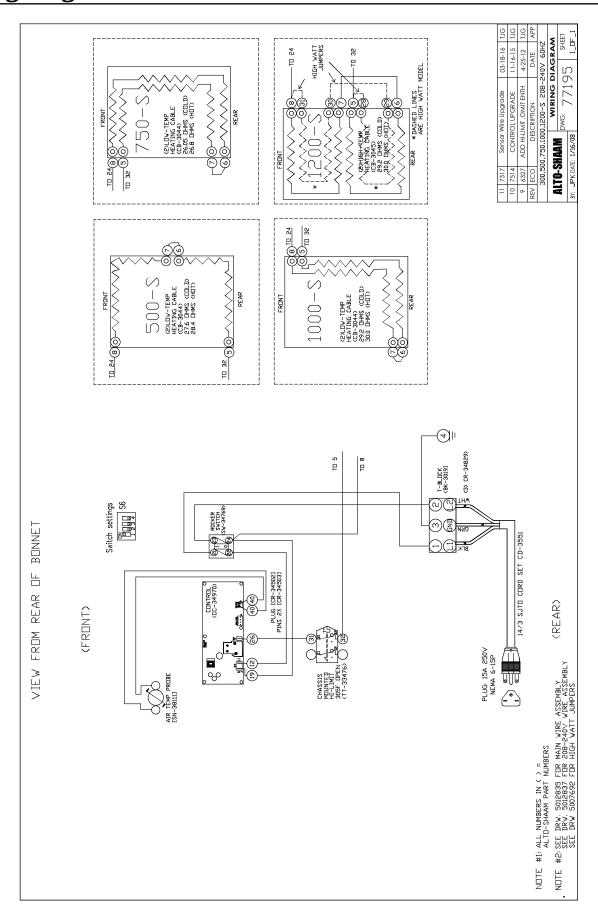




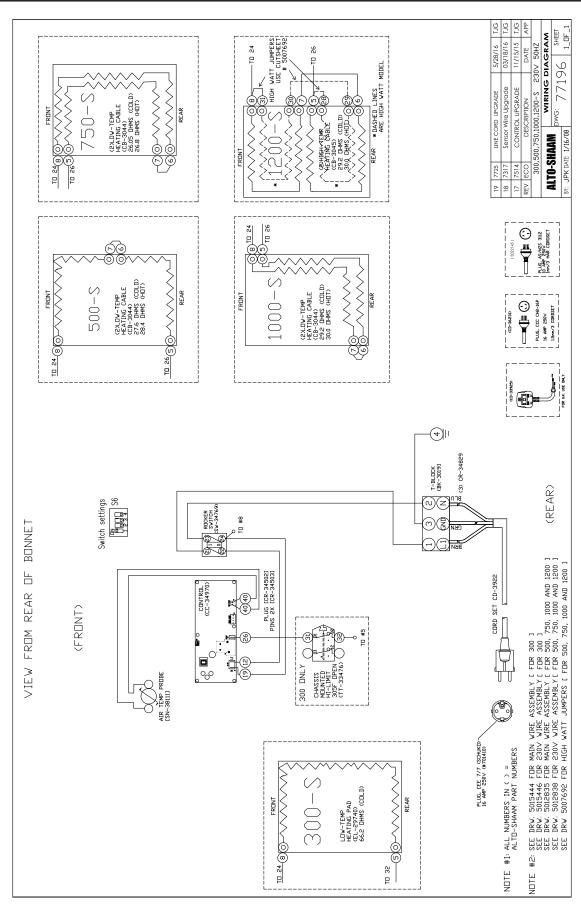


MN-29423 • Rev 6 • 02/18 • S-Series Hot Food Holding Cabinets




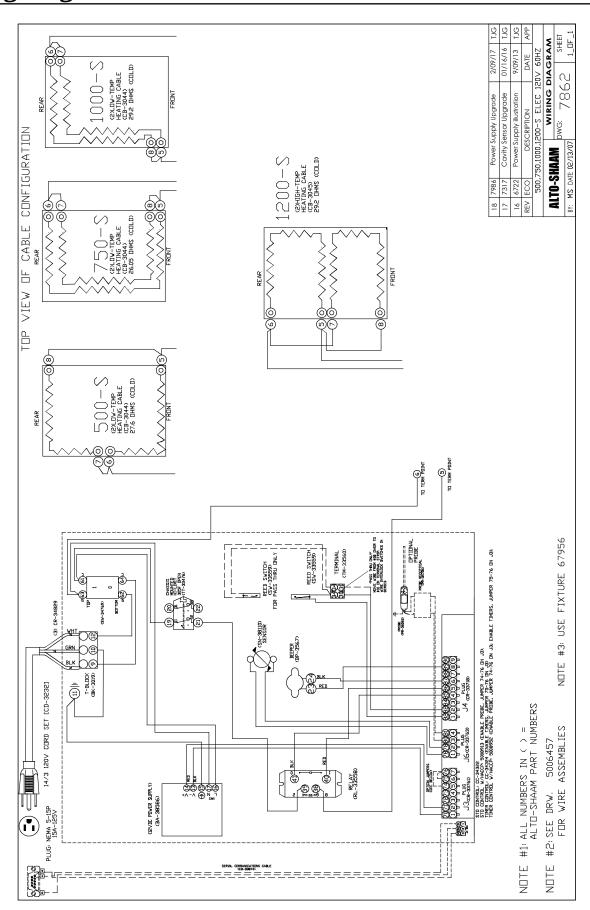




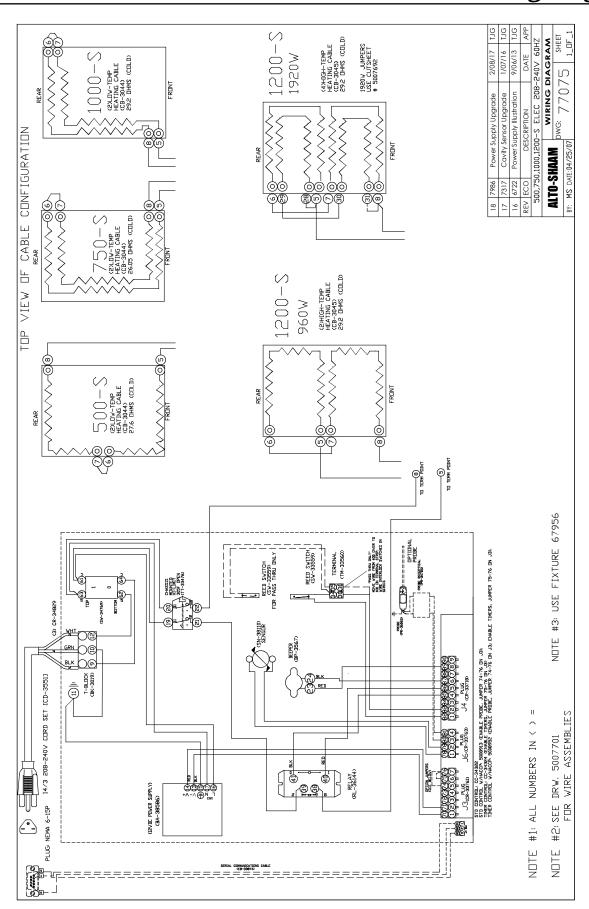




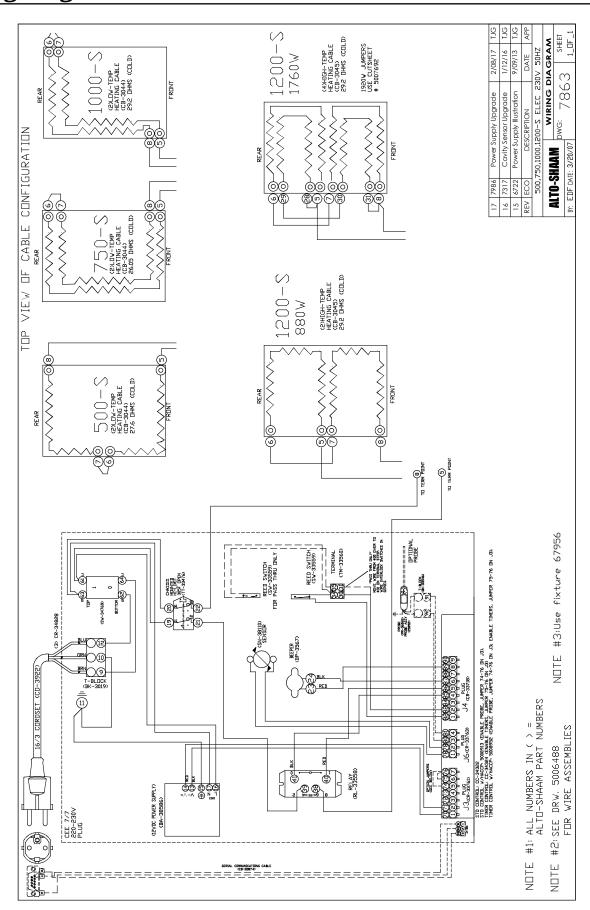




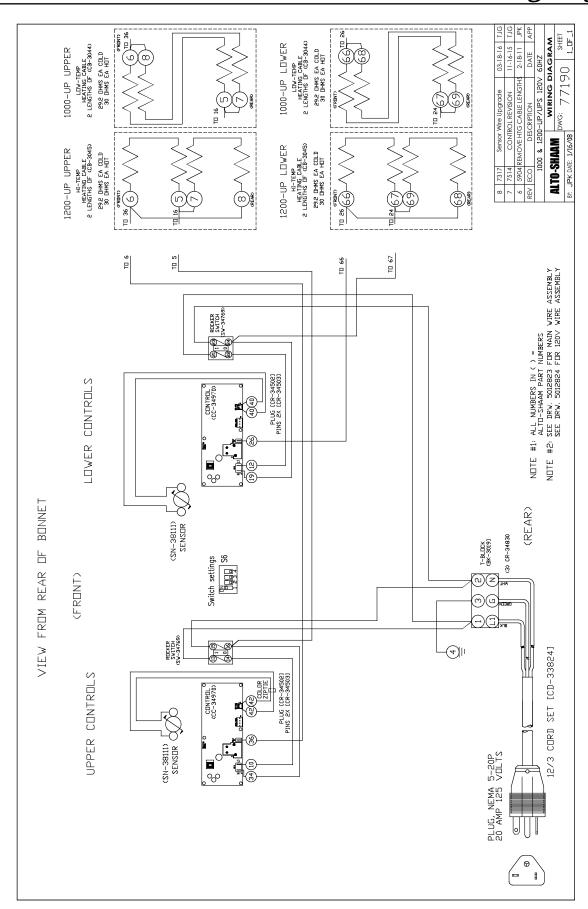




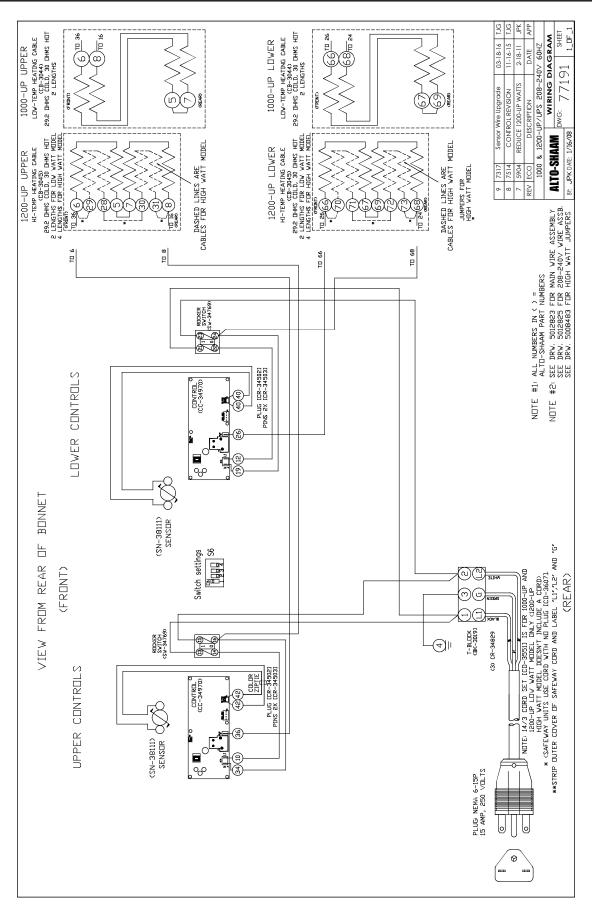




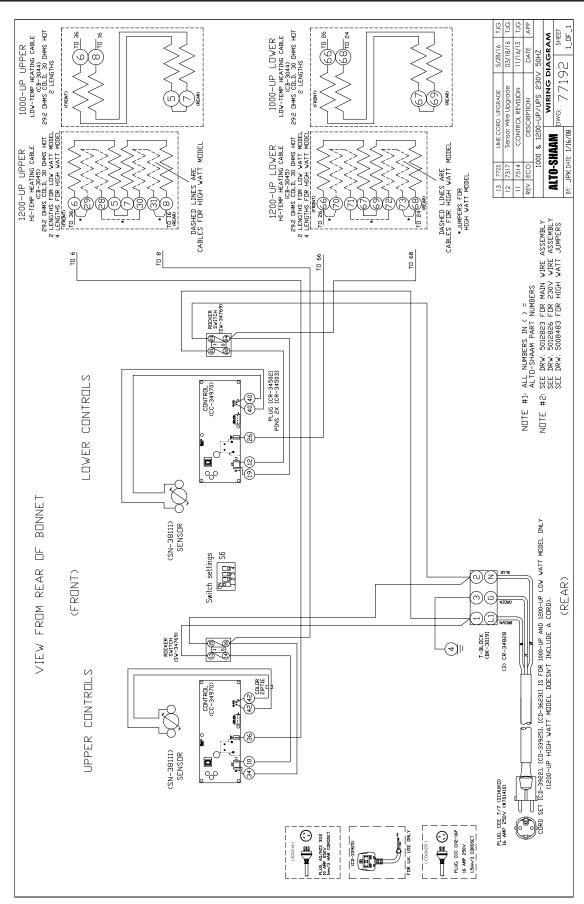



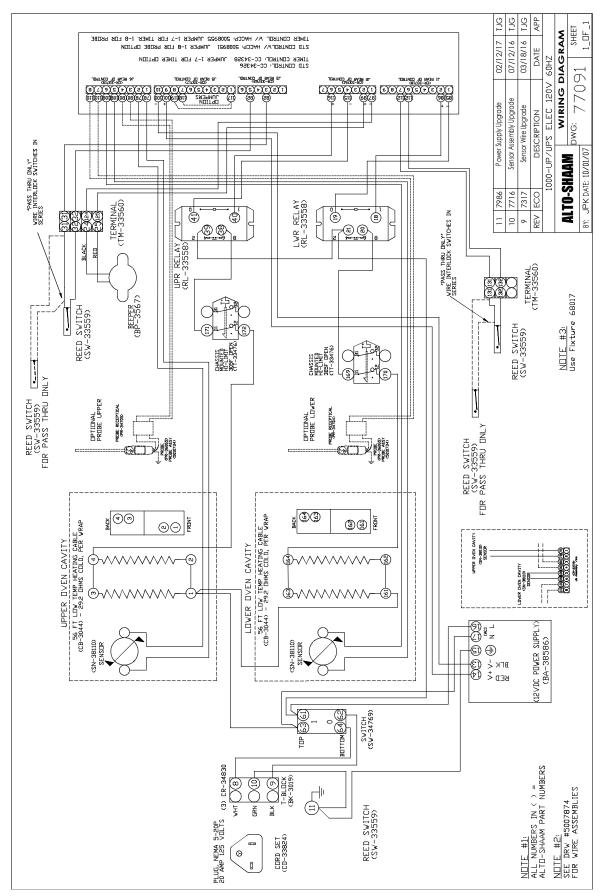




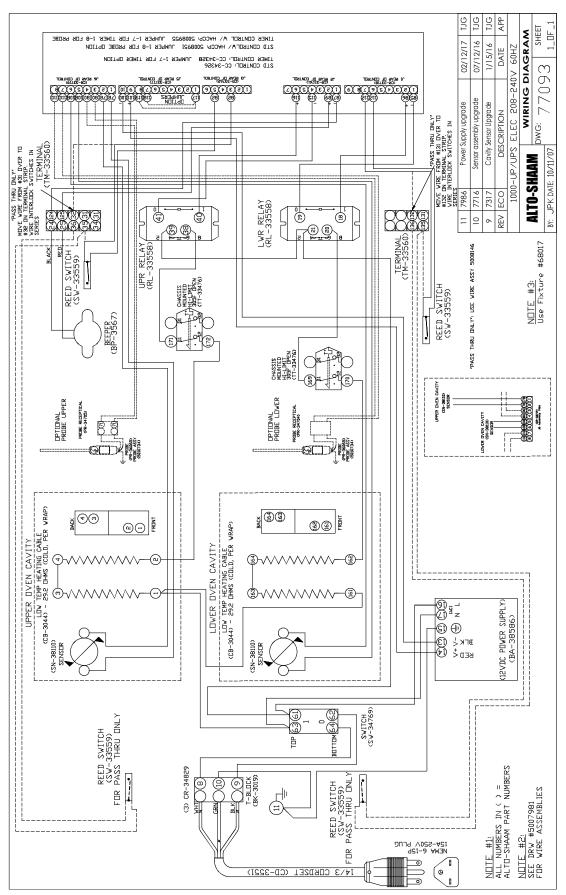


MN-29423 • Rev 6 • 02/18 • S-Series Hot Food Holding Cabinets



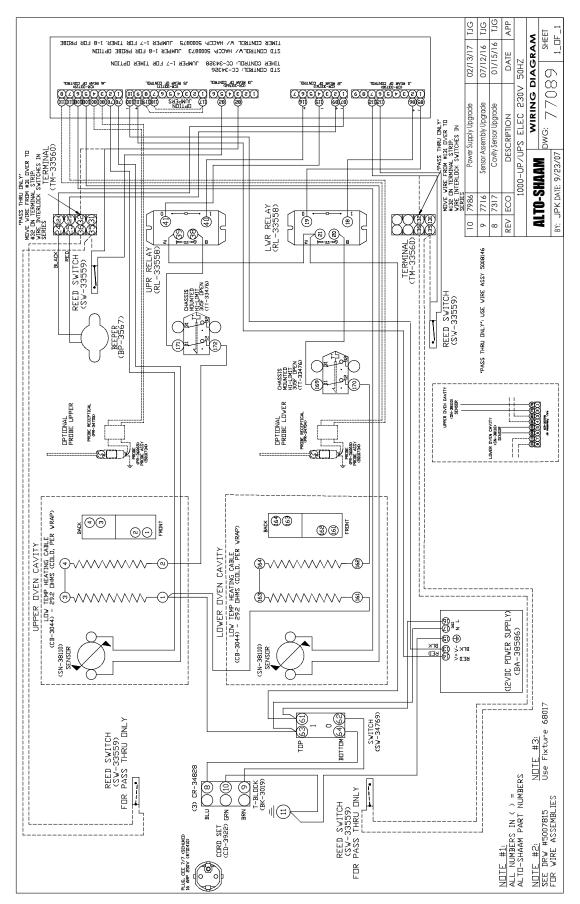


MN-29423 • Rev 6 • 02/18 • S-Series Hot Food Holding Cabinets




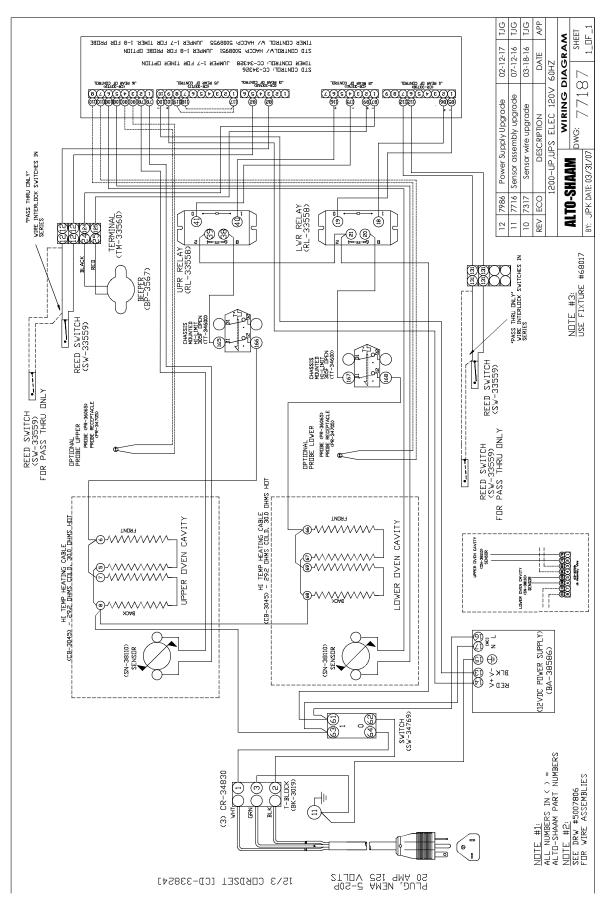



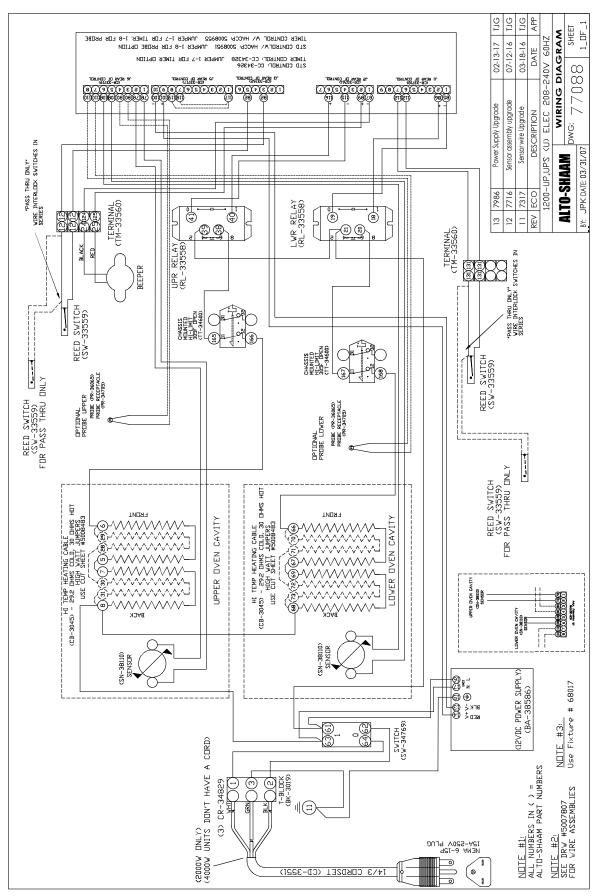



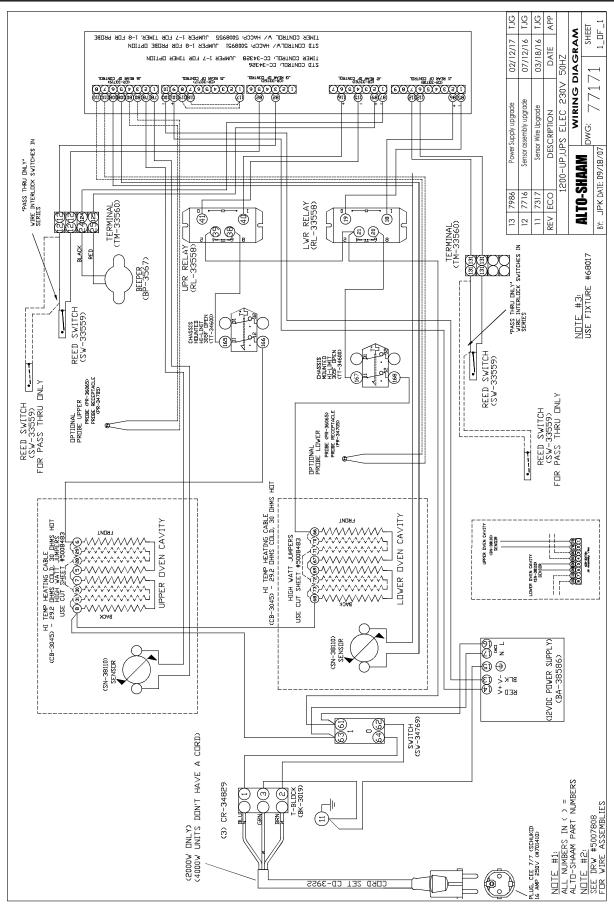

MN-29423 • Rev 6 • 02/18 • S-Series Hot Food Holding Cabinets

Limited Warranty

For the refrigeration compressor on Alto-Shaam Quickchillers[™], five (5) years from the date of installation of appliance.

For the heating element on Halo Heat® cooking and holding ovens, as long as the original purchaser owns the oven. This excludes holding only equipment.

For all other original parts, one (1) year from the date of installation of appliance or fifteen (15) months from the shipping date, whichever occurs first.

The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any additional fees.

To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

This warranty does not apply to:

- 1. Calibration.
- 2. Replacement of light bulbs, door gaskets, and/or the replacement of glass due to damage of any kind.
- 3. Equipment damage caused by accident, shipping, improper installation or alteration.
- 4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
- 5. Damage incurred as a direct result of poor water quality, inadequate maintenance of steam generators and/or surfaces affected by water quality. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator.
- 6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm® Cleaner, including but not limited to damage due to chlorine or other harmful chemicals. **Use of Alto-Shaam's Combitherm® Cleaner on Combitherm® ovens is highly recommended.**
- 7. Any losses or damage resulting from malfunction, including loss of product, food product, revenue, or consequential or incidental damages of any kind.
- 8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. In no event shall Alto-Shaam be liable for loss of use, loss of revenue or profit, or loss of product, or for any indirect, special, incidental, or consequential damages. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.

Effective November 1, 2012

W164 N9221 Water Street • P.O. Box 450 Menomonee Falls, Wisconsin 53052-0450 U.S.A.

PHONE: 262.251.3800 • 800.558.8744 U.S.A. / CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY www.alto-shaam.com

Printed in the U.S.A