
SIX-STARTM PORTABLE AND YOUTH FOOD BAR ASSEMBLY INSTRUCTIONS

SEE CARE & USE INSTRUCTIONS FOR CLEANING OF SNEEZE GUARD AND OTHER PARTS.

Tools Needed: 7/16" wrench

Step 1: Unpack and inventory all parts (see Parts List). To ensure proper assembly, it is suggested that you take time to locate and identify each part.

PARTS LIST			
Part	Qty	Part	Qty
Acrylic Sneeze Guard Panels	2	Legs	2
Sneeze Guard Ridge Channel	1_	Leg/Basin Attachment Plates (attached to legs)	4
Sneeze Guard Posts	2	5/8" Hex Head Bolt (16 attached to legs; 16 in bag)	32
Sneeze Guard Post End Shields (shipped inside posts) 2	Flat Washer (16 attached to legs; 16 in bag)	32
Nylon Thumb Screws (attached to posts)	4	Caster Impact Plate (Full Size Food Bar Only)	4
Short Shield Knobs	2	Swivel Caster without Brake	2
Long Post Knobs	2	Swivel Caster with Brake	2
Basin	1_	3/8" Hex Head Bolt (in bag)	16
Drain Faucet	1		

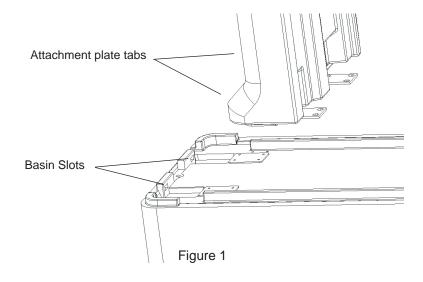

Basin and Leg Assembly

- Step 1: Turn basin upside down. Take one leg and insert tabs of leg/basin attachment plates in slots in outside edge of basin (see Figure 1).
- Step 2: Line up holes in plate with holes in basin. Slight shifting of plate may be necessary (tap with wrench). When holes line up, remove leg and tighten bolts on top of leg to secure leg/basin attachment plates.
- Step 3: Place leg back onto basin with tabs in slots. Insert four 5/8" Hex Head Bolts (longer bolts) with washers into four holes farthest from leg.


P.O. Box 53006 Oklahoma City, Oklahoma 73152-3006 (405) 528-3011 • FAX (405) 528-6338 1-800-654-8210


Web Site: www.carlislefsp.com #104803750



SIX-STARTM PORTABLE AND YOUTH FOOD BAR ASSEMBLY INSTRUCTIONS

SEE CARE & USE INSTRUCTIONS FOR CLEANING OF SNEEZE GUARD AND OTHER PARTS.

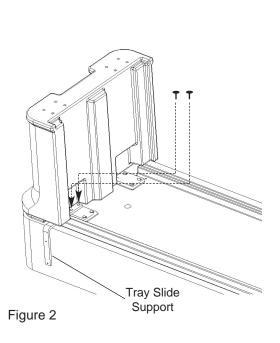

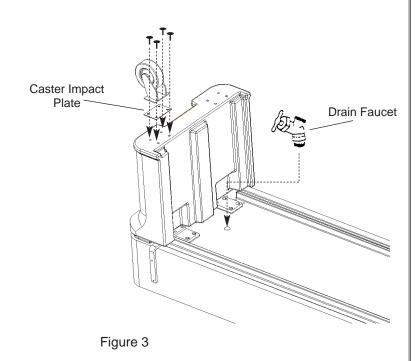

- Step 4: If you have end shelves or tray slides, refer to those instruction sheets to install the brackets now. Otherwise, insert four 5/8" Hex Head Bolts (longer bolts) with washers into the remaining holes closest to the leg (see Figure 2).
- Step 5: Repeat procedure for other leg.
- Step 6: Thread Drain Faucet into drain on underside of basin until tight (see Figure 3).
- Step 7: If you have a storage pack, refer to the storage pack instruction sheet now. Otherwise, proceed to step 8.
- Step 8: Two Casters are equipped with brakes. Determine where you would prefer the brakes. The recommended setup is one brake on each end on opposing sides of the bar.
- Step 9: If no storage pack, place Caster Impact Plate (excluding 4 ft./6 ft. Youth Food Bars) and Caster on one side of leg and attach with four 3/8" Hex Head Bolts (shorter bolts). Repeat procedure for the remaining three casters (see Figure 3).
- Step 10: With assistance, turn basin upright onto legs. Apply the brakes on the two Casters with Brakes.


P.O. Box 53006 Oklahoma City, Oklahoma 73152-3006 (405) 528-3011 • FAX (405) 528-6338 1-800-654-8210


Web Site: www.carlislefsp.com #104803750




SIX-STARTM PORTABLE AND YOUTH FOOD BAR ASSEMBLY INSTRUCTIONS

SEE CARE & USE INSTRUCTIONS FOR CLEANING OF SNEEZE GUARD AND OTHER PARTS.

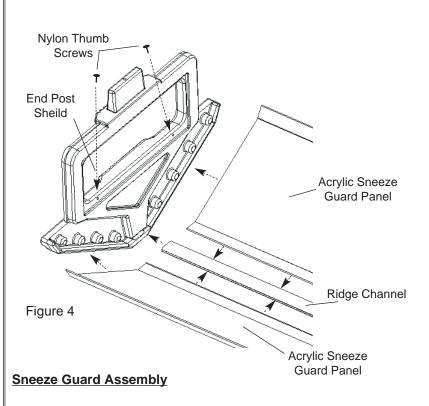

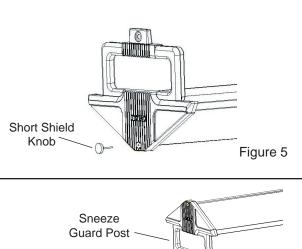

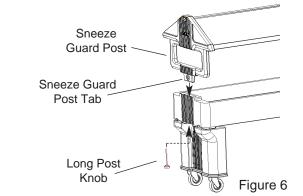

- Step 1: Remove Sneeze Guard Post End Shield by unscrewing nylon thumbscrews. Remove paper from both sides. Reattach to Sneeze Guard Post. Repeat procedure for other End Shield (see Figure 3).
- Step 2: Place Sneeze Guard Ridge Channel with either side up on flat surface (across a table with the ends hanging off recommended).
- Step 3: Peal paper off both sides of each Acrylic Sneeze Guard Panel.
- Step 4: Insert both Acrylic Sneeze Guard Panels into Sneeze Guard Ridge Channel so that both Panels slant upward. Position Panels in the center of Ridge Channel (see Figure 4).
- Step 5: Insert one end of Ridge Channel and Panels into one Sneeze Guard Post, aligning the panels to fit in the groove between the top of the Post and the round protrusions (see Figure 4). (Note: The "Carlisle" logo faces the outside.)
- Step 6: Insert one Short Shield Knob through Sneeze Guard Post and into the Sneeze Guard Ridge Channel. Tighten until snug. Do not over-tighten (Figure 5).
- Step 7: Repeat procedure with other Sneeze Guard Post.
- Step 8: With assistance, flip assembled sneeze guard over and place Sneeze Guard Post tabs into basin slots (see Figure 6).
- Step 9: Insert Long Post Knob through underside of basin and into the Sneeze Guard Post. Tighten until snug. Do not over-tighten (see Figure 6). Repeat procedure for other side.


P.O. Box 53006 Oklahoma City, Oklahoma 73152-3006 (405) 528-3011 • FAX (405) 528-6338 1-800-654-8210

Web Site: www.carlislefsp.com #104803750



CARE AND USE INSTRUCTIONS



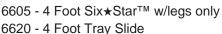



6621 - 6 Foot Tray Slide

Sneeze Guard

- 1. Wash with mild soap and water, rinse, and pat dry with a soft cloth or paper towel.
- 2. To prevent the possibility of scratching or discoloration, NEVER:
 - Wipe with a harsh cloth
 - Use cleaners containing ammonia
 - Use solvents such as acetone, alcohol, carbon tetracholoride, etc.
 - Use combination cleaner and wax or spray wax.
- 3. To maintain luster, use a paste wax.

Basin and Legs

- Fill the food bar with chipped, cubed or cracked ice. A 4-foot Six-Star[™] Food Bar will hold approximately 35 to 40 pounds of ice cubes and a 6-foot Six-Star[™] Food Bar will hold approximately 45 to 55 pounds of ice cubes.
- 2. Top Notch® Food Pans can be used in the Food Bar. The 4-foot Food Bar will hold three 12" x 20" pans up to 4" deep; the 6-foot Food Bar will hold five 12" x 20" pans up to 6" deep.
- For an iceless system, use our Coldmaster[®] Food Pans in the 6 foot Six-Star[™] Food Bars.
- 4. Use a vinyl treatment such as "Armor All" to maintain the appearance of your food bar.
- 5. DO NOT:
 - Use abrasives to clean unit.
 - Place food pans that have been heated over flame, electrical burner or oven, directly into Food Bar.
 - Pour hot food into the Food Bar.
 - Store Food Bar on hot surfaces.
 - Place Food Bar over flame or electrical calrods.
- 6. Not intended for use in direct sunlight.

P.O. Box 53006 Oklahoma City, Oklahoma 73152-3006 (405) 528-3011 • FAX (405) 528-6338 1-800-654-8210

Web Site: www.carlislefsp.com #104803750

