



KA2122

KleanAir 2000 Ultra

Airborne Contaminant Purifier

OPERATIONS AND MAINTENANCE



© Copyright 2016 by BioKlean Corporation

All rights reserved printed in the United States of America. No part of this manual may be used or reproduced in any form or by any means, stored in data base or retrieval system, without prior written permission from BioKlean.

Making copies of this manual for any purpose other than your own personal use is a violation of the United States copyright laws.

September 1, 2020 issue 1.0

Specifications subject to changes without notice!

If you have any questions, please contact us:

BIOKLEAN
700 Schell Lane
Phoenixville, PA 19460
USA
www.biokleanair.com
Toll Free 866 563-7800
Telephone: +1 610 363-7800
Fax +1 610 935-1945
Email: Sales@biokleanair.com

OPERATION AND MAINTENANCE MANUAL FOR

KA2122

NOTICE

FOR PROFESSIONAL USE ONLY



WARNING



IMPORTANT SAFETY INFORMATION ENCLOSED.

READ AND UNDERSTAND THIS MANUAL BEFORE OPERATING THIS PRODUCT.

IT IS YOUR RESPONSIBILITY TO MAKE THIS SAFETY INFORMATION AVAILABLE TO OTHERS THAT WILL OPERATE THIS PRODUCT.



FAILURE TO OBSERVE THE FOLLOWING WARNING COULD RESULT IN INJURY.

PLACING MACHINE IN SERVICE

- Always install, operate, inspect and maintain this product in accordance with all applicable standards and regulations (local, state, country, federal, etc.).
- Always use proper gauge cord with correct connections.
- Be sure all cords are securely connected to the recessed male plug.
- Ensure an accessible emergency shutoff when your machine is connected to power. Make others aware of its location.
- Do not use damaged, frayed, or deteriorated electrical cords or connections.
- Do not leave machines in operation unattended for any reason.
- Keep all electrical connections clear of water or other liquid hazards.
- Always turn off and unplug your machine before performing any maintenance.
- Do not operate the machine while flammable or volatile liquids such as gasoline, diesel or jet fuel are present. Failure to do so can result in explosion.
- Keep work area clean, uncluttered and illuminated.
- Do not remove any labels. Replace any damaged labels.

USING THE MACHINE

- Always wear protection when operating or performing maintenance.
- Always use Personal Protective Equipment appropriate to the work being performed. This may include dust mask or other breathing apparatus, safety glasses, ear plugs, gloves, apron, safety shoes, hard hat and other equipment.
- If applicable, prevent exposure and breathing of harmful dust and particles:
 - Some dust created by power sanding, sawing, and grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:
 - Lead from lead based paints,
 - Crystalline silica from bricks and cement and other masonry products, and
 - Arsenic and chromium from chemically treated lumber
 - Your risk from these exposures varies, depending on how often you do this type of work.
- Keep others a safe distance from your work area, or ensure they use appropriate Personal Protective Equipment.
- This machine is not designed for working in explosive environments, including those caused by fumes and dust, or near flammable materials.
- Keep hands, loose clothing, long hair and jewelry away from the machines blower assembly and "Air Intake."
- To avoid accidental starting – ensure machine is on the "off" position before connecting to power.
- Do not carry or drag the machine by the cord.
- Do not operate or maintain the machine under the influence of medication, drugs, or alcohol.
- Never use damaged or malfunctioning machines.
- Do not modify the machine, safety devices, or accessories.
- Do not use this machine for purpose other than those recommended.
- Only use accessories recommended by BioKlean to ensure not voiding warranty.
- Whenever applicable, wear safety shoes, hard hat, safety goggles, gloves, dust mask and any other appropriate protective clothing in the work area.
- Do no indulge in horseplay. Distraction can cause accidents.
- Use only proper cleaning solvents to clean parts. Use only cleaning solvents which meet current safety and health standards. Use cleaning solvents in a well ventilated area.
- Do NOT clean machine or any parts with diesel fuel or any other petroleum distillates.
- Do not operate the machine with broken or damaged parts.
- This tool is not designed for working in explosive atmospheres.



TABLE OF CONTENTS

SECTION I

Introduction	2
--------------------	---

SECTION II

General Description	2
---------------------------	---

SECTION III

Routine Maintenance	2
Control Descriptions	3

SECTION IV

Prior To Use	4
Operation	4

SECTION V

Replacement Of Filters	5
------------------------------	---

SECTION VI

Wiring Diagram	6
----------------------	---

SECTION VII

Parts Breakdown	7
20.1 Diagram Of Unit And Control Panel	7

SECTION VIII

Safety	8
Troubleshooting	8
BioKlean Limited Warranty	9

SECTION I

INTRODUCTION

This operation and maintenance manual is furnished with each **KleanAir 2000**. It outlines the general use and maintenance requirements for efficient and safe operation.

READ ALL INSTRUCTIONS AND DATA IN THIS OPERATION AND MAINTENANCE MANUAL PRIOR TO OPERATION OF THIS EQUIPMENT.

These instructions are for your protection and convenience. Please read them carefully. Failure to follow these precautions could result in injury, death or damages. Whenever using electric powered equipment, basic safety precautions should be followed.

If after reading this manual you still have questions, contact a **BIOKLEAN** authorized distributor or **BIOKLEAN** directly by dialing 1-866-563-7800.

SECTION II

GENERAL DESCRIPTION

The **KleanAir 2000** is a portable, electrically powered Air Filtration machine, designed and manufactured by Novatek Corp. The machines function is to filter air and remove suspended airborne particulates.

This unit has a three stage filtering system. The two-ply ring filter stage captures the bulk of the dust and debris. The second stage utilizes a pleated carbon filter that captures any dust and dirt able to penetrate the two-ply ring filter. The final stage is the 99.99% - 0.3.

The **KleanAir 2000** requires a 110/115V - 15 Amp, single phase power source.

WARNING

Do not use circuits exceeding specified voltage. Higher voltage will damage controls and could cause shock or fire hazard.

SECTION III

ROUTINE MAINTENANCE

Inspect the unit for any loose or damaged parts prior to use.

CAUTION: Be sure power supply is in the OFF position prior to inspection!

- A. Clean the surfaces of the unit to remove accumulated dust or dirt. Do not use petroleum distillates, solvents, or thinners as cleaning agents. Remove any accumulated dust and dirt from control panel.
- B. Periodic checks should be made of the filter brackets to ensure thumbscrews and knobs are secure.
- C. Filters should be checked daily and replaced if needed. This will help ensure proper air flow and extend motor life.
- D. Inspect ALL power connection. Be sure that the recessed plug is secure to the panel. If recessed plug is not secured, electrical shock or shortage may occur.
- E. Inspect your power cords connections for breaks, scorched areas, melting, oxidation, or signs of wear. If cord shows ANY of these signs, replace.

CAUTION: Do not tamper with or modify the blower housing, control panel, drive motor, or wiring scheme. Tampering or modifications could result in premature wear or failure and will void factory warranty.

CONTROL DESCRIPTIONS

Power Switch

Switch used to turn on your KleanAir. Select either high or low settings depending on the desired volume of air to be filtered.

Circuit Breaker

This is attached to the units main power supply to assist in protecting the blower motor from power surges. The circuit breaker also helps protect the operator against electrical shock or hazards.

Differential Pressure Gauge

This is used to determine filter efficiency. The DPG measures negative pressure on the clean side of the filters. As the Filters load with dust and debris, the negative pressure will increase and move the needle of the DPG. A new filter will register 1.0-1.5" of water column. A fully loaded filter will register approximately 2.0-3.5" of water column.

Barbed Fitting

Inlet used to measure pressure of surrounding ambient air.

Power Cord

Firmly insert the female end of power cord into dedicated outlet to power the machine.

CAUTION: A loose, corroded, ill fitted or damaged cord can cause pre-mature failure and void your warranty.

CAUTION: BioKlean does not supply an extension cord. The extension cord is the user's responsibility. Do not use a used, damaged or corroded extension cord. All extension cord with damages must be replaced immediately. The extension cord must meet your country standards. Novatek recommends using a cord of a maximum length of 25 foot and of 12AWG gauge. Do not exceed more than a 50 foot length from machine.

AWG	Diameter (mm)	Nb spires/cm	Section (mm ²)	Copper Resistance (Ω/km)
12	2.05	4.87	3.31	5.21

Audible Alarm


Audibly alerts the operator when filters are loaded or when air flow is greatly decreased. The alarm will sound once the pressure gauge reaches 3.0-3.4" of water column.

Visual Light

Visually alerts the operator when filters are loaded or when air flow is greatly decreased. The alarm will light once the pressure gauge reaches 3.0-3.4" of water column.

Hour Meter

Visually shows the number of hours the machine has operated since the prior reset.

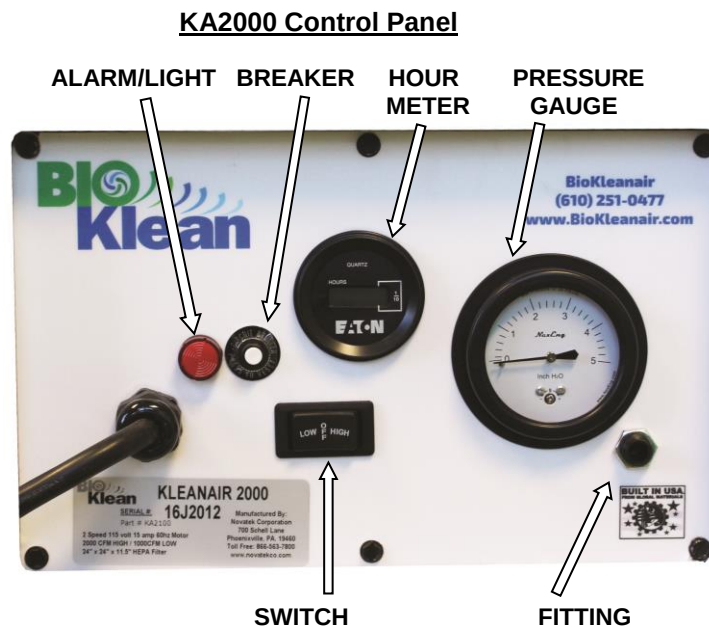

SECTION IV

PRIOR TO USE

- Remove any excess dust/dirt from exterior housing and control panel.
- Be sure the HEPA Filter and Pre-Filters are installed properly with a positive seal.
- Insure the unit is connected to a dedicated 20Amp, 110/115 volt circuit.
- Make sure unit is safely positioned as not to impede any entrances or exits of the work area.
- If applicable, check exhaust port connections for tight seal.

CAUTION: Insure your power cord is securely attached to the male recessed plug. If any movement or play is detected, change power cord immediately! If connection remains loose, immediately replace the male recessed plug.

OPERATION

- When utilized in containment, the KleanAir should be positioned a minimum distance away from the entrance and located towards the center of the containment.
- When using a HEPA filter, insure the filter is correctly installed and sealed. Anchor and secure the filter utilizing the supplied retaining brackets.
- Install the Ring Filter and Pleated Carbon Filter into unit.
- Position the unit on a flat level surface and secure the casters using the lock feature.
- Insert the female end of your 12/3, UL listed cord, into the male recessed plug on control panel.

- F. To begin operation, depress the power switch to either the low or high position. Locate the differential pressure gauge located on the control panel. The gauge will register between 1.0" - 2.5" of water column. This is the initial reading when filters are new and unused. This reading will incrementally increase as filters become loaded with dust and debris. When the gauge reaches 3.0" - 3.4" of water column; either one or all of the filters are loaded and in need of replacement.
- G. Pressing the power switch to the left will operate the unit in "Low" mode equivalent to 1200 CFM.
- H. Pressing the power switch to the right will operate the unit in "High" mode equivalent to 2100 CFM.

SECTION V

REPLACEMENT OF FILTERS

The work atmosphere will impact the frequency of filter replacements. As filters begin to load, the reading of the pressure gauge will increase incrementally. When the Pressure gauge reads 3.0" - 3.4" or when airflow is greatly reduced, check the condition of filters.

CAUTION: If applicable, wear personal protective equipment during filter replacement. Please observe all Federal, State, and Local regulations regarding the handling and disposal of hazardous materials.

TWO-PLY RING FILTER REPLACEMENT

- A. Set the power switch (diagram #20.1, item #3) to the off position. Disconnect power supply.
- B. Remove Black Filter Door (diagram #20.1, item #10) to expose the filters.
- C. Reach in and remove the Two-Ply Ring Filter (diagram #20.1, item #18). Dispose of Two-Ply Ring Filter accordingly.
- D. Replace the discarded Two-Ply Ring Filter with a new Two-Ply Ring Filter.
- E. Reinsert the Black Filter Door.
- F. Insert the female end of your power cord into the Male recessed plug (diagram #20.1, item #1), and set the power switch to the "High" position. If the reading on the pressure gauge exceeds 3.0" - 3.4" of water column, the Ring Filter (diagram# 20.1, item #17) should be inspected.

PLEATED CARBON FILTER REPLACEMENT

- A. Follow steps **A-D** listed above referencing Pre-Filter replacement.
- B. Reach in and remove the Pleated Carbon Filter (diagram# 20.1, item #17). Dispose of Pleated Carbon Filter accordingly.
- C. Replace the discarded filter with a new unused Pleated Carbon Filter.
- D. Reinstall the Pleated Carbon Filter.
- E. Reinsert the Black Filter Door.
- F. Insert the female end of your power cord into the male recessed plug (diagram #20.1, item #1), and set the power switch to the "High" position. If the reading on the pressure gauge exceeds 3.0-3.4" of water column, the HEPA should be inspected.


HEPA FILTER

- A. Follow steps **A-D** listed above for Ring Filter replacement.
- B. Locate the bracket thumbscrews (diagram #20.1, item #12). Loosen the four bracket thumbscrews by turning them counter clockwise.
- C. With all four thumbscrews loose, push the top of the filter brackets (diagram #20.1, item #11) inward towards each other, and remove from the front of the unit.
- D. Firmly grasp the right and left sides of the HEPA Filter (diagram #20.1, item #16), and pull the filter directly towards you. Remove the used filter and dispose of accordingly
- E. Carefully inspect the replacement HEPA Filter gaskets for cracks, gaps or defects. Any defective gaskets must be replaced.
- F. The HEPA Filter have two sides; one side has a gasket, the other does not. Insert replacement HEPA Filter, gasket side first, into machine and press firmly against the housing's internal rib.
- G. Reinstall the filter brackets. Once the brackets are installed, turn the thumbscrews clockwise until tight. This will secure the main filter.
- H. Reinstall Two-Ply Ring Filter and Pleated Carbon Filter. (Reference Two-Ply Ring Filter and Pleated Carbon Filter Replacement).
- I. Reinsert the Black Filter Door.



SECTION VI

WIRING DIAGRAM

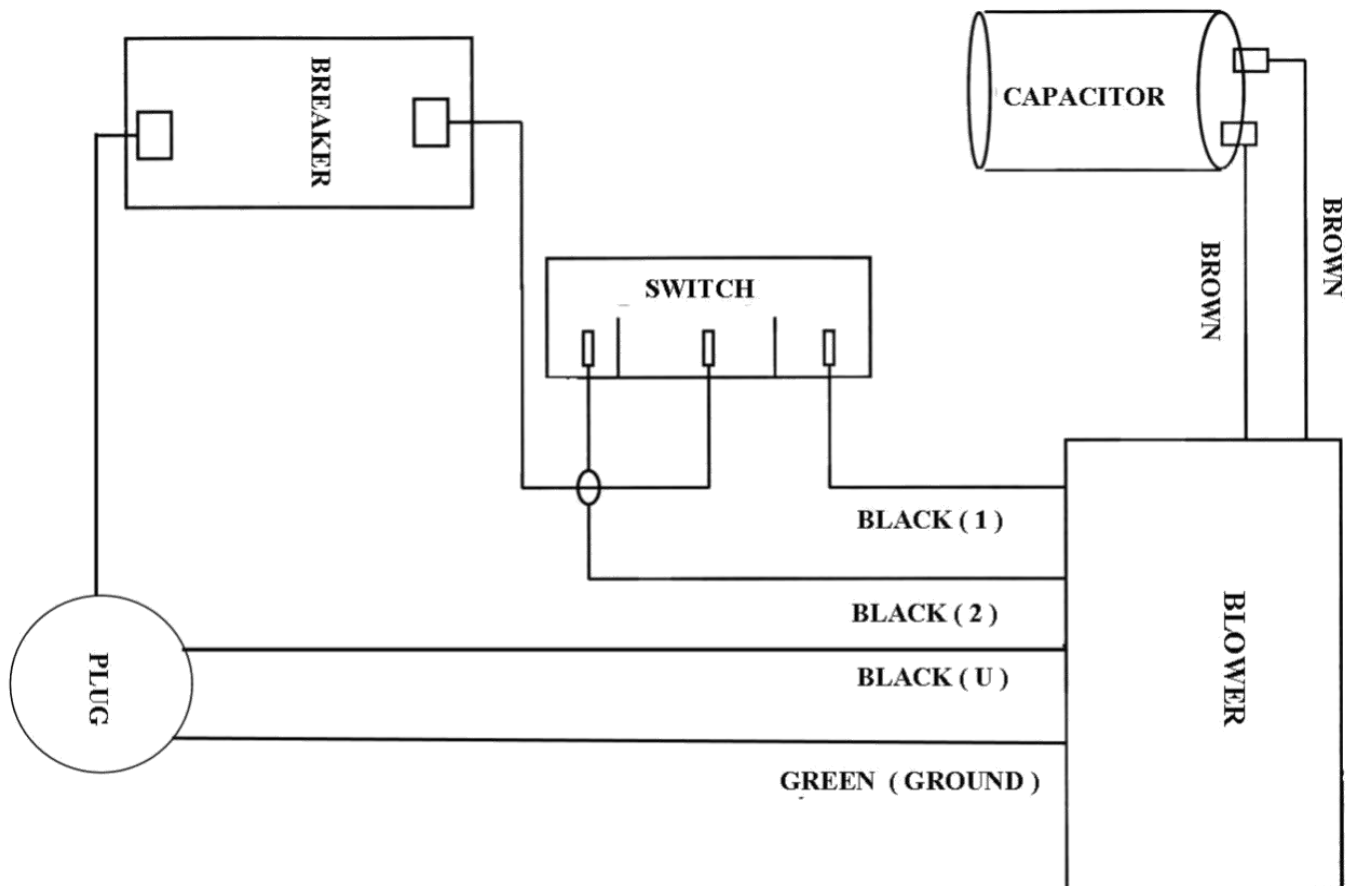



SECTION VII


PARTS BREAKDOWN

<u>Ref.</u>	<u>Part No.</u>	<u>Description</u>
1	KA2034	POWER CORD
2	KA2055	BREAKER
3	KA2050	POWER SWITCH
4	KA3000	PRESSURE GAUGE
5	KA9001	BARBED PRESSURE FITTING
5A	KA2525	DOME WIRE NUT
6	KA2011	BLOWER HOUSING & WHEEL
7	KA2020	BLOWER MOTOR
8	KA2025	CAPACITOR
9	KA2010	BLOWER ASSEMBLY COMPLETE
10	KA2009	BLACK POLY BLANK DOOR
11	KA2009E	HEPA FILTER FRAME (2PC)
12	KA3020	SPRING CLAMPS - DOOR
13	KA3004	WHEELS-RIGID
14	KA3003	WHEELS-SWIVEL
16	KA4014	HEPA FILTER-MP
17	KA4017	PLEATED PRE- FILTER
17A	KA4017	PLEATED CARBON FUSION FILTER

<u>Ref.</u>	<u>Part No.</u>	<u>Description</u>
18	KA4015	2Ply-Ring Filter (24PK)
19	KA2036	AUDIBLE/VISUAL ALARM
	KA2008	POLY HOUSING

ITEMS NOT SHOWN

KA2012	12" INTAKE BLACK POLY DOOR
KA4008	FOAM SEALING STRIPS
KA3050	DIFFERENTIAL PRESSURE SWITCH

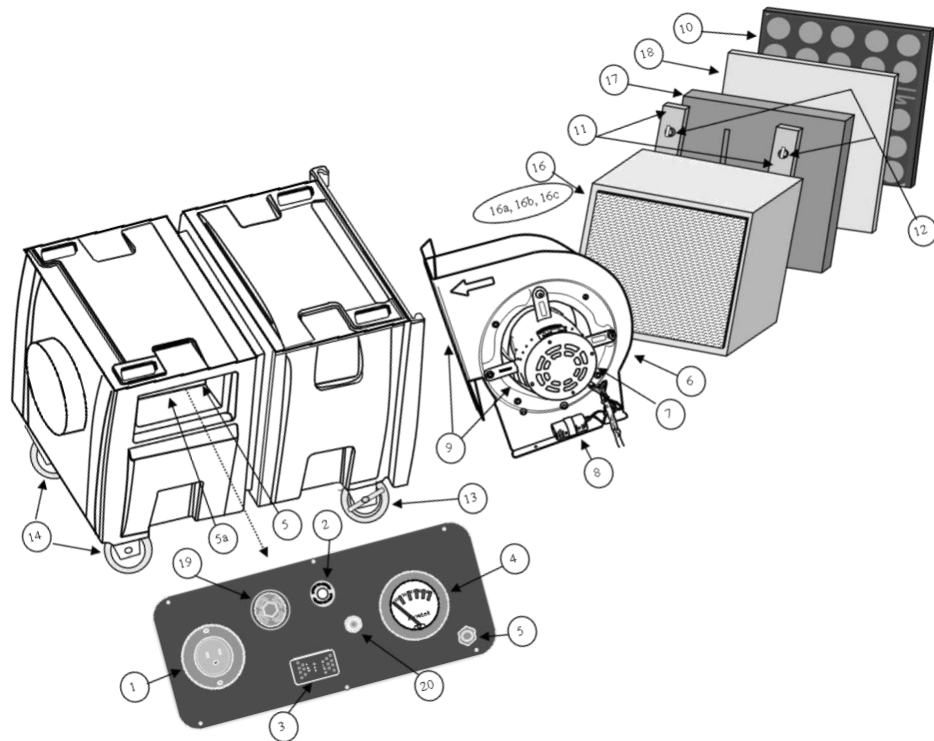

20.1 DIAGRAM OF UNIT AND CONTROL PANEL

SECTION VIII

SAFETY

BioKlean Airborne Containment Purifiers are highly efficient systems designed to reduce air borne particulates. To insure proper operation, the following safety precautions should be strictly adhered to:

- A. Do not leave machine unattended while in operation. Turn OFF electric supply and disconnect from power source when not in use and/or before servicing.
- B. Do not operate with damaged or malfunctioning parts. If the unit is not working as intended, return to an Authorized Repair and Service Center.

NOTE: Always replace worn or damaged components with genuine BOKLEAN parts. Failure to comply could result in equipment failure and will void warranty.

- C. Remove any loose clothing and adornments prior to operation.
- D. Keep outer surfaces free of dirt and debris. Be sure all controls clean and functioning properly.
- E. Turn off power prior to any filter inspection and replacement.
- F. Do not operate unit with flammable or combustible liquids or gases present.
- G. Do not operate the machine in wet conditions. Failure to do so could result in electrical shock or death.
- H. Never operate the unit if there is any possibility of contact with the blower wheel.
- I. It is the responsibility of the unit owner to ensure that all equipment is maintained in safe and efficient operating condition.
- J. Stacking of machines is limited to three units. Do not house stacked machines in areas hotter than 100 degrees Fahrenheit. **(Failure to comply will void warranty.)**

TROUBLESHOOTING

- A. **The unit is plugged in and turned on, but will not operate.**
Inspect the circuit breaker located on the front control panel. If the center of the circuit breaker is extended, this indicates the circuit breaker requires re-setting. Reset the circuit breaker by depressing the center of the circuit breaker. If the center fails to remain depressed, replace the circuit breaker immediately
- B. **If unit continues not to function.**
Check the power supply in the work area. Be sure power is being supplied to the unit.
- C. **If at this point, unit still will not operate**
Contact your nearest authorized BioKlean service center.



BIOKLEAN LIMITED WARRANTY

ELECTRICAL COMPONENTS utilized in the **KLEANAIR** product line are warranted to be free from defects in material and workmanship for a period of **180 DAYS** from date of purchase from **BIOKLEAN**. The remaining materials in the **BIOKLEAN** are warranted to be free from defects in material and workmanship for a period of **1 YEAR from the date of purchase from BIOKLEAN**. This warranty does not extend to accessories.

This warranty applies only to **UNITS** purchased from **BIOKLEAN** or **authorized retailers**. This warranty does not apply to any **UNIT** which has been abused, misused, modified or repaired by someone other than **BIOKLEAN** or its authorized repair center.

If a **UNIT** proves defective in materials or workmanship within one year of purchase, it should be returned to **BIOKLEAN** via pre-paid transportation. The return must be accompanied by a **RETURN MERCHANDISE AUTHORIZATION NUMBER (R.M.A. #)** obtained from **BIOKLEAN**. The Return authorization number must be clearly marked on the outside of the package being returned. Any returned merchandise that does not have a return merchandise authorization number clearly marked on the outside of the package will be refused and returned to sender.

Warranty claims will only be considered upon proof of purchase date. **BIOKLEAN** will, at its discretion, **REPAIR or REPLACE DEFECTIVE PARTS**. Repairs or replacements parts are warranted as above for the remainder of the original warranty period. The sole liability of **BIOKLEAN** and the user's exclusive remedy under this warranty is limited to the repair or replacement of the defective product.

THERE ARE NO OTHER WARRANTIES EXPRESSED OR IMPLIED AND **BIOKLEAN** SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OR ANY OTHER EXPENSES OR REPAIR OR REPLACEMENT AS DESCRIBED ABOVE.

All warranty claims should be forwarded to:

BIOKLEAN
700 Schell Lane
Phoenixville, PA 19460

ATTENTION: CLAIM AND SERVICE DEPARTMENT
R.M.A. # _____

CALL Toll Free at 1-866-563-7800 for your RMA number PRIOR TO SHIPPING.

Also include a brief description of the problem as well as a phone number, contact name and return address in case **BIOKLEAN** service personnel has to get in contact with you.

