

ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

Instruction Manual

Value Lift Stacker

Part Number: 272940 & 272941



Note: Operator MUST read and understand these operating instructions before using this Lift.

Table of Contents

1	General Information	2
	1.1 Description	2
	1.2 Specifications	2
2	Section Identification	
3	Operation	
4	Maintenance	
5	Assembly	3
6	Safety Information	5
7	Models Manufactured Before 6/2013 Part Information	
	7.1 Part Diagram	6
	7.2 Part List	7
8	Models Manufactured After 6/2013 Part Information	9
	8.1 Part Diagram	9
	8.2 Part List	



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

1. GENERAL INFORMATION

NOTE: All of the information reported herein is based on data available at the moment of printing. We reserve the right to modify our own products at any moment without notice and liability in any sanctions. So, it is suggested to always verify possible updates and changes.

1.1 DESCRIPTION

Thank you for purchasing a Wesco Value Lift. This unit features a foot operated hydraulic pump, chrome plated rails and handle, adjustable forks and two 5" polyurethane swivel casters with brakes.

1.2 SPECIFICATIONS

Part Number	272940	272941	
Model #	VL47	VL59	
Capacity	880 lbs	880 lbs	
Platform or Fork W x L	Fork 4.25" x 25.5"	Fork 4.25" x 25.5"	
Lift Height	3.5 "- 47"	3.5" – 59"	
Lowered Height	3.5"	3.5"	
Adjustable Fork Width	8.5" – 19.5"	8.5" – 19.5"	
Swivel Casters	5" Locking Polyurethane	5" Locking Polyurethane	
Load Wheels	3" Rigid Polyurethane	3" Rigid Polyurethane	
Load Center	12.75"	12.75"	
Weight	178 lbs	187 lbs	

2. SECTION IDENTIFICATION

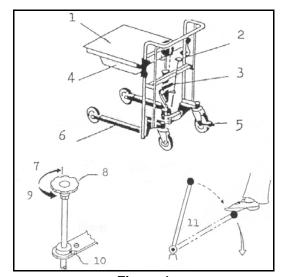


Figure 1

1. Platform/Forks

- 2. Lowering Valve
- 3. Foot Pedal (Pumping Pedal)

- 4. Drawer (Low Profile without Drawer) 5. Brake

6. Chassis

7. Lift

- 8. Lowering Valve
- 9. Lower

10. Stopper

11. Foot Pedal (Pumping Pedal)



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

3. OPERATION

1) Raising the platform/forks

Tighten the lowering valve (by turning it clockwise), put down the foot pedal and pump. The platform/forks will proceed to lift.

2) Lowering the platform/forks

Loosen the lowering valve (by turning it counter-clockwise), and then the platform/forks will lower.

3) Adjusting the lowering speed


To avoid abrupt lowering of the platform/forks when loading goods, the truck is provided with a stopper. When the lowering speed is too quick or too slow, adjust the position of this stopper.

4. MAINTENANCE

- 1) Daily Care
 - If the load chain is corroded, it becomes weak and unreliable, so always lubricate it by applying grease.
 - Unless oil leaks from the pump. It is not necessary to supply oil for about half a year to one year.
 - Usually, when changing oil or replenishing oil, use L-HL68 Hydraulic oil (equivalent to ISO VG68). If temperature is between -5° F 23° F, Please use L-HL46 Hydraulic oil (equivalent to ISO VG68).
- 2) Periodic Inspection
 - Inspect the chain fixing nut for any looseness and proceed to tighten.
 - Check to make sure the rotating parts are well lubricated.
 - Inspect the wheels for possible wear.
 - Inspect the screw in each part for looseness and tighten where necessary.

5. ASSEMBLY

1) Take the assemblies from the cardboard box and disassemble them in the order of (a), (b), (c), and (d) as follows:

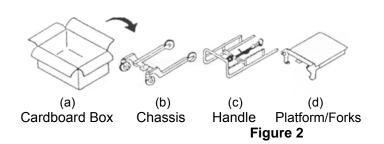

Bolts & Nuts


Then lay the handle on the floor as shown in Figure 2.



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

5. ASSEMBLY

2) Put the platform/forks into the handle. Note: Insert it between the two rollers of the platform/forks.

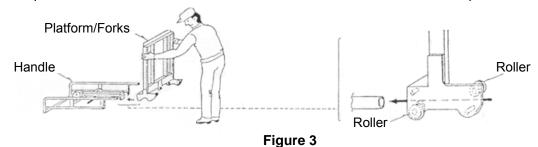

3) Attach the Chain, secure by tightening nut.



Figure 4

4) Invert the unit after attaching the chain, as shown in Figure 5.

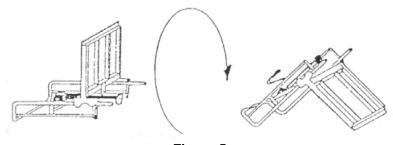


Figure 5

5) Attach chassis to platform/forks using (4) bolts. Align the pin of the chassis with the hole in the base of the pump.

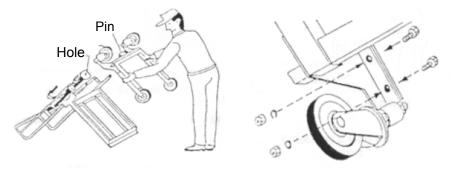


Figure 6



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

5. ASSEMBLY (CONTINUED)

6) Set assembled unit right side up and check points for tightness.

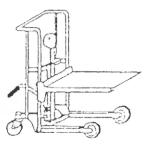


Figure 7

6. SAFETY INFORMATION


- Always perform a pre-operation inspection and perform a function test prior to use.
- Do not use to lift personnel.
- Do not overload the value lifter beyond the rated capacity.
- Do not operate on sloped or rough surfaces.
- Do not move the machine with a raised load, except for minor positioning.
- Do not lift if the load is not properly centered on the forks.
- Do not stand under or allow personnel under the machine when the load is raised.
- Keep hands and fingers away from pulleys, the carriage and other potential pinch points.
- Never leave a machine unattended with a raised load.
- Do not use a machine with less than 4 wraps of cable on the winch drum when the carriage is fully lowered. If you see the red mark on the cable, at least 4 wraps are on the winch drum.
- Do not release grasp on the winch handle until the brake is locked.



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

7. MODELS MANUFACTURED BEFORE 6/2013 PART INFORMATION

7.1 PART DRAWING

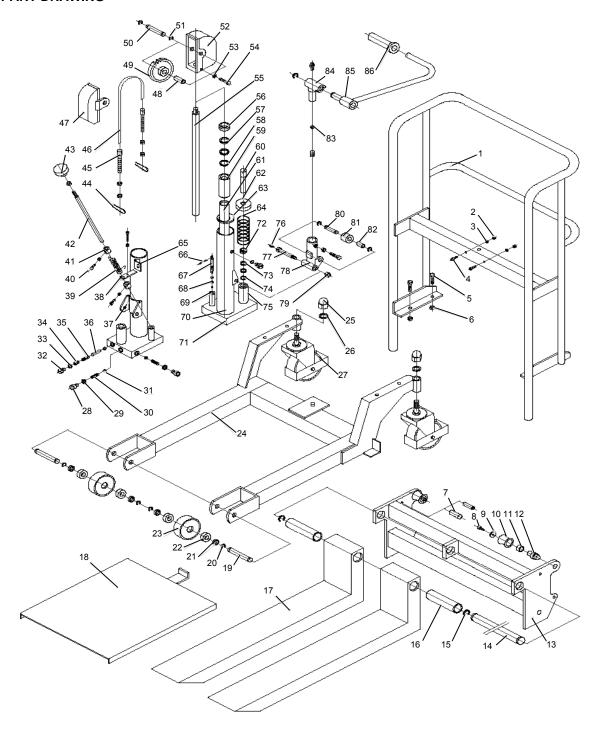



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

7. MODELS MANUFACTURED BEFORE 6/2013 PART INFORMATION CONTINUED)

7.2 PART LIST

Kit	Replacement Part/ Kit Number		Kit Components	Qty.
Mit		Item	Item Description	Qty.
		56	Dust Proof Ring	1
	172355:	57	O-Ring	2
Α		58	Nylon Ring	1
	Seal Kit	72	Dust Proof Ring	1
		73 74	O-Ring Nylon Ring	1 1
		1	Slideway Handrail	1
	172415:	2	Nut	2
	Liandia Kit	3	Washer	2
	Handle Kit	3 4	Internal Hex Bolt	2
	(*For 272940 Only)	4 5	Hex Bolt	4
		6	Nut	4
В		1	Slideway Handrail	1
	172424:	2	1	2
	Line die 170	3	Nut Washer	
	Handle Kit	3 4		2 2
	(*For 272941 Only)		Internal Hex Bolt	
	(<u> </u>	Hex Bolt	4 4
			Nut	
0	172170:	25	Nut	1
С	Caster Kit	26	Internal Teethed Lock Washer	1
		27	Back Wheel	1
	-	19	Front Wheel Axle	1
_	172168:	20	Split Ring	2
D	Wheel Kit	21	Washer	2
		22	Bearing	2
	4-00-0	23	Front Wheel	1
Е	172356:	85	Foot Step Lever	1
	Foot Pedal Kit	86	Rubber Glove	1
	172358:	48	Oil Free Bearing	1
F	172000.	49	Chain & Wheel	1
•	Chain Wheel Kit	50	CW Axle	1
		51	Split Ring	1
G	172338	47	Chain Cover (Plastic)	1
<u> </u>	Chain Cover Ass'Y	52	Chain Cover (Plastic)	1
	172252	44	Split Pin	2
Н	172353 Chain Kit	45	Chain Bolt	2
	Gridili Kit	46	Roller Chain	1
·		39	Torsion Spring	1
	172416	40	Positioning Bolt	1
J		41	Positioning Ring	1
	Jack Release Kit	42	Single Direction Valve Pole	1
		43	Handle	1

^{*}Note: Kit G Chain Cover Assembly consists of the plastic cover. This assembly can be used to replace the current plastic cover or the iron cover.



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

7. MODELS MANUFACTURED BEFORE 6/2013 PART INFORMATION CONTINUED)

7.2 PART LIST (CONTINUED)

Kit	Replacement Part/ Kit Number	Kit Components		Otv
KIL		Item	Item Description	Qty.
		76	Oil Cup	2
		77	Pump Axle	1
		78	Pump Base	1
	172417	79	Nut	1
K	Foot Pedal	80	Pump Ring Axle	1
	Pump Kit	81	Pump Ring	1
		82	Oil Free Bearing	1
		83	Steel Ball	1
		84	Axle Sleeve	1
	172418	7	Shield Pin	4
		8	Hex Bolt	4
		9	Washer	4
		10	Rolling Wheel	4
		11	Oil Free Bearing	4
L	Carriage Kit	12	Rolling Wheel Axle	4
	-	13	Fixed Rack	1
		14	Long Axle	1
		15	Split Ring	2
		16	Sleeve	2
	172460	66	Cylinder Pin	1
	Inner Valve	67	Valve Core	1
	Assembly	68	O-Ring	2


Item	Part Number	Item Description	Qty.
	172164	Jack	1
	172159	U-Bolt for Welded on Jack	1
	272942	Optional Platform	1
10	172483	Rolling Wheel	1
11	172403	Oil Free Bearing	1
66	172480	Copper Bush Ø18x1	1
67	172481	Circlip for Shaft Ø 10	1
68	172482	Copper Bush Ø 10x1.5	1



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

8. MODELS MANUFACTURED AFTER 6/2013 PART INFORMATION

8.1 PART DRAWING

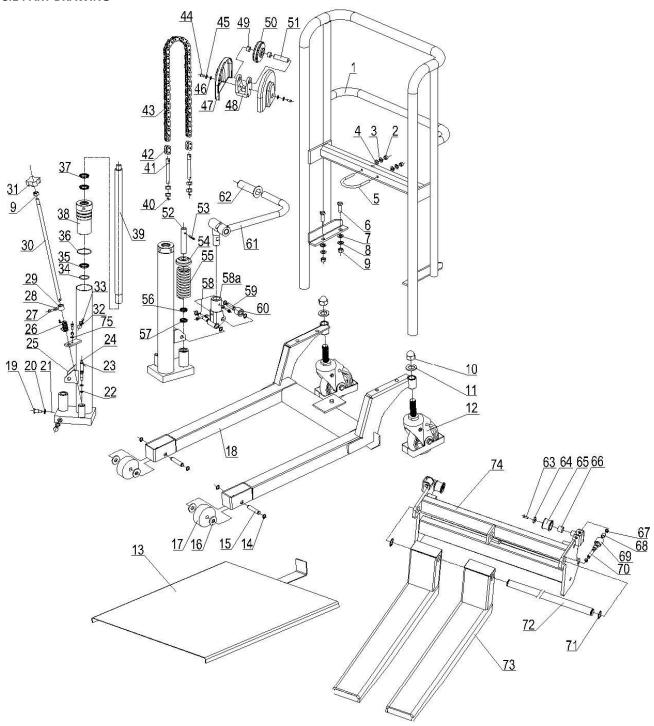



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

8. MODELS MANUFACTURED AFTER 6/2013 PART INFORMATION (CONTINUED)

8.2 PART LIST

Kit	Replacement t Part/ Kit Number	Kit Components		Qty.
Kit		Item	Item Description	Qty.
		22	"O" Ring 7.5x1.8	2
		34	"O" Ring 31.5x3.55	1
	172445	35	UNS Shape Seal 25x33x6	2
Α	0 1 160	36	"O" Ring 50x3.1	1
	Seal Kit	37	Dustproof Ring 25x33x4.5/6	1
		56	Dustproof Ring 18x26x4.5/6	1
		57	UNS Shape Seal 18x26x6	1
		1	Handrail Frame Unit	1
		2	Nut M8	2
	172415:	3	Spring Washer Ø8	2
	1.1 11 - 129	4	Plain Washer Ø8	2
	Handle Kit	5	Cylinder Hoop	1
	(*For 272940 Only)	6	Hex Bolt M10x30	4
	(7	Plain Washer Ø10	4
		8	Spring Washer Ø10	4
_		9	Nut M10	9
В		1	Handrail Frame Unit	1
		2	Nut M8	2
	172424:	3	Spring Washer Ø8	2
		4	Plain Washer Ø8	2
	Handle Kit	5	Cylinder Hoop	1
	(*For 272941 Only)	6	Hex Bolt M10x30	4
	(1012120110111)	7	Plain Washer Ø10	4
		8	Spring Washer Ø10	4
		9	Nut M10	9
	470470	10	Hexagon Cap Nut M20	2
С	172170:	11	Spring Washer Ø20	2
	Caster Kit	12	Rear Swivel Caster (5'-M20)	2
	172168:	14	Split Ring for Shaft Ø12	2
_	172100.	15	Front Axle	1
D	Wheel Kit	16	Front Wheel Sleeve	2
		17	Front Wheel	1
_	172356:	61	Foot Pedal Bar	1
Е	Foot Pedal Kit	62	Pedal Cushion Cover	1
G	172338: Chain Cover	47	Dustproof Cover (Plastic)	2
		40	Split Cotter Ø3	1
Н	172353:	41	Load Chain Connecting Bolt	2
	Chain Kit	42	Load Chain Link	2
	Chain Kit	43	Load Chain 10A	1
			*	



ATTENTION: TO ENSURE SAFE AND EASY USE OF YOUR WESCO VALUE LIFTER, READ THESE INSTRUCTIONS BEFORE USING.

8. MODELS MANUFACTURED AFTER 6/2013 PART INFORMATION (CONTINUED)

8.2 PART LIST (CONTINUED)

Kit	Replacement Part/ Kit Number		Qty.	
Kit		Item	Item Description	Qty.
		9	Nut M10	
		26	Torsional Spring	1
	172464:	27	Socket Head Cap Screw M6x16	4
J	Jack Release Kit	28	Nut M6	4
	Jack Release Kil	29	Fixed Tube	1
		30	Pressure Release Lever	1
		31	Release Knob M10	1
		58	Foot Pedal Base Shaft	1
	170400	58A	Pump Ring	1
K	172463:	59	Foot Pedal Roller Shaft	1
I K	Foot Pedal Pump Kit	60	Roller	1
		61	Foot Pedal Bar	1
		62	Pedal Cushion Cover	1
		63	Hexagon Socket Head Screw M6X16	4
	172418:	64	Spacer	4
L	Carriage Kit	65	Support Roller	4
		66	Copper Bush Φ18X1	4
		44	Socket Plain Cap Screw	2
		45	Spring Washer	2
	172453:	46	Plain Washer	2
М	Chain Cover	48	Movable Pulley Mounting base	1
	Hardware Kit	49	Copper bush Φ15X1	2
		50	Movable Pulley	1
		51	Support Shaft	1

^{*}Note: Kit G Chain Cover Assembly consists of the Plastic Cover, Axle and Chain Wheel Seat. This assembly can be used to replace the current plastic cover or the iron cover. The Axle and Chain Wheel Seat are only necessary when replacing the iron cover.

Non Kit Items

Part #	Item	Item Description	Qty
172446		Complete Replacement Pump (For 272940 Units) Includes Kits E, J & K listed above	1
172447		Complete Replacement Pump (For 272941 Units) Includes Kits E, J & K listed above	1
172159		U-Bolt For Welded on Jack	1
272942		Optional Platform	1
172184	21	Steel Ball	1
172147	23	Elastic Cylindrical Pin Ø3x18	1
172148	24	Release Valve Bar	1
172485	54	Spring Plate	1
172154	73	Fork	2