

NUVEM



www.eurotechseating.com 1-800-637-0005

User Manual

Contents Parts List Product Assembly Instructions Function Controls Features Headrest Height Adjustment Stage Less Memory Position Locking iPhone Speaker Box Armrest Height & Width Adjustment Ottoman Adjustment Instructions Notebook Stand Feature 12 Instructions for Unfolding 13 Instructions for Folding Our Promise...Warranty 19 Care & Maintenance Of Upholstery Leather 20

Nuvem


Parts List


Product Assembly Instructions






OTTOMAN X 1 (ACCESSORY)

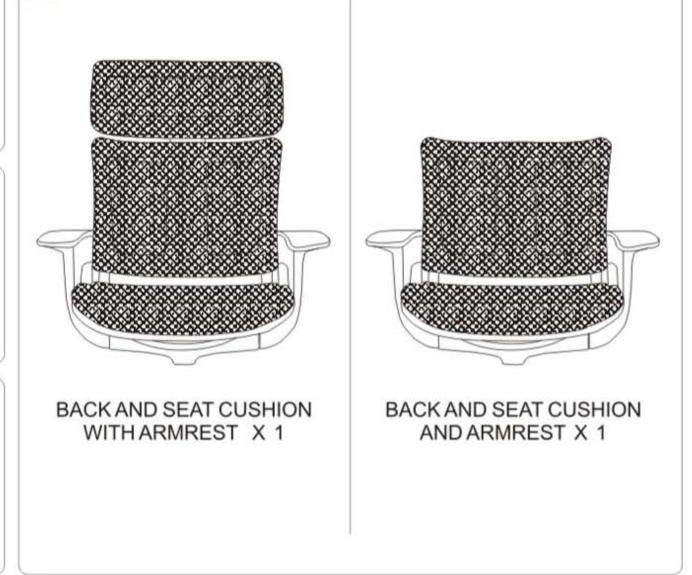

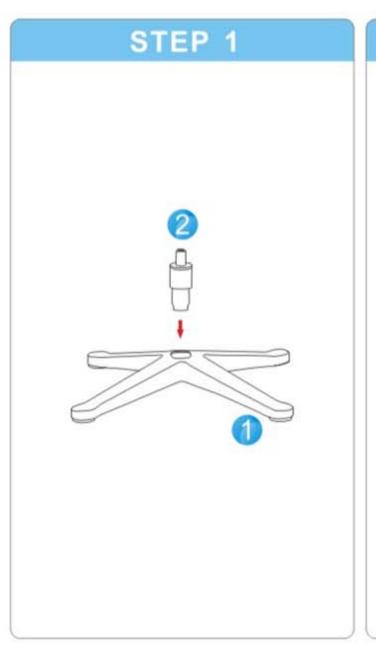

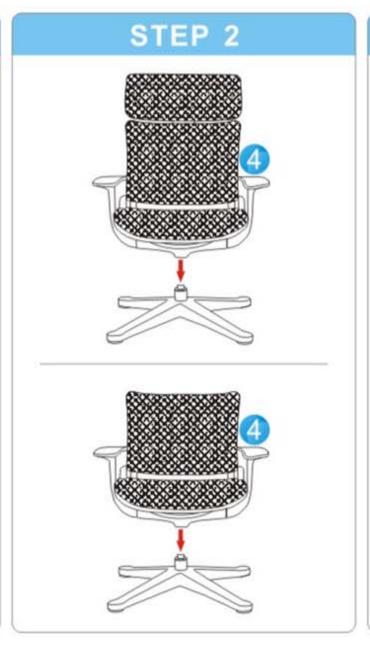



Function Controls







only available for the version with recline function.





Headrest Height Adjustment

Stage Less Memory Position Locking







Hold the frame of headrest with both hands, pull up or down to adjust the height. The adjustable range would be 100mm.



Push the backwards tilting handle with right hand to Unlock position, unlock the backrest tilting when hear the "click" sound; Then recline to the desired position,



push the handle forward to Lock position, the backrest tilt angle can be stopped in the ideal position.



The most suitable height could be achieved when one's scruff is fully supported by the headrest.

(Only available for optional version)



Stage less memory position locking, allow user to sit and adjust the best comfortable reclining position, when user left the chair, the backrest can restore to the original position automatically to keep the uniformity working and home environment.

(Only available for optional version)





Press the music logo of the box to open the box, and have your iPhone / iPad or other music player connected with the speaker cable. Then put your device into box and push box inward to close the box.



Attached with the free electricity Philips stereo surrounding speaker system, this can be suited with iPhone / iPad etc. Music player.

(Accessory)



Pull up the armrests directly to adjust the height, the adjustable height is 45mm. When it goes to the top point, the armrests will fall to the original position automatically.



Hold the arm pads and move inside, the width of amrest can be adjusted. The adjustable range is 40 mm. This feature allow you to adjust personal comfort support while you using Notebook stand on this chair.

(Accessory)

8



(-0)

Ottoman Adjustment Instructions



Pull up the frame of the ottoman directly to adjust the height of ottoman. Its range of height is 50mm. When it goes to the top height, the ottoman will fall down to the original position automatically.

(Accessory)







Press button (A) with your right hand.



Rotate the support board forwards with your left hand until the "click" sound can be heard.



Turn up the support board by rotating it upwards to 90°.



Open the support pole locking system by pushing the buttom (B) as the direction of the arrow.

Nuvem

Instructions for Unfolding

Instructions for Unfolding





Use your right hand hold buttom (B) and turn the support board rightwards with 135°.



Push the support board rightwards and fix it in the most comfortable position.



Pull the computer gears ban out.




Rotate the gears ban upwards and undo it.



Pull upward the gear ban to put the notebook on the support board.



Put the notebook under the computer gears ban, adjust the computer gears ban to tighten the Notebook.

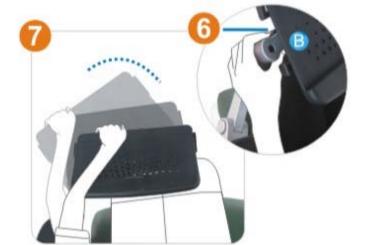


Re-press the locking buttom (B) to adjust the support pole in a suitable angle, it could be adjusted with 45° range and there are three positions locking.



Press button and rotate the support board for adjusting the best position according to different tilt sitting posture.


Adjust the support board's angle when you change the backrest reclining angle.



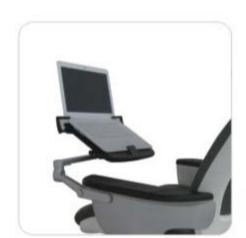

The left picture shows the notebook is placed well on the notebook stand.

And the notebook stand is adjusted to suit personal comfort.

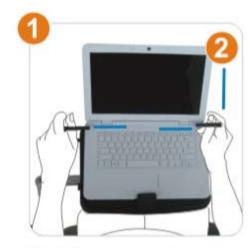

Pull the computer gears ban outwards with both hands, take the notebook out as the arrows shows 16 in the picture.



Press the gears ban towards horizontal direction.



Rotating downwards and withdrawal the computer gears ban.



Press and hold button (), rotate and adjust the angle to the first horizontal position.



Push the support board to the left most position.



Rotate the support board towards left to 180° horizontally.



Press button and rotate the support board downwards to 90°.

Instructions for Folding

Our promise...Warranty





Press button (A) and rotate the support board backwards by 90° with left hand, then the support stand is locked automatically with a "click" sound.







Nuvem may contribute to LEED credits due to its returnable/ reusable packaging, durability, preconsumer recycled content, and post-consumer content. Depending on location, Nuvem also may contribute to a LEED Regional Materials credit.








5-year warranty on internal mechanism

We guarantee the internal mechanism of Nuvem for a period of 5 years from the date of purchase of the product. The 5-year guarantee covers the workmanship of internal aluminum and plastic frame. It does not cover fading of material color, damage to leather or any faults or damage caused by the use of the product other than in accordance with the manufacturer's recommendations, as well as any faults or damage arising from any repairs made by any persons not authorized by the manufacturer. All other accessories only have one year full warranty.



Care & maintenance of Upholstery Leather

The leather on Nuvem is synonymous with luxury, class and culture, this leather is a durable and practical covering. It will not readily burn or melt, unlike most fabric or vinyl, it's extremely difficult to puncture. Unlike imitation leathers, genuine leather will not become hot or sticky in summer, nor cold and clammy in winter. Because it is a natural product, hides may have different patterns and over the years leather will take patina, giving it a distinct look, making each piece of Nuvem a unique item. Being a natural product, it needs little or no care during normal use. However, in the event that you have a spot or spill, the following cleaning hints should help.



Stubborn Spots and Stains: Use a mild solution of ivory soap and clean, lukewarm water. Apply the soap to a clean, wet sponge, then rinse well and let air dry naturally. Always try the cleaning method in a hidden area first to be sure its color will not run or fade with washing or wear.

Never use saddle soap, abrasive cleanser, soap, furniture polish oil, varnish or ammonia water to clean your Nuvem chair. Most liquids will be initially repelled by the leather, but if left to stand over an extended period of time, they will be absorbed. Do not use acids or alkaline cleaning agents. Never use stain remover, shoe polish, solvents, floor polish, cosmetics or any other harsh cleaning agents. Do not use scouring agents, steel wool, pan scrubs or similar products. Using sharp objects, e.g. blades or knives, can damage (scratch) the surface.

Daily care: Avoid cosmetics and body care products touching the leather; Keep your pets away from the leather; Keep at least 30cm away from any source of heat; Do not place the chair in direct sunlight.

Cleaning instruction for the mesh.

Use clean water, mild household or hospital detergents. DO NOT use solvents or petroleum based cleaners.