


BASIC PUMP & SAUCE INFORMATION

- PUMP DOSAGE:** 1 full pump = 1/2 fl oz.
- PUMP OPERATION:** Fully depress pump for 1/2 fl.oz of sauce.
Always push on blue handle.
Do not depress nozzle.

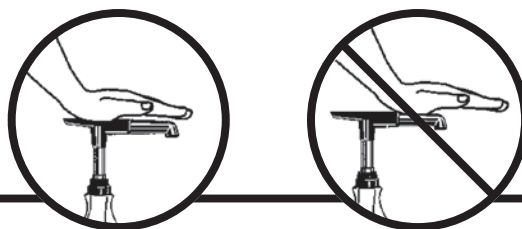

MAINTENANCE:

- Always clean pumps with warm water and a mild dish detergent.
- Make sure plastic dip tube is fully seated into body before using.
- If pump malfunctions, firmly push on the bottom of the sauce bottle to re-seat pump extension.
- Always pump a complete 1/2 oz. Pump will lose performance if partial pumps are dispersed.

TROUBLESHOOTING TIP:

PROBLEM	CAUSE	CORRECTION
Pump sticks or does not pump.	Bottle may be pressing against bottom of pump. Pump may be clogged with old sauce.	Unscrew pump from bottle and allow to rest on bottle. Remove pump from bottle and clean according to the instructions on this sheet.


SAUCE PUMP CLEANING PROCEDURES:

Proper cleaning and maintenance will promote trouble-free operation.

IMPORTANT: ALL PUMP PARTS SHOULD BE DRY BEFORE BEING USED AGAIN.

Pump components can be washed using warm water and a mild detergent. When cleaning, rinse thoroughly with warm water, sanitize, and allow to dry. **NOTE:** Do not clean pump or pump parts in an automatic dishwasher as they could be damaged by high water temperature. The wash water should not exceed 120°F.

Do not use bottle type brushes to clean the pump or pump parts. This may result in damage to the pump.

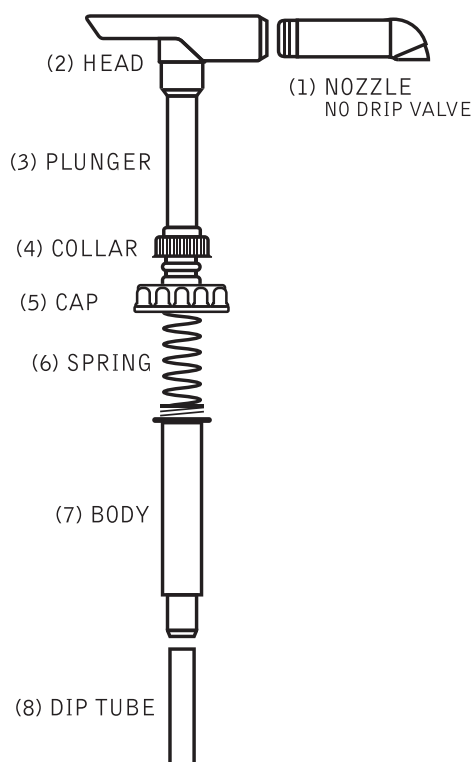

THE FOLLOWING INSTRUCTIONS WILL PROMOTE THE BEST OPERATION OF YOUR SAUCE PUMP:

DISASSEMBLY FOR CLEANING

- Unscrew pump from the sauce container.
- Pull dip tube (8) off from the body (7).
- Separate pump by unscrewing the collar (4) from the body (7). Use caution when unscrewing the collar, the spring will expand and force the collar out.
- Remove the spring (6).
- Separate the nozzle (1) from the head (2).
- Wash, rinse, sanitize, and dry all the pump parts.
- Carefully reassemble the pump.

REASSEMBLING THE SAUCE PUMP AFTER CLEANING

- Insert nozzle (1) into the head (2) until it clicks twice into place.
- Place spring (6) into the body (7).
- Screw collar (4) to the body (7). The spring will try to force the collar out - proceed with caution.
- Slide dip tube (8) into the body (7) until they meet.
- Open sauce bottle and insert pump.

