




MPD-5 PAIL DOLLY ASSEMBLY INSTRUCTIONS

Step 1: Insert the threaded stem of a caster through a hole in the pail holder.

Step 2: Secure the caster connection with a flat washer, followed by a lock washer and a nut. Tighten the nut against the lock washer. Repeat the installation with 2 other casters.

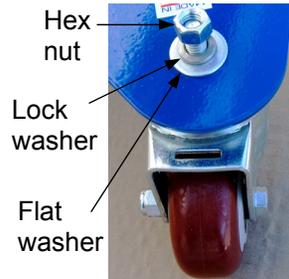

Step 3: Install the remaining caster and strap tab. Install a flat washer before connecting the yellow pull tab, and then install the TAB-BO, if you will use the nylon strap to pull the dolly, or TAB-TH, if you will use an optional rigid hook, followed by another flat washer, a lock washer and a nut. Tighten the nut against the lock washer.



Step 4: Attach the carabiner to the small loop of the nylon strap; then connect the carabiner to the pull tab.



WARNING DO NOT modify the product in ANY manner. Unauthorized modifications automatically void the limited warranty and might make the product



Fully assembled unit (shown with TAB-BO & Nylon Strap)

Bill of materials

Component	Part #	Description	Quantity
	TAB-BO (use with nylon strap)	Strap Bracket	1
	TAB-TH (use with optional rigid hook)	Rigid Hook Bracket	1
		Carabiner	1
		Nylon strap	1
	*FM-HK	*Rigid Hook	*Optional* 1
		3/8 inch flat washer	6
		3/8 inch lock washer	4
		3/8 inch nut	4
	16-132-164	3 inch swivel castor	4