


Mirella Series Desk Top Model No.MRDT7236 & MRDT6636 & MRDT7230 & MRDT6630

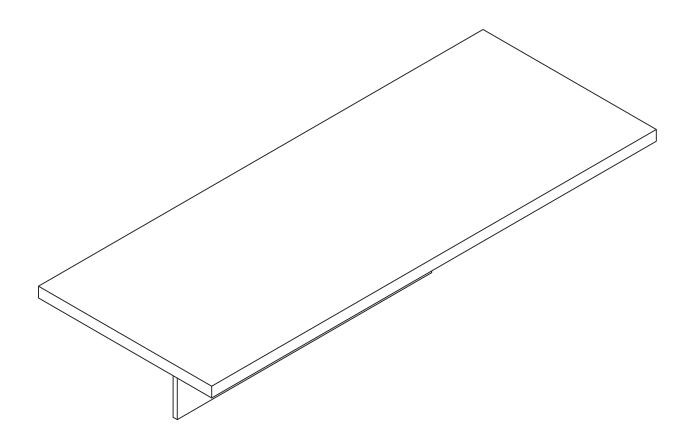

For questions or concerns, please call 1-888-971-6225 available Monday-Friday 7:30 AM to 5:00 PM (Central Time) (English-speaking operators)

990000194: 1 of 5; Rev A; Rev Date: 13-FEB-2019

www.safcoproducts.com

PARTS LIST

Name	Part	Qty.	Spare Qty
А	50*30*2mm	4	
В	60*20*73mm	1	
С	Cam Post	1	
D	HB See Lock	1	
E	Cam Sticker	1	1
F	HB 00000 100*100*38*4mm	4	
G	НВ	32	2

Name	Part	Qty.	Spare Qty
Н	M6*15mm	2	1
I	M6*15mm	16	1
J	HE M6*35mm	4	
K	M6 Nut	4	
L	wrench	1	
	MRDTHB		

Items with HB are in hardware box.

990000194: 2 of 5; Rev A; Rev Date: 13-FEB-2019

PARTS LIST

Name	Part	Qty.
М	Top Panel	1


Name	Part	Qty.
N	Modesty Panel	1

IMPORTANT!


Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. SAFCO and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

990000194: 3 of 5; Rev A; Rev Date: 13-FEB-2019

Use the Screw (G) to attach the Bracket (A) to connect the Pedestal and the Modesty Panel (N);

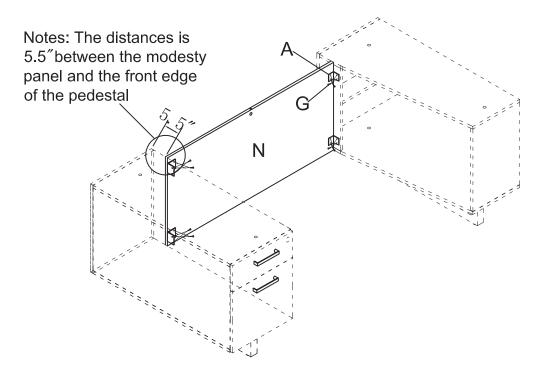


Use the Screw (G) to install the L Bracket (F) to the edge front of the Top Panel (M), Insert the Cam Post (C) to the T Rectangle Support Part (B), Use the Screw (H) to install the T Rectangle Support Part (B) to the middle edge of the Top Panel (M), Use the Screw (I) to install the T Square Support Part to the Top Panel (M), then lock the screw (J) in the T Square Support Part;

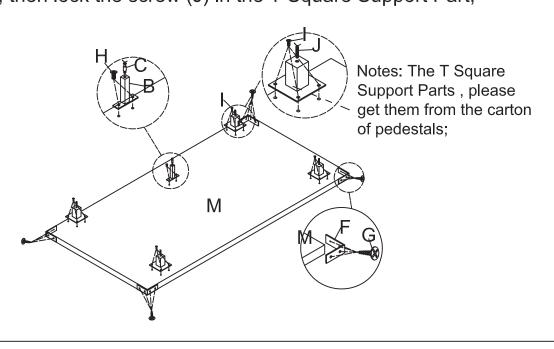

990000194: 4 of 5; Rev A; Rev Date: 13-FEB-2019

Put the Top Panel (M) on the Pedestal, (Make sure the T Square Support Part can be through the cutout on the top of the Pedestal; Use the Wrench (L) to lock the Nut (K); Lock the Cam Lock (D) on the Modesty Panel (N), Attach the Cam Sticker (E) to Cams;

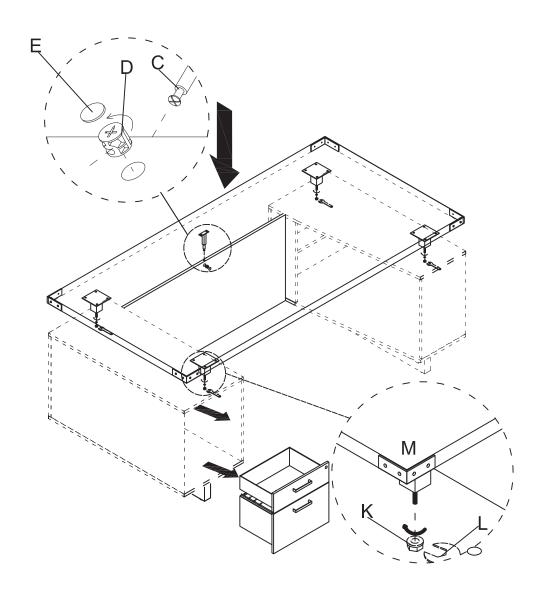

990000194: 5 of 5; Rev A; Rev Date: 13-FEB-2019