

CONTAINER SHELL: ITEM # EZC008

ITFM # FZM006


(i) ITEM # EZH012

EZ-PRO™ C4L (EZP2760)


Your EZ-PRO™ 4-container Carousel has a 6-inch clearance, making it the perfect table-top dispenser for both cereal and topping products. This model is a space-saving stylish solution for your dispensing needs!

SETTING UP YOUR PRODUCT

ITEM # EZL006



- You will have 4 EZ-PRO™ containers each with:
 - a. Stainless steel lid



b. PRO 6-Wing Silicon 1 oz. Portion Wheel


c. PRO-6SM 1 tbsp.

d. EZP007 1 tsp. Scoop-It $^{\text{\tiny TM}}$ with Funnel









- e. Regular Nozzle
- f. Narrow Nozzle



BASE



POLE

Please remove the clear plastic nozzle when using EZP007 or ITEM # EZM004 any of the Scoop ItTM



h. Label Holder

i. Handle

- j. Handle Clip
- k. PRO Fresh Lid



1 Assembled EZ-PRO™ C4L metal base with pole and detachable tray


j ITEM # EZM056

k) ITEM # EZL009

- 2. Make sure you have all parts listed above before discarding packaging.
- 3. Place the metal base on a flat surface.
- 4. Check if the tray and the pole are set securely on the base.
- 5. Check the portion wheels installed and make sure you use the right fit for each product you are dispensing. NOTE: If you need to change any portion wheels, follow steps 2 thru 5 on the disassembly instructions on Page 2.
- 6. Fill an EZ-PRO™ container with desired product and seal with the lid.
- 7. On the back of each container are 2 hooks that fit snugly onto the allotted notches on the pole. Install a container by securing both hooks on the upper and lower notches. Make sure it locks into place.
- 8. If desired, place an identifying label on the label holder.
- 9. Repeat steps 5 thru 7 for the remaining containers.
- 10. Dispense as you please!
- 11. When not in use, fasten the PRO Fresh Lid onto the nozzle.

2 hooks on the back of the EZ-PROTM container latch on to the upper and lower notches on the pole.

NOTE: Included with each container unit is an optional locking system that you can easily install with a small Phillips head screwdriver. (ITEM # EZMO48)

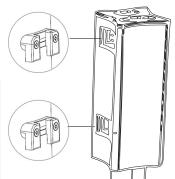




Please contact our customer support at (847)763–1215 and we'll be happy to assist with any assembly questions, comments or concerns.

INTERCHANGEABLE PORTION WHEELS

Your new EZ-SERV® Dispenser comes with 3 easily interchangeable Portion Wheels delivering just the right amount of product every time.

Here are some quick guidelines to explain how the different wheels work:



6W: 1 Oz. 6-Wing Wheel ITEM #: EZP004

The 6W is great for dispensing bulk dry foods like cereals, coffee beans, loose tea; snacks like granola & trail mix and M&M's and most other candies.



If you are looking for precision, the 1 tsp. Scoop-It[™] wheel delivers consistent portions over and over. The patent-pending Scoop-It[™] wheels are ideal for the smallest items like Jimmies/Sprinkles, chopped nuts and M&M's®, mini Hershey's Kisses® as well as Sugar, powdered creamer and seasonings & spices.

Also available are 2 Tsp, 3 Tsp and 5 Tsp Scoop-It™ Wheels!



6SM: 1 Tbsp. PRO6-SM ITEM #: PRO6-SM

The 6SM is perfect for medium sized or non-uniform foods like chopped cookies, pie crust, cookie dough.

*Other wheels available: 2, 3, 4.5 teaspoon portions

CARING FOR YOUR DISPENSER

CLEANING INSTRUCTIONS:

- To maintain the quality of your EZ-PRO™ dispenser, wash all parts daily in warm soapy water. Use a non-abrasive sponge.
- 2. DO NOT put any part of the unit through any dishwasher or dryer machines.
- 3. When disassembling the container, handle all parts gently. Please refrain from using too much force.
- 4. To keep the tray and base polished, use a commercial stainless steel surface cleaner.
- 5. Reassemble the unit only after all parts are completely dry.

HOW TO DISASSEMBLE:

- Remove the container from the stand by holding it securely and lifting directly upward, clearing the hooks from the notches on the stand.
- 2. Remove lid from top of container. Make sure there is no remaining product inside that can spill over.
- 3. Remove handle clip at the back of the container.
- 4. Gently pull the handle from the front of the container. Set aside both handle and label holder.
- 5. Reach into container and remove portion wheel by gently pulling upwards or turning container upside down. Do the same to remove the nozzle.

HOW TO ASSEMBLE:

- 1. Place nozzle into container, followed by the portion wheel.
- 2. Adjust the portion wheel inside the container, so that its holes align with the container's holes (both front and back).
- 3. Position the label holder so that it matches the hole on the front of the container.
- 4. Insert handle through the label holder and front hole. Push the shaft through the portion wheel, all the way to the back of the container.
- 5. Install handle clip to the back end of the shaft. Make sure it locks snugly into place.
- 6. Fill container with desired dry product and place lid securely on the container.
- 7. Follow steps 7 and 8 on Page 1.



Please contact our customer support at (847)763–1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 W. Pratt Avenue. Lincolnwood, IL 60712

Visit our website at: www.rosseto.com